

Slim hood

Instruction for Use & Installation

AKR628 IXS & AKR928 IXS

WHIRLPOOL

INSTALLATION GUIDE

Read all installations before installing this
appliance



IMPORTANT SAFETY NOTICE

WARNING

The installation in this manual is intended for qualified installers, service technicians or persons with similar qualified background. Do not attempt to install this appliance yourself. Injury could result from installing the unit due to lack of appropriate electrical and technical background.

All electrical wiring must be properly installed, insulated and grounded. Overly accumulated grease in old duct work should be cleaned out or duct work should be replaced if necessary to avoid the possibility of a grease fire. Check all joints on duct work to ensure proper connection and all joints should be properly taped.



This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed correctly, you will help prevent negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Installation

The right position of the hood should be 65cm above the level of your electrical hob or 75cm (see picture 3 & 4) if there are gas hobs. The hood should be used either for the odor extraction outwards , or for air filtering and recycling within the same space.

The installation must take place accordingly .The circulation installation is advised when there is no potential of pipe installation outside. Put 40W lamp in the lamp holders. Do not use lamps of power more than 40W as they cause local overheating. In order to avoid possible noise from shocks, we suggest you put a foam rubber tape on the back side, between the absorber plate and the wall or the upper side between the absorber plate and the closet, depending on how you set your hood.

Installation drawings are shown in following pages.

Fig.1

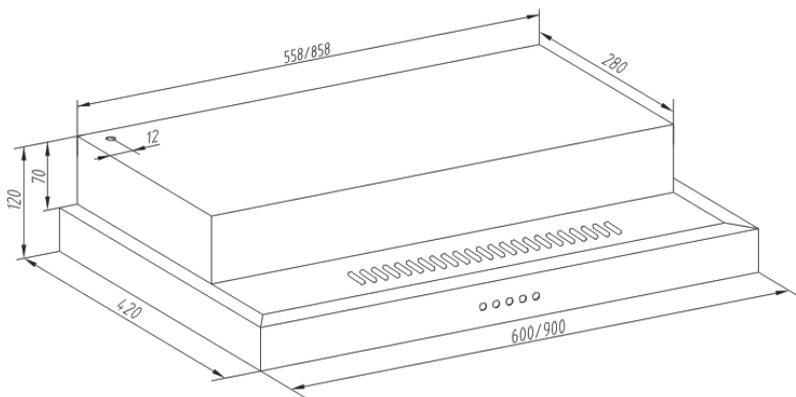


Fig.2

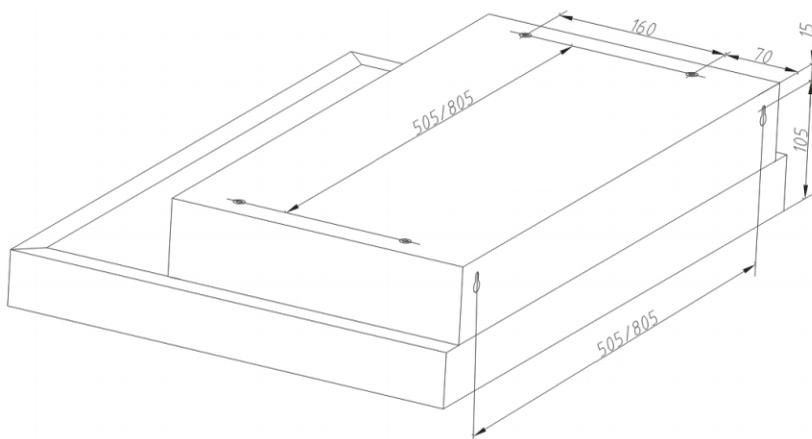


Fig.3


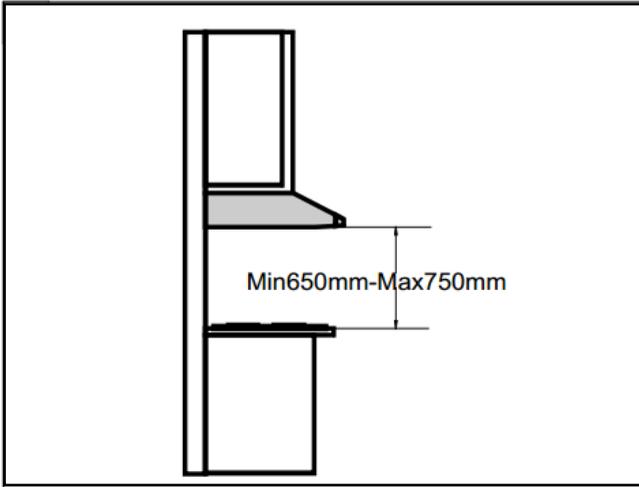


Fig.4

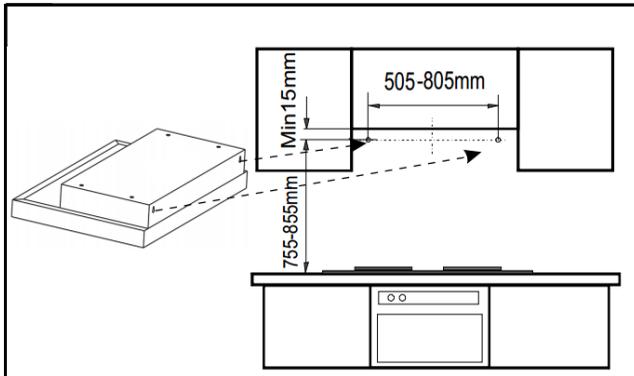

Connection to power

Make sure that the voltage of power network match with the one that is written on the type board of the absorber plate. The connection to power must be handled by an authorized technician. The power cord must include a bipolar switch with contact separation distance over or equal to 3mm. The device must be able to disconnect from the power supply.

Operation

In order for the hood to function effectively, you have to switch it on from the moment you switch on the hob. After you finish the cooking, you wait another 10 mins before switching it off. During cooking, leave the kitchen door half open. Do not leave the window of kitchen open as it may blow away the fumes from the hood.

-By pressing the Key "low", "medium" and "high speed" to turn on the hood at low, medium and high speed.

-Press the first button to turn off the hood.

-To turn on the light, press key "lamp".

-To turn off the light, press key "lamp" again.

The keys from left to right:

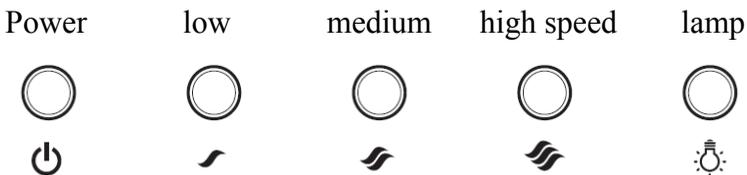


Fig.5

Maintenance

The hood should be washed by a sponge with warm water. Regular cleaning maintains the performance of your hood.

Filter cleaning or replacement


In order to replace or clean the filter you have to:

1. Remove the aluminum filter by pressing the filter buttons.


Now you are able to change or clean the filter.

The aluminum filter should be washed by dishwasher or by hands every 30 days. Please make sure the filter is dry before you assemble them back.

Do not neglect to clean the aluminum filter regularly (every 2 months). The filter which is not cleaned regularly is dangerous and can cause fire.

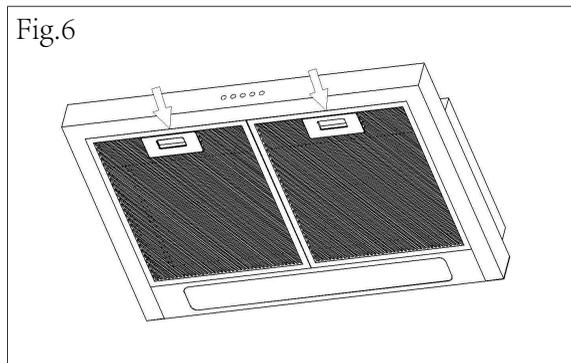

The active carbon filters purify the air that is replaced in the environment. The filters are not washable nor reusable and must be replaced every 4 months at most. The saturation of the active carbon filter depends on the frequency of use of the appliance, the type of cooking and the regularity of cleaning the aluminum filters.

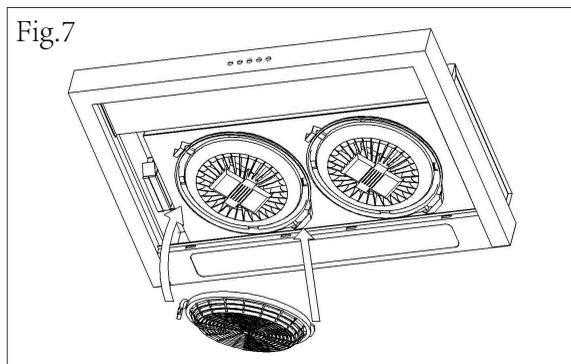

Lamp replacement

During lamp replacement procedure, the hood must be off.


The replacement of the lamps is made if you open the aluminum filter by moving the filter buttons as the arrows shows on Fig.6.

Then remove the plastic covers of the lamps carefully according to the picture below. Replace the lamp with a 40 watt incandecent lamp.

Caution:

-The surface and the cover of the lamp may be hot. PAY ATTENTION when replacing.

-Lamp may be hot. PAY ATTENTION when replacing.

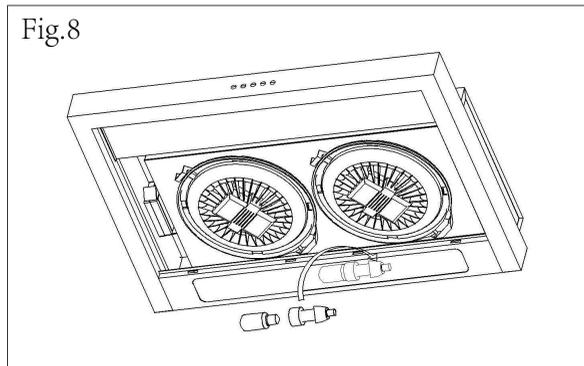

Attention

In the below cases the hoods will be very dangerous:

- Do not disassemble the grease filter when the hood is working.
- Do not touch the lamps or surfaces surrounding after the hoods have been working a long time.
- Do not leave bare flames under the range hood, it may damage the filter or cause a fire.
- Deep fat fryer must be continuously monitored during use: overheated oil can burst into flame.
- Disconnect all the electricity before any maintenance work.
- This machine can't be operated by children or the weak.
- Children should be supervised to ensure that they do not play with the appliance.
- There is a fire risk if cleaning is not carried out in accordance with instructions.
- The discharge air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- Only a qualified and trained service technician can undertake the work of installation and servicing.
- Only the suppliers' wire can be used to replace the broken wire.
- It is not allowed by non-qualified person to disassemble the machine.