Register your product online 網上登記新產品保養

香港 Hong Kong



Scan QR Code or visit www.whirlpool.com.hk to register your product warranty online.

You can download the user manual by: • Visiting Our website www.whirlpool.com.hk

Contacting our Customer Service at (852) 2406 9138.

掃瞄二維碼或登入 www.whirlpool.com.hk 以進行網上產品保養登記

- 可透過以下途徑下載使用說明書:
- 瀏覽我們的網頁 www.whirlpool.com.hk
- 致電我們的客戶服務中心 (852)2406 9138

新加坡 Singapore



Scan QR Code or visit www.whiripool.com.sg/warranty-registration to register your product warranty online.

- You can download the user manual by: Visiting Our website **www.whirlpool.com.sg**
- Contacting our Customer Service at (65) 6250 6888 or email helpdesk.sg@whiripool.com

掃瞄二維碼或登入 www.whiripool.com.sg/warranty-registration 以進行網上產品保養登記

- 可透過以下途徑下載使用說明書:
- 瀏覽我們的網頁 www.whirlpool.com.sg
- 致電我們的客戶服務中心 (65)6250 6888 或電郵至helpdesk.sg@whiripool.com



Health & Safety, Use & Care, Installation Guide and **Online Warranty Registration Information**

Model 產品型號: CS2320

Whirlpool® Registered trademark/TM Trademark of Whirlpool group of companies All rights reserved - http://www.whirlpool.com.hk

註冊商標/惠而浦集團的TM商標 版權所有 翻印必究 - http://www.whirlpool.com.hk





Whirlpool

產品安全指引、使用說明、安裝指南及 網上登記保養資料

www.whirlpool.com.hk www.whirlpool.com.sg

■ 使用前的準備與須知	頁	■ 清潔及保養	頁
重要安全資訊・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	2 2-3 3	清潔及保養・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	39
產品及配件結構圖 • • • • • • • • • • • • • • • • • • •		■ 其他須知 〕	頁
控制面板 - 基本功能説明 ••••••••••••••••••••••••••••••••••••	8 8 9-10 11	故障排解 ••••••••••••••••••••••••••••••••••••	
■ 操作方法説明	頁		
設置時鐘・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	13		

設置時鐘 • • • • • • • • • • • • • • • • • • •	
蒸氣模式 ••••••	
加強熱風對流模式・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	
頂部 / 底部 / 上下燒烤模式 •••••••••	
熱風對流模式 • • • • • • • • • • • • • • • • • • •	
熱風模式 · · · · · · · · · · · · · · · · · · ·	
熱風加蒸氣模式 •••••	
全功能蒸焗模式 ·····	
發酵模式•••••	
翻熱麵包模式 · · · · · · · · · · · · · · · · · · ·	
慢煮模式·····	
乾果模式••••••	
解凍模式・・・・・	
預熱模式 · · · · · · · · · · · · · · · · · · ·	•
消毒模式 ••••••	
保溫模式•••••	
烘乾爐腔模式•••••	
除垢模式 •••••	
預約功能 ••••••	
烹調過程中調校 / 結束後追加時間功能 •••••••	
餘溫高溫提示・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	
童鎖功能 • • • • • • • • • • • • • • • • • • •	

目錄

••• 14

••• 15

••• 16 ••• 17

••• 18

••• 19

••• 20

••• 21

••• 22 ••• 23

••• 24

••• 25

• 26-27

••• 28

••• 29 ••• 30

••31-32

••33-34

••35-36

••• 37

••• 37

■ 重要安全資訊

本説明包含有關產品安全、使用、維護及保養的重要資訊, 1. 如發現爐門或爐門密封邊損壞時,請停止使用產品並 請仔細閱讀本説明書,並將本説明書存放於容易提取的地方, 以備將來查閱。

■ 首次使用前須知

- 1. 此產品很重,需要兩個人或以上安裝或移動此產品, 必須將產品放置在堅固及平穩的表面,否則會造成 5. 切勿過度烹調食物,否則可能引致火災。 身體傷害或產品損壞。
- 2. 此產品只設計作室內和家庭用途。請依照説明書內列 明的煮食方法使用。切勿使用此產品作戶外、商業或其 它用途。
- 3. 請確保家中使用的電壓與產品標籤上的電壓一致。
- 4. 產品送抵後請確保產品沒有損壞。如產品出現下列 情況,請勿操作本產品:例如電源線或插頭受損、產品 7. 切勿在爐內使用腐蝕性化學品或氣體。此蒸焗爐專為加 無法正常操作、產品受損或曾墜落。如果出現任何損 壞,請聯絡惠而浦客戶服務部。
- 5. 切勿把電源線或插頭浸入水中,並避免電源線接觸高溫 的表面,以免發生觸電,火災或其他意外。
- 安裝。
- 7. 產品的四周必須保留足夠的通風空間,切勿在爐頂放置 任何物件並與頂部壁櫃距離至少5厘米: 兩旁應與牆壁 距離至少1厘米。
- 8. 請勿阻擋或堵塞蒸焗爐的散熱通風口,以免對蒸焗爐 造成損壞。
- 9. 在使用蒸焗爐前,以「消毒模式」進行30分鐘的消毒清潔。
- 10. 生產商不承擔一切由於客戶不正確使用本產品而產生的 12. 切勿將爐腔作存放物件之用。 問題。
- 11. 前排氣出風口會有低溫蒸氣排出,切勿遮蓋前排氣出風 口,以免損壞蒸焗爐。
- 塑料容器等。所有非耐熱性容器都不應放進蒸焗爐使用。 蒸煮容器耐熱溫度應高於 120°C,而烤焗容器耐熱溫度 15. 剛完成烤焗煮食後或爐腔處於高溫狀態下,使用蒸氣相 應高於 250℃。
- 13. 第一次使用各種燒烤或烤焗的功能時,可能會產生氣 味,這是正常現象。

■ 使用注意及建議事項

- 儘快聯絡惠而浦客戶服務部。
- 2. 如電源線何損壞,必須由供應商/製造商或合格技術人 員更換,以免造成危險。
- 3. 請勿於此爐附近加熱或使用易燃物品,以免產生火警或 爆炸。
- 4. 切勿使用本產品烘乾布料、紙張、香料、藥材、木材、 花朵或其他易燃的物件,否則可能會造成火災。
- 6. 使用蒸焗爐時切勿離開,尤其正當在使用紙、塑膠或其 他易燃材料的物件進行烹調。當用作為食物加熱時, 紙張可能會著火或燒焦,某些塑料則可能溶化。如發現 有物件在蒸焗爐內或外被點燃或冒煙,請將爐門關上並 關掉蒸焗爐。同時拔掉電源線並將裝設有漏電斷路器的 插座電源切斷。
- 熱食物或烹煮食物而設計,並不適合工業或實驗用途。
- 8. 此產品並非設計給身體,感官或精神上能力不足,或經驗 及知識不足的人士使用(包括兒童),除非監護其安全的 負責人監督或指引其使用。
- 6. 此座檯式蒸焗爐只設計作座檯式使用,不可以作嵌入式 9. 每次完成烹調並待蒸焗爐冷卻後,請抹走可能凝固於爐 腔內的殘留物。爐腔頂部最容易出現燒焦情況,應將爐 腔頂部擦洗乾淨。為確保食物得到最佳烹調效果,於每 次使用後,請保持爐腔完全乾透。
 - 10. 從蒸焗爐內提取食物及器皿時,應使用隔熱手套,以免 燙傷。
 - 11. 當蒸焗爐運作時,請避免接觸爐腔內的發熱管,以免造 成危險。

2

- 13. 奶樽或嬰兒食物器皿中的食物或飲料加熱後,請務必在 餵食前將食物或飲料加以攪拌,並檢查食物的溫度, 確保熱力分佈均匀,以避免燙傷或灼傷嬰兒。
- 12. 應使用耐高溫容器進行烹調,如耐熱性玻璃、耐熱性 14. 當完成蒸或烤焗煮食模式後,應等待 10-15 分鐘才進行 其他烹調模式。
 - 關模式,爐腔內的蒸氣可能會迅速蒸發,蒸氣不易被看 到。這是正常現象。
 - 16. 當使用蒸焗爐時,切勿用手觸摸爐門、爐窗及外框。
 - 17. 請使用直接從水喉取的自來水、食用水或蒸餾水注入儲

- 水箱,直至水位達到標註"MAX"(最高水位)的位置。 35. 爐門負重不可超過7公斤,為避免損害蒸焗爐,請勿把 把儲水箱完整推進於凹位內,直至聽到「卡」一聲,確 食物或任何重物放在爐門上。 保固定到位。
- 18. 水箱出現裂紋或缺口時,請勿繼續使用,以免引起因 漏水而導致的漏電或觸電。
- 19. 為確保衛生,並防止冷凝水在蒸爐內積聚,請於每次 📕 產品放置事項 使用後清空水箱及確保爐腔完全乾透。
- 20. 除清水外,切勿使用儲水箱盛載其他液體(除垢劑除外)。 1. 產品的四周必須有足夠的通風空間,切勿在爐頂放置 21. 以蒸氣模式烹調過程中儘量不要打開爐門,以免蒸氣 任何物件並與頂部壁櫃距離至少5厘米;兩旁應與牆壁 流失和爐腔溫度下降,影響烹調效果。如有需要打開爐 距離至少1厘米;機背可貼近牆壁。
- 門,請酌量增加蒸煮時間。
- 22. 烹調過程中如需翻轉食物或因其它需要必須打開爐門 時,請盡量不要靠近爐門(特別是臉部),以免燙傷。
- 23. 維修操作必須由專業人員進行。除專業人員外,任何 維修操作均可能帶來危險。請勿擅自對產品進行拆卸、 修理或改造。
- 24. 產品操作時,可接觸部份的溫度可能較高,切勿讓兒童 靠近。
- 25. 通電後,切勿以濕手或其他身體部份接觸本產品、產品 之電源線或插頭,以免發生危險。
- 26. 切勿放置或懸掛任何物件於爐門或門上的把手,以免影 響門的開關及損壞門鉸。
- 27. 烹調結束後,電動風扇會繼續工作一段時間,以冷卻爐 2. 請勿堵塞出風口,入氣口,否則可能造成火災。請經常 保養,避免垃圾、灰塵等堵塞出風口,入氣口。 腔和電子零件,屬於正常現象。
- 這會影響器具的壽命,可能會導致危險的情況。
- 劑,以免損壞或腐蝕本產品。
- 30. 在除垢模式時,水箱的水會被加熱,並流到接水盤內, 請勿讓兒童接觸或走祈。
- 31. 在清潔臚腔時,請切斷電源,如需要清潔風扇,請小心 (詳情參照説明書內"如何拆下爐腔內隔熱罩")
- 32. 請定期清除電源插頭上的灰塵。長期不使用時,請拔出 的插座上。 電源插頭。拔除電源插頭時不要拉扯電線,應手握插頭 拔除。
- 33 請不要讓蒸焗爐處於無人監看的狀態下工作。
- 34. 過熱的脂肪和油很容易著火。除了烤肉, 在烹調過程中 對油進行加熱也是很危險的,應禁止這樣操作。

使用前的準備與須知



- 28. 如未能妥善清潔產品及其配件,會導致器具表面劣化, 3. 不可將產品放置於高溫潮濕地方。例如煤氣爐,帶電區 或水槽旁邊等。
- 29. 清潔前請切斷電源,不可使用具有腐蝕性的清潔 4. 產品必須平放在堅固及平穩的表面。

■ 接地説明

除去爐腔內隔熱罩,以及按照指示裝回,方可再次使用。 本產品必須接地使用。萬一漏電,接地可以提供電流回路以 避免觸電。本產品提供的接地插頭必須插在單相兩極帶接地

使用前的準備與須知

■ 產品及配件結構圖





- 1. 控制面板:用於操作蒸焗爐(詳細請參考控制面板説明 P.6-10)
- 2. 出風口: 排出爐內多餘的熱氣及水蒸氣。
- 3. 爐燈:爐腔照明,以便觀察烹調的食物。
- **4. 吸風口**: 爐腔內多餘的蒸氣及熱氣由此孔抽到出風口。
- 5. **頂部發熱管:**產生熱能烹調食物。
- 6. 水箱:盛載清水以產生蒸氣。
- 7. 入氣口:讓蒸氣進入爐腔內。
- 8. 爐門:1. 確保爐門關上後,才開啟烹調程式。

2. 在烹調過程中,將爐門打開,烹調會暫停;把爐門關上後,會自動繼續原先的烹調設定。

4

9. 接水盤:盛載開門後流出的倒汗水及除垢功能中的污水。

1. 燒烤架

- 讓爐腔溫度更平均。
- (C) 食物無容器盛放時,請用牛油紙或鍚紙,平鋪在燒烤架上使用。
- 2. 蒸盤(有疏氣孔)
- (A) 主要用於「蒸氣」時使用。其疏氣孔設計亦可用於其他烹調模式。
- 讓爐腔溫度更平均。
- 3. 焗盤(接油盤)
- (B) 食物無容器盛放時,請用牛油紙或鍚紙,平鋪在焗盤上使用。
- 4. 隔熱手套

由蒸焗爐拿出食物或托盤時使用。

5. 海綿

用於吸取爐腔內的倒汗水。

(A) 主要用於所有使用發熱管加熱的模式,如各個「燒烤」或「熱風對流」或「熱風」等模式使用。 (B) 如需進行多層煮食,建議將此燒烤架放於較底層的位置,如進行三層煮食,請放於最底位置。可使爐腔內空氣更流通、

(B) 如需進行多層煮食,建議將此蒸盤放於較底層的位置,如進行三層煮食,請放中間位置。可使爐腔內空氣更流通、

(A) 主要用於「熱風加蒸氣」、「全功能蒸焗」或「熱風」等模式時使用。或於烹調肉類時放於底層, 盛載煮食中滴下來的油。

■ 控制面板



6

使用前的準備與須知

■ 控制面板 - 基本功能説明

圖示	
\bigcirc	旋鈕 功能 / 時間 / 溫度設定 旋鈕按鍵 確定 / 開始 / 暫停設定
¢*	設置鍵 時鐘設定:在待機狀態下 (詳細請參閱第 13頁 "設置 預約功能設定:烹調模式 進行預約設定。(詳細請參 在暫停狀態下,按設置鏡 校功能")
5	返回鍵 返回鍵 返回/取消; 在設置過程中,按返回鍵 靜音模式 啟動靜音模式:在待機狀態 音效提示關閉。 解除靜音模式:在待機狀態;
-`(<u></u>) ≡	爐燈鍵 1.輕按一次,爐燈亮3分鐘 2.長按3秒,爐燈長亮,顯 3.打開爐門,爐燈亮3分鐘
≡-0	童 鎖鍵 長按 3 秒可啟動 / 解除童鎖 啟動童鎖 : 長按童鎖鍵 3 秒 解除童鎖 : 長按童鎖鍵 3 秒
Ċ	電源鍵 如果開啟蒸焗爐後,沒有進 電模式,顯示屏會熄滅。省

功能説明

F長按設置鍵 3 秒鐘,即可進入設置時鐘畫面,進行時鐘設定。 置時鐘");

式、烹調時間和烹調溫度設定後,按設置鍵,即可進入預約功能畫面, 參閱第 33-34 頁 "預約功能");

鍵可重新調整烹調時間和溫度。(詳細請參閱第 35 頁 "烹調過程中調

鍵可回到上一個畫面,即可重新調整烹調模式或烹調時間。

態下長按返回鍵 3 秒即啟動靜音模式,顯示屏上靜音圖示亮起,按鍵

影下長按返回鍵3秒即可解除靜音模式。

鐘,顯示屏上不會顯示爐燈圖標; 顯示屏上會顯示爐燈圖標,再長按3秒取消長亮; 鐘。

▷啟動,控制面板會被鎖定並不能控作。 ▷即可解除童鎖功能。

0

這行任何操作,包括打開或關閉爐門,5分鐘後,蒸焗爐將自動進入省 貧電模式下只有電源鍵能操作。

■ 控制面板 - 特別功能説明

組合鍵功能	圖示	功能説明
組合鍵: 爐腔溫度顯示	\$	在烹調過程中,同時按【設置鍵 + 爐燈鍵】3 秒,溫度顯示切換為爐腔 實際溫度。如要返回設置的烹調溫度,再同時按【設置鍵 + 電源鍵】3 秒即可。

■ 控制面板 - 主要功能介紹



8

■ 控制面板 - 主要功能詳細説明

圖示	模式	功能介紹	默認時間 / 溫度	時間 / 溫度選擇範圍			
C)	蒸氣	此模式以蒸氣烹調食物,可保 留食物原有的味道,營養及顏 色。適合蒸煮蔬菜,肉類,海 鮮或燉湯等。	30 分鐘 / 100 ℃	時間 5 - 419 分鐘 (最長 6 小時 59 分鐘) 溫度 50 - 110°C			
R	加強熱風對流	以較短時間烤焗食物,加快烹 調時間。適用烤焗體積較大的 肉類及糕點。	30 分鐘 / 180 ℃	時間 5 - 239 分鐘 (最長 3 小時 59 分鐘) 溫度 100 - 230 °C			
	頂部燒烤	適合燒烤食材,或用於烤焗的最 後階段,作加強食物金黃度及烤 色的作用。	30 分鐘 / 180 ℃	時間 5 - 239 分鐘 (最長 3 小時 59 分鐘) 溫度 100 - 230℃			
	底部燒烤	適合烘焙的最後階段或局部時段 只需底部加熱的食物,如薄餅或 馬卡龍等菜式。熱力會從底部散 發出來。	30 分鐘 / 180 ℃	時間 5 - 239 分鐘 (最長 3 小時 59 分鐘) 溫度 100 - 230°C			
	上下燒烤	傳統的一層烘焙與烤焗。熱力會 從上面及底部散發出來,使食物 達到均匀的烤焗效果。適用於烹 調肉類、魚類、麵包以及各式 曲奇、糕點及甜品等。尤其適合 頂部有濕潤配料的蛋糕。	30 分鐘 / 180 ℃	時間 5 - 239 分鐘 (最長 3 小時 59 分鐘) 溫度 100 - 230°C			
~	熱風對流	上下發熱線及背部風扇同時運 作,用於各種烤焗菜式,如肉 類、海鮮類、薄餅、麵包以及 各式曲奇、糕點及甜品等。	30 分鐘 / 180 ℃	時間 5 - 239 分鐘 (最長 3 小時 59 分鐘) 溫度 100 - 230 ℃			
R	熱風	設有風扇在背部,風扇會將背 部發熱線產生的熱氣,均匀的 送到爐中每一個角落。使多層 烤焗的食物受熱更平均。可使 用於一層或以上的烤焗。	30 分鐘 / 180 °C	時間 5 - 239 分鐘 (最長 3小時 59 分鐘) 溫度 100 - 230 °C			
(P ^{C)}	熱風加蒸氣	以熱風煮食並加入蒸氣,讓烹 調的食物不會因烤焗的高溫而 流失水份。背部風扇使熱風均 勻循環流動,可確保多層烤焗 的食物受熱更平均。適用於煮 各種食物。	30 分鐘 / 180 ℃	時間 5 - 419 分鐘 (最長 6小時 59 分鐘) 溫度 100 - 230 ℃			
(S)	全功能蒸焗	此模式集合上下火、熱風、蒸 氣功能於一身,全功能的完美 結合。煮食過程中加入蒸氣,讓 烹調的食物不會因烤焗而流失水 份。適用於煮各種食物。例如 較大的肉類或烤焗濕潤的蛋糕。	30 分鐘 / 180 ℃	時間 5 - 419 分鐘 (最長6小時59分鐘) 溫度 100 - 230°C			
	發酵	此模式以蒸氣運作,使爐腔達 至調校的穩定而潮濕的的環境。 用於麵團發酵,例如薄餅的餅 底或製作麵包時的麵團。麵團 發酵的速度會比在室溫下快, 麵團表面也不會過乾。	30 分鐘 / 35°C	時間 5 - 419 分鐘 (最長6小時59分鐘) 溫度 30 - 40℃			

使用前的準備與須知

■ 控制面板 - 主要功能詳細説明

圖示	模式	功能介紹	默認時間 / 溫度設置	時間 / 溫度選擇範圍
	翻熱麵包	此程式會以已調節的最佳溫度 去翻熱麵包,過程中加入蒸氣, 使效果像剛出爐的新鮮麵包。 備有兩種翻熱麵包模式:室溫 和冷藏麵包。	10 分鐘	時間 5 - 59 分鐘 溫度不可調校
	慢煮	以蒸氣維持爐腔的溫度。以 低溫慢煮,沒有經過高溫加 熱,可使各種肉類和海鮮保 存原有的鮮味。需配合真空 袋使用。	30 分鐘 / 60 °C	時間 5 - 419 分鐘 (最長 6 小時 59 分鐘) 溫度 50 - 90 °C
	乾果	以低溫熱風去風乾食物,適合 製作各種生果片,蔬菜片或 肉乾。	60 分鐘 / 80 °C	時間 5 - 779 分鐘 (最長12小時59分鐘) 溫度 40 - 90°C
*	解凍	用於解凍冷藏或冷凍食物。	30 分鐘 / 55 ℃	時間 5 - 419 分鐘 (最長 6 小時 59 分鐘) 溫度 50 - 60 °C
	預熱 - 蒸氣	以蒸氣進行預熱。使爐腔達到預 設溫度。	當前時間 / 100 °C	溫度 50 - 110°C
	預熱 - 烤焗	以烤焗進行預熱。使爐腔達到 預設溫度。	當前時間 / 180 ℃	溫度 100- 230°C
	消毒	以高溫蒸氣消毒,可消毒餐 具或嬰兒奶瓶等。	30 分鐘 / 110°C	時間 5 - 419 分鐘 (最長 6 小時 59 分鐘) 溫度 110℃
	保溫	以熱風保溫 食物。適合把剛煮 的食物保溫。	30 分鐘 / 55 ℃	時間 5 - 239 分鐘 (最長 3 小時 59 分鐘) 溫度 50 - 60 °C
	烘乾爐腔	此模式會以高溫加熱爐腔, 蒸發爐腔中多餘的水份和蒸氣。 此功能適用於任何蒸氣烹調 的模式後使用。	25 分鐘	時間不可調校 溫度不可調校
◆◆ 除垢 能模式使, 到 100 個 圖示會亮; 垢模式。		當蒸氣模式或其他帶有蒸氣功 能模式使用的累計時間達 到 100 個小時, "除垢提示" 圖示會亮起,提醒用戶進行除 垢模式。 需配合除垢劑使用。	50 分鐘	時間不可調校 溫度不可調校

■ 使用及烹調小貼士

- 1. 所有烹調模式的最短設定的時間為5分鐘。(除'追加 烹調時間'功能外)
- 2. 完成烹調後,風扇會延時工作3分鐘,將爐腔內的熱 量排出,這是正常現象。
- 3. 烹調過程中,如果將爐門打開,蒸焗爐會自動暫停; 5. 如要在烹調過程中,檢查食物溫度,必須使用焗爐專 用的溫度計檢查。如果食物烹調時間不足則再放入爐內 將爐門關上,則自動啟動並按餘下設定時間及溫度 繼續烹調。 繼續烹調。
- 4. 加熱湯類、汁類或飲品等液體食物時,取出時必須 6. 烤焗完成後,建議立刻取出以免殘留熱量使食物過熱 或使烤色變深。 小心。在烹調時,請留意以下各點:
 - (a) 不要過度加熱。否則在取出食物時,會由於突然 7. 烤焗過程中為維持爐內溫度,請儘量避免開關爐門檢 沸騰導致液體飛濺而燙傷。 查食物,以免影響爐內溫度。如於煮食過程中曾打開 (b) 液體食物加熱時,液體不要多於容器的八成滿。 爐門,請相應地增加烹食時間。
 - 因為加熱少量液體食物會由於沸騰而導致液體 突然飛濺。

(c) 加熱前或加熱途中請攪拌。 (d) 加熱後,先讓食物在爐內放置片刻,略加攪拌後取出。 (e) 使用奶瓶或加熱嬰兒食物後,即攪拌或搖動, 餵食前應檢查溫度,避免燙傷。

8. 如果擔心烤色不均匀,請在加熱途中調整或翻轉食物、 蒸焗盤的位置或方向。

9. 配件擺放技巧 單層煮食:建議放置配件在第3層 兩層煮食:建議放置配件在第2和第4層 三層煮食:建議放置配件在第2、第3和第4層



以上建議擺放層數、位置僅供參考。客人可因應食物 份量、種類和存放食物的容器,去調整擺放配件的層 數和位置。

■ 建議烹調食譜

菜式	份量	類別	模式	溫度	時間	預熱	使用 配件	配件 位置
菜芯	約半斤	蔬菜	蒸氣	110°C	5 分鐘	需要	蒸盤	第3層
蒸水蛋	1 隻蛋 +2 份水	蛋	蒸氣	100°C	9分鐘	需要	蒸盤	第3層
蒸白飯	120 克米 +120 克水	五穀	蒸氣	100°C	25 分鐘	不需要	蒸盤	第3層
猴頭菇响螺片 瘦肉燉湯	300 克材料 + 1000 克水	湯	蒸氣	100°C	180 分鐘	不需要	蒸盤	第3層
蒸肉餅	370 克	肉	蒸氣	100°C	25 分鐘	需要	蒸盤	第3層
烤焗雞腿	4 隻雞腿	肉	全功能蒸焗	200°C	18 分鐘	需要	燒烤架 / 焗盤	第3層
肉餅煲仔飯	150 克肉餅 +100 克米 +100 克水	肉 + 五穀	全功能蒸焗	180°C	40 分鐘	需要	燒烤架 / 焗盤	第3層
提子鬆餅	12 個	麵包	加強熱風對流	180°C	22 分鐘	需要	焗盤	第 2 層和 第 4 層
圓形餐包	230 克	麵包	加強熱風對流	180°C	25 分鐘	需要	焗盤	第3層
朱古力 布朗尼蛋糕	6 個	甜品	熱風對流	180°C	20 分鐘	需要	焗盤	第3層
馬卡龍	12 個	甜品	底部燒烤	140°C	15 分鐘	需要	焗盤	第4層
冷藏有餡麵包	1 個	麵包	翻熱麵包 "1"	默認	12 分鐘	不需要	燒烤架 / 焗盤	第3層
室溫有餡麵包	1 個	麵包	翻熱麵包 "2"	默認	10 分鐘	不需要	燒烤架 / 焗盤	第3層
冷藏麵包	1 個	麵包	翻熱麵包 "1"	默認	10 分鐘	不需要	燒烤架 / 焗盤	第3層
室溫麵包	1 個	麵包	翻熱麵包 "2"	默認	8 分鐘	不需要	燒烤架 / 焗盤	第3層

以上的建議烹調食譜僅提供參考。客人喜歡的生熟程度、開始溫度、所烹調的食物份量、大小、食物形狀和容器的種類 等,都會影響烹調時間和烹調效果。

■ 設置時鐘

首次開機後,蒸焗爐發出「必」一聲後即進入待機畫面,時鐘默認顯示12:00(如下圖),顯示屏全亮。



在開機後畫面後, 若在5分鐘內沒有進行任何操作, 會自動進入省電模式, 此時顯示屏熄滅, 省電模式下只有電源鍵能操作。 省電模式下按"電源鍵"退出省電模式,機器進入開機後畫面。

例如:設置現前時間為 13 時 20 分。

操作步驟:

1. 在待機畫面下,長按設置鍵 🛟 3 秒,小時位閃爍 (如下圖);



2. 轉動旋鈕直到顯示小時位轉至 13 ,按旋鈕確認。 (如下圖)然後畫面會自動跳至分鐘選項。



3. 轉動旋鈕直到顯示分鐘轉至 20, 按旋鈕確認。(如下圖)



4. 完成時間設置。(如下圖)



注意:在設置過程中,若連續5分鐘內用戶沒有任何操作,當前所有設置將會被取消並返回到待機畫面,進入待機狀態。

操作方法説明

■ 蒸氣模式

此模式以蒸氣烹調食物,可保留食物原有的味道,營養及顏色。適合蒸煮蔬菜,肉類,海鮮或燉湯等。 每次使用前,請確保水箱已加滿水。

	溫度	時間
開機預設	100°C	30 分鐘
設定範圍	50°C - 110°C	5 分鐘 - 6 小時 59 分鐘

例如:設置烹調時間為1小時40分鐘,溫度為90°C。

操作步驟:

1. 在待機狀態下,順時針旋轉旋鈕至 🕅 蒸氣模式圖示閃爍,按旋鈕確認功能。(如下圖)然後畫面會自動跳至小時選項。



2. 轉動旋鈕直到顯示小時位轉至 01,按旋鈕確認。(如下圖)然後畫面會自動跳至分鐘選項。

3. 轉動旋鈕直到顯示分鐘轉至 40,按旋鈕確認。(如下圖)然後畫面會自動跳至溫度選項。

4. 轉動旋鈕直到顯示溫度轉至 90°C,按旋鈕確認。(如下圖)



5. 設置完成,開始烹調。



焗盤上直接烤焗。

	溫度	時間
開機預設	180°C	30 分鐘
設定範圍	100°C - 230°C	5 分鐘 - 3 小時 59 分鐘

例如:設置烹調時間為 40 分鐘,溫度為 210°C。

操作步驟:

1. 在待機狀態下,順時針旋轉旋鈕至 💽 加強熱風對流模式圖示閃爍,按旋鈕確認功能。(如下圖)然後畫面會自動 跳至小時選項。



2. 按旋鈕確認小時位 00 設定。(如下圖)然後畫面會自動跳至分鐘選項。



3. 轉動旋鈕直到顯示分鐘轉至 40,按旋鈕確認。(如下圖)然後畫面會自動跳至溫度選項。



4. 轉動旋鈕直到顯示溫度轉至 210°C,按旋鈕確認。(如下圖)



5. 設置完成,開始烹調。

14

操作方法説明

以較短時間烤焗食物,加快烹調時間。適用烤焗體積較大的肉類及糕點。建議把食物放在鋪有錫紙或牛油紙的



設有三種不同的燒烤模式,分別為頂部燒烤模式,底部燒烤模式和上下燒烤模式(頂部及底部燒烤)。 可因應食材種類和所需的烹調效果去選擇合適的燒烤模式。可把食物放在鋪有錫紙或牛油紙的燒烤架或焗盤上直接烤焗。

頂部燒烤模式:適合燒烤食材或用於烤焗的最後階段,作加強食物金黃度及烤色的作用。

底部燒烤模式:適合烘焙的最後階段或局部時段只需底部加熱的食物,如薄餅或馬卡龍等菜式。熱力會從底部散發出來。

上下燒烤模式:傳統的一層烘焙與烤焗。熱力會從上面及底部散發出來,使食物達到均匀的烤焗效果。適用於 烹調肉類、魚類、麵包以及各式曲奇、糕點及甜品等。尤其適合頂部有濕潤配料的蛋糕。

	溫度	時間
開機預設	180°C	30 分鐘
設定範圍	100°C - 230°C	5 分鐘 - 3 小時 59 分鐘

例如:設置烹調時間為 40 分鐘,溫度為 210°C。

操作步驟:

1. 在待機狀態下,順時針旋轉旋鈕至 🦳 或 🦳 或 🦳 所需燒烤模式圖示閃爍,按旋鈕確認功能。(如下圖)然後 畫面會自動跳至小時選項。

2. 按旋鈕確認小時位 00 設定。(如下圖)然後畫面會自動跳至分鐘選項。

3. 轉動旋鈕直到顯示分鐘轉至40,按旋鈕確認。(如下圖)然後畫面會自動跳至溫度選項。

4. 轉動旋鈕直到顯示溫度轉至 210°C,按旋鈕確認。(如下圖)

5. 設置完成,開始烹調。



上下發熱線及背部風扇同時運作,用於各種烤焗菜式,如肉類、海鮮類、薄餅、麵包以及各式曲奇、糕點及 甜品等。可把食物放在鋪有錫紙或牛油紙的燒烤架或焗盤上直接烤焗。

	溫度	時間
開機預設	180°C	30 分鐘
設定範圍	100°C - 230°C	5 分鐘 - 3 小時 59 分鐘

例如:設置烹調時間為 40 分鐘,溫度為 210°C。

操作步驟:

跳至小時選項。



2. 按旋鈕確認小時位 00 設定。(如下圖)然後畫面會自動跳至分鐘選項。



3. 轉動旋鈕直到顯示分鐘轉至 40,按旋鈕確認。(如下圖)然後畫面會自動跳至溫度選項。



4. 轉動旋鈕直到顯示溫度轉至 210°C,按旋鈕確認。(如下圖)



5. 設置完成,開始烹調。

操作方法説明

1. 在待機狀態下,順時針旋轉旋鈕 🔫 至熱風對流模式圖示閃爍,按旋鈕確認功能。(如下圖)然後畫面會自動

■ 熱風模式 〔 ⑦

設有風扇在背部,風扇會將背部發熱線產生的熱氣,均勻地送到爐中每一個角落。使多層烤焗的食物受熱更平均。 可使用於一層或以上的烤焗。可把食物放在鋪有錫紙或牛油紙的焗盤上直接烤焗。

	溫度	時間
開機預設	180°C	30 分鐘
設定範圍	100°C - 230°C	5 分鐘 - 3 小時 59 分鐘

例如:設置烹調時間為 40 分鐘,溫度為 210°C。

操作步驟:

1. 在待機狀態下,順時針旋轉旋鈕至 💮 熱風模式圖示閃爍,按旋鈕確認功能。(如下圖)然後畫面會自動跳至小時 選項。



2. 按旋鈕確認小時位 00 設定。(如下圖)然後畫面會自動跳至分鐘選項。

3. 轉動旋鈕直到顯示分鐘轉至 40,按旋鈕確認。(如下圖)然後畫面會自動跳至溫度選項。

4. 轉動旋鈕直到顯示溫度轉至 210°C,按旋鈕確認。(如下圖)



5. 設置完成,開始烹調。



以熱風煮食並加入蒸氣,讓烹調的食物不會因烤焗的高溫而流失水份。背部風扇使熱風均勻循環流動,可確保多層烤 焗的食物受熱更平均。適用於煮各種食物。可把食物放在鋪有錫紙或牛油紙的焗盤上直接烤焗。每次使用前,請確保 水箱已加滿水。

	溫度	時間
開機預設	180°C	30 分鐘
設定範圍	100°C - 230°C	5 分鐘 - 6 小時 59 分鐘

例如:設置烹調時間為 40 分鐘,溫度為 210°C。

操作步驟:

1. 在待機狀態下,順時針旋轉旋鈕至 😋 熱風加蒸氣模式圖示閃爍,按旋鈕確認功能。(如下圖) 然後畫面會自動跳至 小時選項。



2. 按旋鈕確認小時位 00 設定。(如下圖)然後畫面會自動跳至分鐘選項。



3. 轉動旋鈕直到顯示分鐘轉至 40,按旋鈕確認。(如下圖)然後畫面會自動跳至溫度選項。



4. 轉動旋鈕直到顯示溫度轉至 210°C,按旋鈕確認。(如下圖)



5. 設置完成,開始烹調。

操作方法説明

■ 全功能蒸焗模式 🖏



此模式集合上下火、熱風、蒸氣功能於一身,全功能的完美結合。煮食過程中加入蒸氣,讓烹調的食物不會因烤焗而 流失水份。適用於煮各種食物。 例如較大的肉類或烤焗濕潤的蛋糕。可把食物放在鋪有錫紙或牛油紙的焗盤上直接烤 焗。每次使用前[,]請確保水箱已加滿水。

	溫度	時間
開機預設	180°C	30 分鐘
設定範圍	100°C - 230°C	5 分鐘 - 6 小時 59 分鐘

例如:設置烹調時間為 40 分鐘,溫度為 210°C

操作步驟:

1. 在待機狀態下,順時針旋轉旋鈕至 💮 全功能蒸焗模式圖示閃爍,按旋鈕確認功能。(如下圖)然後畫面會自動跳至 小時選項。



2. 按旋鈕確認小時位 00 設定。(如下圖)然後畫面會自動跳至分鐘選項。



3. 轉動旋鈕直到顯示分鐘轉至40, 按旋鈕確認。(如下圖)然後畫面會自動跳至溫度選項。



4. 轉動旋鈕直到顯示溫度轉至 210°C ,按旋鈕確認。(如下圖)



5. 設置完成,開始烹調。



此模式以蒸氣運作,使爐腔達至已調校的穩定而潮濕的環境。用於麵糰發酵:如薄餅的餅底或製作麵包的麵糰。 麵糰發酵速度會較室溫下快,麵糰表面也不會過乾。每次使用前,請確保水箱已加滿水。

	溫度	時間
開機預設	35°C	30 分鐘
設定範圍	30°C - 40°C	5 分鐘 - 6 小時 59 分鐘

例如:設置烹調時間為 40 分鐘,溫度為 35°C。

操作步驟:

小時選項。



2. 按旋鈕確認小時位 00 設定。(如下圖)然後畫面會自動跳至分鐘選項。



3. 轉動旋鈕直到顯示分鐘轉至 40,按旋鈕確認。(如下圖)然後畫面會自動跳至溫度選項。



4. 按旋鈕確認預設溫度 35°C 的設定。(如下圖)



5. 設置完成,開始烹調。(如下圖)



20

操作方法説明

1. 在待機狀態下,順時針旋轉旋鈕至 🐼 發酵模式圖示閃爍,按旋鈕確認功能。(如下圖)然後畫面會自動跳至



此程式會以已調節的最佳溫度去翻熱麵包,過程中加入蒸氣,使效果像剛出爐的新鮮麵包。備有兩種模式:室溫 麵包或冷藏麵包。每次使用前,請確保水箱已加滿水。

建議烹調時間:一般冷藏麵包所需翻熱時間大約是 10-15 分鐘; 室溫麵包麵包所需翻熱時間大約是 8-13 分鐘。 如果有餡的麵包要再加多 5-10 分鐘。此建議烹調時間僅供參考。客人需因應麵包份量、大小、種類和個人喜好 等自行調整翻熱時間。

	時間。	模式
開機預設	10 分鐘	"1" 冷藏麵包
設定範圍	5 分鐘 - 59 分鐘	"1" 冷藏麵包 / "2" 室溫麵包

例如:烹調從雪櫃取出的麵包,設置烹調時間為25分鐘。

操作步驟:

1. 在待機狀態下,順時針旋轉旋鈕至 🔊 翻熱麵包模式圖示閃爍,按旋鈕確認功能。(如下圖)然後畫面會自動跳至分鐘選項。



2. 轉動旋鈕直到顯示分鐘轉至 25, 按旋鈕確認。(如下圖)然後畫面會自動跳至模式選項。



3. 此時自動進入麵包類型的選擇項,預設模式是"1",即是冷藏麵包翻熱模式,按旋鈕確認。(如下圖)



如果需改變模式,可在此時轉動旋鈕至模式顯示為"2",按旋鈕確認。



4. 設置完成,開始烹調。(如下圖)



注意:"組合鍵:爐腔溫度顯示"功能不適用於翻熱麵包模式。



袋使用。每次使用前,請確保水箱已加滿水。

	溫度	時間
開機預設	60°C	30 分鐘
設定範圍	50°C - 90°C	5 分鐘 - 6 小時 59 分鐘

例如:設置烹調時間為 40 分鐘,溫度為 60°C。

操作步驟:

小時選項。



2. 按旋鈕確認小時位 00 設定。(如下圖)然後畫面會自動跳至分鐘選項。



3. 轉動旋鈕直到顯示分鐘轉至 40[,]按旋鈕確認。(如下圖)然後畫面會自動跳至溫度選項。



4. 按旋鈕確認默認溫度 60°C 的設定。(如下圖)



5. 設置完成,開始烹調。(如下圖)



操作方法説明

以蒸氣維持爐腔的溫度。以低溫慢煮,沒有經過高溫加熱,可使各種肉類和海鮮保存原有的鮮味。需配合真空

1. 在待機狀態下,順時針旋轉旋鈕至 🎇 慢煮模式圖示閃爍,按旋鈕確認功能。(如下圖)然後畫面會自動跳至



以低溫熱風抽乾食物,適合製作各種生果片,蔬菜片或肉乾。

	溫度	時間
開機預設	80°C	60 分鐘
設定範圍	40°C - 90°C	5 分鐘 - 12 小時 59 分鐘

例如:設置烹調時間為2小時,溫度為90°C。

操作步驟:

1. 在待機狀態下,順時針旋轉旋鈕至 🔊 乾果模式圖示閃爍,按旋鈕確認功能。(如下圖)然後畫面會自動跳至 小時選項。



2. 轉動旋鈕直到顯示小時位轉至 02, 按旋鈕確認。(如下圖) 然後畫面會自動跳至分鐘選項。



3. 按旋鈕確認分鐘位 00 設定。(如下圖)然後畫面會自動跳至溫度選項。



4. 轉動旋鈕直到顯示溫度轉至 90°C,按旋鈕確認。(如下圖)



5. 設置完成,開始烹調。(如下圖)



■解凍模式 *

以蒸氣去解凍冷藏或冷凍食物。每次使用前,請確保水箱已加滿水。

	溫度	時間
開機預設	55°C	30 分鐘
設定範圍	50°C - 60°C	5 分鐘 - 6 小時 59 分鐘

例如:設置烹調時間為1小時40分鐘,溫度為60°C。 操作步驟:

小時選項。







4. 轉動旋鈕直到顯示溫度轉至 60°C,按旋鈕確認。(如下圖)



5. 設置完成,開始烹調。(如下圖)



24

操作方法説明

1. 在待機狀態下,順時針旋轉旋鈕至 🔭 解凍模式圖示閃爍,按旋鈕確認功能。(如下圖)然後畫面會自動跳至

2. 轉動旋鈕直到顯示小時位轉至 01,按旋鈕確認。(如下圖)然後畫面會自動跳至分鐘選項。

3. 轉動旋鈕直到顯示分鐘轉至40,按旋鈕確認。(如下圖)然後畫面會自動跳至溫度選項。



預熱模式有蒸氣和烤焗兩種預熱模式選擇,使爐腔達至預設溫度。

	蒸氣預熱	烤焗預熱
	溫度	溫度
開機預設	100°C	180°C
設定範圍	50°C - 110°C	100°C - 230°C

兩種預熱功能的烹調時間均毋需設定;當達到設定的預熱溫度時,顯示屏會顯示 "END" 和發出聲效提示操作 已完成。預熱進行中,顯示之時間為現在時間。如進行蒸氣預熱,每次使用前,請確保水箱已加滿水。

例如:以蒸氣進行預熱,設置烹調溫度為 100°C。

操作步驟:

1. 在待機狀態下,順時針旋轉旋鈕至 🕼 預熱模式圖示閃爍,預設的預熱模式是蒸氣模式,按旋鈕確認功能。 (如下圖)



2. 此時自動進入烹調溫度的設置;按旋鈕確認預設溫度 100°C 的設定。(如下圖)



3. 設置完成,開始預熱。(如下圖)



例如:以烤焗進行預熱,設置烹調溫度為 200°C。

操作步驟:

按旋鈕確認功能。(如下圖)



2. 此時自動進入烹調溫度的設置;轉動旋鈕直到顯示溫度轉至 200°C,按旋鈕確認。(如下圖)



3. 設置完成,開始預熱。(如下圖)



預熱結束時,顯示屏顯示會 "END"及發出聲效提示操作已完成(如下圖)。預熱完成後,客人可以根據需要, 選擇其他烹調模式進行烹調。



注意:"烹調過程中調校/結束後追加時間功能"功能不適用於此模式。

操作方法説明

1. 在待機狀態下,順時針旋轉旋鈕至預熱模式圖示閃爍,預設的預熱模式是蒸氣模式,轉動旋鈕切換至烤焗預熱模式,



以 110°C 高溫蒸氣消毒,可消毒餐具或嬰兒奶瓶等。每次使用前,請確保水箱已加滿水。

	溫度	時間
開機預設	110°C	30 分鐘
設定範圍		5 分鐘 - 6 小時 59 分鐘

例如:設置烹調時間為35分鐘。

操作步驟:

1. 在待機狀態下,順時針旋轉旋鈕至 💭 消毒模式圖示閃爍,按旋鈕確認功能。(如下圖)然後畫面會自動跳至 小時選項。

00:30	:	€ Corected
		₩\$\$) (\$\$

2. 按旋鈕確認小時位 00 設定。(如下圖)然後畫面會自動跳至分鐘選項。



3. 轉動旋鈕直到顯示分鐘轉至 35,按旋鈕確認。(如下圖)



4. 設置完成,開始烹調。(如下圖)





以熱風保溫食物,適合將剛煮的食物保溫。

	溫度	時間
開機預設	55°C	30 分鐘
設定範圍	50°C - 60°C	5 分鐘 - 3 小時 59 分鐘

例如:設置烹調時間為1小時30分鐘,溫度為60°C。 操作步驟:

1. 在待機狀態下,順時針旋轉旋鈕至 📖 保溫模式圖示閃爍,按旋鈕確認功能。(如下圖)然後畫面會自動跳至小時選項。



2. 轉動旋鈕直到顯示小時位轉至 01,按旋鈕確認。(如下圖)然後畫面會自動跳至分鐘選項。



3. 按旋鈕確認分鐘位 30 的設定。(如下圖)然後畫面會自動跳至溫度選項。



4. 轉動旋鈕直到顯示溫度轉至 60°C,按旋鈕確認。(如下圖)



5. 設置完成,開始烹調。(如下圖)



操作方法説明



此模式會以高溫加熱爐腔,蒸發爐腔中多餘水份及蒸氣。此功能適用於任何以蒸氣烹調的模式後使用。

	溫度	時間
開機預設	不可調校	25 分鐘
設定範圍		不可調校

操作步驟:

1. 在待機狀態下,順時針旋轉旋鈕至 🔊 烘乾爐腔模式圖示閃爍,按旋鈕確認功能。(如下圖)



2. 開始烹調。(如下圖)



注意:1."組合鍵:爐腔溫度顯示"功能不適用於此模式。

2. "烹調過程中調校 / 結束後追加時間"功能不適用於此模式。

$\left[\begin{array}{c} \diamond \\ \diamond \end{array} \right]$ ■ 除垢模式

長期使用蒸氣功能會導致機內及水管內產生水垢。

當累積使用蒸氣模式或其他帶有蒸氣功能模式的時間達到100個小時,顯示屏上 💸 除垢提示圖示會亮起,提醒用戶進行 除垢模式。直至用戶啟動除垢模式後,圖示才會熄滅。

除垢模式分3個階段,分別進行1次除垢和2次除垢清潔。在整個除垢過程中,需要更換水箱內的液體3次,並需要倒 掉接水盤內的污水。當需要倒掉接水盤內的污水時,顯示屏上塗」會相應亮起去提醒用戶。

除垢模式需配合除垢劑使用。客人可選用惠而浦獨家推出的Wpro除鈣去垢劑,此產品適用於蒸爐,有效清空蒸爐管道內 的鈣化聚積物和保持機器良好的操作性能。詳情可到惠而浦(香港)有限公司網站www.whirlpool.com.hk了解。

進行除垢模式時,建議使用除垢劑和淨水分量如下: 第1階段:除垢,時間為30分鐘。建議使用50毫升除垢劑和500毫升淨水。 第2階段:第1次除垢清潔,時間為10分鐘。建議使用550毫升淨水。 第3階段:第2次除垢清潔,時間為10分鐘。建議使用550毫升淨水。

	溫度	時間
開機預設	不可調校	50 分鐘
設定範圍	不可調校	不可調校

操作步驟:

1. 第1個階段:除垢

A. 先將 50 亳升除垢劑和 500 亳升淨水倒入水箱至水箱上550毫升 💱 除垢圖標位置。 B. 在待機狀態下,順時針旋轉旋鈕至 🛠 除垢模式圖示亮起,按旋鈕確認功能。(如下圖)



C. 開始除垢模式。(如下圖)



- 同時顯示屏上塗」接水盤圖示會亮起,提醒用戶倒掉接水盤內的污水。
- E. 請倒掉污水,並裝回接水盤。

2. 第2個階段: 第1次除垢清潔

- A. 打開爐門,將 550 亳升淨水倒入水箱至水箱上550毫升 🐼 除垢圖標位置。
- B. 將水箱放回機內並關上爐門,程式會自動啟動,繼續除垢清潔工作。
- 亮起,提醒用戶倒掉接水盤內的污水。
- D. 請倒掉污水,並裝回接水盤。

30

操作方法説明

D. 第1個階段需時 30 分鐘,程式完成後,顯示屏上的時間位會閃動,並發出聲效去提示第1個階段完成。

C. 第2個階段完成後,顯示屏上的時間位會閃動,並發出聲效提示第2個階段完成,同時顯示屏上塗」接水盤圖示會



- 3 第3個階段:第2次除垢清潔
 - A. 打開爐門,將 550 亳升淨水倒入水箱至水箱上550毫升 🐼 除垢圖標位置。
 - B. 將水箱放回機內並關上爐門,程式會自動啟動,繼續除垢清潔工作。
 - C. 第3個階段完成後,顯示屏會顯示 "End"提示,並發出聲效提示,同時顯示屏上塗 接水盤圖示會亮起, 提醒用戶倒掉接水盤內的污水。
 - D. 請倒掉污水,並裝回接水盤。
- 4. 除垢完成。
- 注意:1."組合鍵:爐腔溫度顯示"功能不適用於此模式。
 - 2. "烹調過程中調校 / 結束後追加時間"功能不適用於此模式。
 - 3. 除垢過程中,如操作有誤(包括操作過程中按暫停或沒有按指示下開關爐門等),除垢模式程式會被擾亂而無 法正常運作。建議重新啟動除垢模式並按照除垢模式中的指示再次操作。

■ 預約功能 ①

在進行預約功能設定前,必須先完成時鐘設定。時鐘設定可參見本説明書第13頁 "設置時鐘"內説明。

例如:現時時間為 16:30,設置預約底部燒烤模式,烹調時間為 40 分鐘,溫度為 210°C,結束時間為 18:00。

操作步驟:

1. 在待機狀態下,順時針旋轉旋鈕至 🗌 底部燒烤模式圖示亮起,按旋鈕確認功能。(如下圖)然後畫面會自動跳至 小時選項。



2. 按旋鈕確認小時位 00 設定。(如下圖)然後畫面會自動跳至分鐘選項。



3. 轉動旋鈕直到顯示分鐘轉至 40, 按旋鈕確認。(如下圖)然後畫面會自動跳至溫度選項。



4. 轉動旋鈕直到顯示溫度轉至210℃,按設置鍵 💣 確認。(如下圖)



小時位"16"會閃爍;同時,顯示屏上方 (โ) 預約功能圖示會閃爍顯示,表示正在進行預約功能設定。 (如下圖)



操作方法説明

5. 此時畫面會進入預約烹調結束時間的小時位設置,時鐘位顯示的時間會切換回現時的時間 16:30,



6. 轉動旋鈕直到小時位轉至 18, 按旋鈕確認。(如下圖)然後畫面會自動跳至分鐘選項。

7. 轉動旋鈕直到顯示分鐘轉至 00, 按旋鈕確認。

8. 顯示屏上 () 預約功能圖示會亮起,預約烹調時間切換回現時時間 16:30。表示預約設置完成。(如下圖)

A. 查詢預約狀態

可按設置鍵 🧬 3 秒,以查詢預約結束時間,預約功能圖示會閃爍顯示;再按設置 💕 3 秒,可返回預約設置畫面。

B. 取消預約設定:

如需取消預約設定,可直接按 🔱 電源鍵,即退出預約設定,並自動返回到待機畫面。

注意:預約模式適用於9個主要烹調模式,翻熱麵包模式,慢煮模式和乾果模式。(詳情請參閱第8-10頁控制面板-主要功能介紹 / 詳細説明)

建議:預約設置後,可啟動兒童安全鎖功能,以防止不小心觸摸到控制面板而誤將預約取消。童鎖設置可參見本説明 書第7頁 "控制面板-基本功能説明"內説明。當達到預約的啟動時間,蒸焗爐會正常啟動,不受童鎖影響。

🔳 烹調過程中調校 / 結束後追加時間功能 🗘

A. 烹調過程中進行調校

在烹調過程中,可以根據需要去增加或減少烹調時間和溫度。

例如:已設定的烹調時間 01:40 和溫度 90°C,改為烹調時間 02:00 及溫度 100°C。 操作步驟:

1. 於烹調過程中,按旋鈕暫停烹調,時間位會閃爍。(如下圖)

2. 按設置鍵 🗳 , 自動進入調較設置, 小時位會閃爍; 顯示屏上 🕂 增加烹調時間圖示會亮起。(如下圖)







5. 轉動旋鈕直到顯示溫度轉至 100°C,按旋鈕確認。(如下圖)



6. 設置完成,開始新設置的烹調設定。(如下圖)



34

操作方法説明

3. 轉動旋鈕直到顯示小時位轉至 02, 按設置鍵 💣 確認。(如下圖)然後畫面會自動跳至分鐘選項。



B. 烹調過程結束後追加功能

在烹調過程結束後,可以根據需要去增加烹調時間。

	溫度	時間	
設定範圍	不可調校	1 分鐘 - 59 分鐘	

烹調過程結束後,顯示屏會顯示"End"並發出聲效提示。同時顯示屏上 🕂 增加烹調時間圖示會亮起。 ✨ 接水盤圖示會閃爍約3分鐘(註:接水盤圖示只會在使用蒸氣相關功能後才亮起)。(如下圖)

如增加烹調時間,可根據以下步驟操作: 例如:烹調結束後,追加烹調時間3分鐘。 操作步驟:

1. 按旋鈕確認追加時間功能,顯示屏會自動跳至分鐘位選項。(如下圖)



2. 轉動旋鈕直到顯示分鐘轉至 03,按旋鈕確認。(如下圖)



3. 設置完成,即啟動追加時間烹調。(如下圖)



注意:如果用戶在烹調結束後,3分鐘內沒有進行任何操作,將自動返回到待機狀態。

■ 餘溫高溫提示 📙

在待機狀態或省電模式狀態下,完成煮食後,只要爐腔內的溫度高於 50℃,顯示屏上 高溫提示圖標就會亮起,提 醒用戶爐腔內溫度較高,不適宜進行清潔(如下圖)。直到爐腔內的溫度低於 50°C,顯示屏上高溫提示圖標才會消失, 建議用戶於圖示消失後才進行清潔。



■ 童鎖功能 =-0

用來鎖住按鍵,防止兒童在沒有成人指導的情況下使用蒸焗爐。

A. 啟動童鎖:

可長按 ➡● 童鎖鍵 3 秒鐘,進入童鎖狀態,此時顯示屏上方的童鎖圖示亮起。(如下圖)



B. 解除童鎖

長按 ➡● 童鎖鍵 3 秒鐘,即可解除童鎖,此時顯示屏上方的童鎖圖示會消失。

操作方法説明

清潔及保養

■ 清潔保養

- 1. 在正常情況下,清潔產品是唯一所需的保養方法。 9. 建議最少每一個月或除垢圖示亮起時進行"除垢模
- 2. 請務必在蒸焗爐冷卻狀態下, || 圖示消失後進行清 潔與保養。清潔之前,需切斷電源。請勿使用蒸氣 10.建議使用直接從水喉取的自來水、飲用食水或蒸 清潔器清洗本蒸焗爐。
- 3. 蒸焗爐必須保持清潔,否則可能導致爐身受到腐蝕, 11.水箱必須每月至少檢查一次。如有需要,取出 縮短蒸焗爐的使用壽命,所以每次使用蒸焗爐後, 必須進行清潔。
- 4. 切勿使用含金屬成份的清潔布、磨砂型潔具、 鋼刷、表面粗糙的抹布,否則會對爐身表面、爐 門、控制面板、爐內壁及配件造成損害。應以沾 13.每次使用後,應清潔和風乾爐腔(包括爐腔頂部, 有溫和洗潔精的海綿或軟布或噴上玻璃清潔劑的 廚房紙巾進行清潔。每次使用後,確保爐腔(包 括爐腔底部)是乾透。
- 5. 鹽份是具侵蝕性的物質,一旦積聚在爐腔內,將 形成銹漬。一些帶酸性的醬汁,例如茄汁、芥末和 醃製食品含有氯和酸的化學成份。而該等成份會對 鋼表面造成影響。所以建議每次使用蒸焗爐後,必 須進行清潔。
- 6. 切勿讓油脂及食物碎屑殘留於爐門及爐門封邊上。 假如爐門封邊清潔處理不善,或會影響蒸焗爐操作 時,爐門無法完全關上,繼而導致機前方及兩側部 份損壞。
- 7. 每次使用後,

i) 清理蒸焗爐門底下的黑色接水盤的積水,以 防止積水滿瀉,濺濕及弄髒檯面。(接水盤是可以 拆下的。它會盛載每次蒸煮後玻璃門開門時滴下的 倒汗水。)

ii)清理殘留在水箱未用完的水。

iii) 每次使用後, 打開爐門 15-30 分鐘或進行烘乾 爐腔模式,以風乾爐腔及門框。

8. 如果爐腔非常骯髒,可於清潔前,先以「消毒模 式」(110°C),蒸煮30分鐘,來溶解油漬,待 機身冷卻後,才開始進行清潔。如遇上頑固的油 清,可重覆以上的步驟。切勿使用含金屬成份的清 潔布、磨砂型潔具、鋼刷、表面粗糙的抹布清潔。

- 式"清潔。
- 餾水作烹調用,但避免使用礦泉水。
- 水箱,擦洗乾淨後再放回原處。
- 12. 若長時間不使用本產品時,應拔掉電源插頭, 保持爐腔清潔,並將蒸焗爐放置在通風、乾燥及 沒有腐蝕性氣體的環境中。
- 左右兩側和底部)。如爐底或爐腔有變黃的情況, 可以使用不銹鋼清潔劑去除污漬。(例如:Wpro 不銹鋼清潔劑)

■ 如何拆下爐腔內隔熱罩

A. 內隔熱罩拆卸

1. 使用套筒手板套住固定內隔熱罩的螺絲,按逆時針方向手扭動,可拆下螺絲,取下內隔熱罩;(如下圖)



2. 清潔拆下來的內隔熱罩。(如下圖)



B. 內隔熱罩安裝

將內隔熱罩放入爐腔並對應上背部的螺絲位,用2顆配套螺絲順時針方向扭緊,確保牢固。 注意:整個拆卸與安裝過程,必須小心操作,避免刮傷手或刮花腔體表面。

清潔及保養



■ 如何拆下上發熱管

1. 用雙母指按住上發熱管的固定鋼架(圓形扣位的左右兩旁)[,]稍微用力往後推,如下圖箭頭所示位置;



2. 鋼架脱落後,將上發熱管輕輕往下拉,即可對爐腔頂部進行清潔;(如下圖)



3. 清潔完成後,將上發熱管稍微用力往後壓,扣回上發熱管的固定件。

注意:1. 在扣合的時候,用雙母指並需要稍微用力往後壓,以便鋼架扣位更加容易扣回固定件。 2. 需確保爐腔冷卻, → 圖標消失後,才進行清潔。

■ 故障排解 A. 如出現以下情況 如出現以下情況

	以下情況 如出現以下情況		l	
	如以下情況出現…	可能成因	解決方法	
		蒸焗爐沒有連接到電源	確保蒸焗爐連接電源	
1	顯示屏上顯示消失	插座有問題	用其他電器再測試插座是否有問	
		電源線不能正常工作	與客戶服務部聯絡	
		電源插頭沒有插好	重新插好電源插頭	
		爐門沒有關好	重新關閉爐門	
2	蒸焗爐不能操作	水箱沒有放置妥善	重新放回水箱並妥善安裝	
		電路版損壞	與客戶服務部聯絡	
		兒童安全鎖被鎖住	解除兒童安全鎖	
0	野二豆野二田尚	顯示屏損壞	與客戶服務部聯絡	
3	顯示屏顯示異常	電路板損壞		
4	学知知明于自孙川小子共 运	爐門沒有關上	重新把爐門關上	
4	烹調期間大量排出水或蒸氣	爐門封邊損壞	與客戶服務部聯絡	
_	ᇥᆙᇗᅮᆃ	爐燈損壞	白白丘叩水刘晔从	
5	爐燈不亮	主機電腦板損壞	與客戶服務部聯絡	
6	風扇不能正常運作	風扇電機損壞	與客戶服務部聯絡	
0	風廟个能正吊建作	主機電腦板損壞	—————————————————————————————————————	
7	按鍵失靈	導電橡膠按鍵裝置錯誤或損壞	與客戶服務部聯絡	
1	以與八靈	主機電腦板損壞	איייום מוּעות ודייי	
8		水管被折疊、堵塞或損壞		
	無蒸氣噴出	水泵損壞	與客戶服務部聯絡	
		水箱內無水或水箱沒有放置妥善		
9	蒸焗爐漏水	沒有把儲水箱完整推進到位	請將水箱加滿水並妥善安裝	

40

其他須知

其他須知

B. 下列情況均屬正常

 $- \bigcirc$

	情況	原因
1	首次使用各種燒烤或烤焗模式時,蒸焗爐有少量白煙 冒出及異味。	這是由爐腔裡保護部件的過多油脂揮發所引起的。這 屬於正常現象,非損壞。
2	使用蒸氣相關功能時有聲音	水箱吸水時或會混入空氣造成聲音,是正常現象。
3	蒸氣凝結在出風口或蒸氣從爐門四周縫隙處溢出	使用與蒸氣相關的功能時,蒸焗爐運轉過程中爐腔內 會產生大量蒸氣,爐腔內多餘的蒸汽會通過出風口排 出,但少部分蒸汽由於環境溫度,會凝結在出風口口 處,或部分蒸氣可能從門縫四周漏出,這是正常現象。
4	烹調結束後風扇仍在工作	烹調結束後,風扇會延時工作3分鐘,將腔體內的熱量 排出。這是產品冷卻爐腔和電子元件,屬於正常現象。
5	如發現有白色粉末在入氣口流出	這是水垢,是正常現象。如發現白色粉末(水垢), 請啟動除垢模式,以清潔水管。
6	如爐腔 / 爐底有變黃現象	不銹鋼受熱後,如清潔處理不善,會產生變黃現象。 建議每次使用蒸焗爐後,進行清潔以避免變黃現象產 生。

■ 產品規格

CS2320	
220-240V~ 50/60Hz	
2050W	
405 x 530 x 457 毫米	
244 x 387 x 342 毫米	
32L	
約 25 kg	

其他須知

Important Safety Information
Precautions before First Use
Precautions and Advice •••••••
Mounting the Appliance
Earthing Instructions · · · · · · · · · · · · · · · · · · ·
Appliance and Accessories Chart ••••••
Control Panel
Control Panel – Basic Functions
Control Panel – Special Functions
Control Panel – Major Features
Control Panel – Description of Major Features · · · ·
Use and Cooking Tips ••••••••••••••••••••••••••••••••••••
Recommended Recipes ••••••

Operation Instructions

Setting the Clock ····· Steam Mode Turbo Convection Mode •••••••• Upper/Bottom Grill/Conventional Bake Mode · · · · Convection Mode Forced Air Mode Forced Air + Steam Mode Convection + Steam Mode •••••••••••• Bread Reheat Mode Slow Cook Mode Preheat Mode Adjust or Increase the Cooking Time during/after Cooking is Completed Residual Heat Indicator Child Lock ••••••

Table of Contents

	Cleaning and Maintenance	Page
Page		
	Cleaning and Maintenance	••85
•• 46	How to Remove the Back Panel ••••••	••86
•• 46	How to Lower the Upper Heater	••87
•46-47		
•• 48	Others	Page
•• 49		
•49-50	Troubleshooting	88-89
•• 51	Product Specifications • • • • • • • • • • • • • • • • • • •	••90
• 52		
•• 53		
•• 54		
•55-57		
•• 58		
• 59		

Page

•	60			
•	61			
•	62			
•	63			
•	64			
•	65			
•	66			
•	67			
•	68			
•	69			
•	70			
•	71			
•	72			
7	'3-74			
•	75			
	76			
•	77			
7	'8-79			
8	80-81			
8	82-83			
•	84			
•	84			

Important Safety Information

This manual contains important information on safety, use and maintenance of the product. Please read the manual carefully and keep it in an easily accessible place for future reference.

Precautions before First Use

- 1. Two or more people are required to install or move this appliance as it is heavy. It must be securely placed on a firm and level surface. Failure to do so can cause physical injuries or damage to the appliance.
- 2. This appliance is designed solely for indoor and 2. If the power cord is damaged, it must be replaced by domestic use. Follow the cooking instructions indicated in the manual. Do not use this appliance for outdoor, commercial or any other purposes.
- 3. Check that the voltage on the rating label corresponds to the voltage in your home.
- 4. Ensure that the appliance is not damaged. Do not operate the appliance if it has a damaged mains cord or plug. If it is not working properly, or it has been damaged or dropped. Please contact Whirlpool Customer Services.
- 5. Do not immense the power cord or plug in water. Keep the power cord away from hot surfaces to avoid electrical shock, fire or other accidents.
- 6. This combi steamer is designed for free standing installation. Do not install as a built-in appliance.
- 7. Allow adequate ventilation space on all sides and do not place any object on top. Keep a minimum distance of 5cm between the combi steamer and any overhead wall cabinet; and a minimum distance of 1cm between both sides of the appliance and the walls.
- 8. To avoid damage to the appliance, do not block the 8. ventilation vent.
- 9. Run the "Sterilization Mode" for 30 minutes to clean and sterilize the combi steamer before first use.
- 10. The manufacturer disclaims all liability for faults arising from improper use of this appliance.
- 11. Warm steam is emitted from the front ventilation vent. Blocking the outlets will result in damage to the combi steamer.
- 12. Use heat resistant utensils for cooking, such as heat resistant glass and heat resistant plastic. Non-heat

resistant containers should not be used with combi steamer. For steaming functions, container with heat resistant >120°C should be used. For convection functions, container with heat resistant >250°C should be used.

13. Odour will be emitted from the cavity when using different baking functions for the first time. It is normal.

Precautions and Advice

- 1. Stop using the combi steamer and contact Whirlpool Customer Service immediately if the door or door seal is damaged
- the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 3. To avoid fire hazard or explosion, do not heat or use flammable materials in or near the appliance.
- 4. To avoid fire hazard, do not use the appliance to dry cloth, paper, spices, herbs, wood, flowers or other flammable objects.
- 5. Overcooking food poses a fire hazard.
- 6. Never leave the appliance unattended during use, particularly when cooking with paper, plastic or other flammable materials. Paper may catch fire or get burned and some plastic materials may melt when heating up food with the appliance. If any object inside or outside the appliance is ignited or emits smoke, close the appliance door and switch off the combi steamer. Disconnect the power supply and the socket with circuit leakage breaker
- 7. This combi steamer is specifically designed to heat or cook food. It is not designed for industrial or laboratory used.
- This combi steamer is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or instruction of a person responsible for their safety.
- 9. After cooking, clean the combi steamer only when it has completely cooled down. Wipe away any food debris or waste inside the oven. Top of the oven cavity gets burned easily and care should be taken to keep it clean. For best cooking results, keep the combi steamer completely dry by opening the door every time after cookina.

General Preparation and Advice before Use

- 10. Use oven gloves to take food and containers out of the 25. When combi steam is plugged, never touch the appliance to avoid burning. appliance, the power cord or plug with wet hands or other wet body parts. 11. To avoid a hazard, do not touch the upper heater in the
- oven when using the appliance.
- 12. Do not use the combi steamer for storage.
- 13. After heating food or beverages in nursing bottles or infant food cans, always stir and check the temperature before serving. This will ensure that heat is evenly distributed and the risk of scalding or burns can be avoided.
- 14. Wait 10-15 minutes after each program before continuing to another mode.
- 15. Steam will be rapid evaporated and not easily be seen if the oven cavity at the high temperature or just finished all convection modes. It is normal.
- 16. Do not touch the door and door frame when using the appliance.
- 17. Fill the water tank with tap water, drinking water or distilled water up to the MAX mark (maximum level). Insert the water tank into the appliance completely until it clicks to ensure it is fixed in the right position.
- 18. If the water tank is cracked or damaged, stop using it to avoid power leakage or electrical shock caused by water leakage
- 19. For hygienic reasons and prevent condensation inside the combi steamer. Empty the water tank and keep the combi steamer completely dry every time after cooking.
- 20. Do not fill the water tank with any liquids other than water (except descaler).
- 21. To avoid condensation and oven temperature drops, do not open the oven door when cooking with "Steam" mode unless it is absolutely necessary. If you have opened the oven door, extend the cooking time accordingly.
- 22. If it is necessary to open the oven door to turn the food or for other purposes during cooking, keep a distance from the oven door (particularly the face) to prevent scalding.
- 23. All maintenance and repairs should be carried out by similarly qualified person. It is dangerous to fix the appliance by anyone except similarly qualified person. Never dismantle, repair or modify the appliance by yourself.
- 24. Accessible parts of the appliance may become hot during use. Young children should be kept away.

- 26. Do not place or hang any objects on the oven door or the door handle. It may affect door's opening and closing or damage the door hinges.
- 27. After cooking ends, the electric fan will continue running for a certain period of time to cool down the cavity.
- 28. The combi steamer and its parts should be kept clean. Failure to do so will result in deterioration of the appliance surface and affect its life cycle. It may also cause danger.
- 29. Remove the power supply plug before cleaning. Do not use corrosive cleaners as they may cause damage or corrosion.
- 30. Water in the water tank will be heated up and discharged to the drip tray during "Descaling Mode". Do not allow children to touch or go near the combi steamer.
- 31. Remove the power supply plug before cleaning the cavity. If you need to clean the fan, remove the back panel of the oven carefully. Put it back in place as instructed after cleaing. (Please refer to "How to Remove the Back Panel" in this instruction manual)
- 32. Clean dust from the power supply plug on a regular basis. If the product will not be used for a long time, remove the power supply cord. Do not pull the power supply cord but hold the plug to remove it.
- 33. Never leave the combi steamer in operation unattended.
- 34. Overheated fat and oil catch fire easily. Except grilling meat, heating oil during cooking is dangerous. Such practice should never be allowed.
- 35. Maximum load for the oven door is 7kg. To avoid damaging the combi steamer, do not place food or heavy objects on the oven door.

Mounting the Appliance

1. Good ventilation must be ensured around the combi steamer. Do not place any objects on top of the appliance and allow a minimum distance of 5cm between the combi steamer and any overhead wall cabinet. Keep a minimum distance of 1cm between both sides of the appliance and walls. Appliance back can be closed to the wall.



- 2. To prevent fire, do not block the air outlet and steam outlet. Maintain the product regularly and prevent foreign matter and dust from blocking the air outlet and steam outlet.
- 3. Do not put the appliance in a hot or humid place, such as gas stove, electrified areas or sink.
- 4. This appliance must be placed on a firm and stable surface.

General Preparation and Advice before Use

Earthing Instructions

This appliance must be earthed. In case of electric leakage, the ground can provide a current loop to avoid electric shock. The power supply plug that comes with this appliance must be inserted into a single-phase-bipolar socket with grounding.

Appliance and Accessories Chart



- 2. Air Outlet: To exhaust excessive steam from the cavity.
- 3. Oven Light: To light up the oven to observe the food being cooked.
- 4. Air Inlet: To discharge excess steam from the cavity to Air Outlet.
- 5. Upper Heater: To generate heat to cook food.
- 6. Water Tank: To be filled with water to generate steam.
- 7. Steam Inlet: To release steam into the cavity.
- 8. Oven Door: 1. Make sure the door is closed before starting to cook.
 - 2. The combi steamer will pause if you open the oven door during cooking. The selected mode will continue automatically once the door is closed.
- 9. Drip Tray: To collect excess water when the door is open and foul water from Descaling Mode.

1. Control Panel: To operate the combi steamer (For details see the control panel instructions P.51-57).



Control Panel



1. Grill Rack

- (A) Mainly for modes that cook with the heater, such as "Grill", "Convection" or "Forced Air" mode.
- (B) For multi-layers cooking, it is recommended to place the grill rack on the lowest level for better air circulation and even oven temperature.
- (C) When grilling food without any container, please place baking paper or aluminum foil onto the grill rack before cooking.

2. Steam Tray (with holes)

- (A) Mainly for the "Steam" mode. Designed with vent holes, it can also be used for other cooking modes.
- (B) For multi-layer cooking, it is recommended to place the steam tray on a lower level to aid internal air circulation and even oven temperature. For 3 layers cooking, it is recommended to place steam tray on a middle level.

3. Baking Tray (oil collector)

- (A) Mainly for the "Forced Air + Steam", "Convection + Steam" or "Forced Air" mode. It can also be placed at the bottom level to collect dripping oil when cooking meat.
- (B) When baking food without any container, please place baking paper or aluminum foil onto the baking tray.

4. Insulated gloves

To take food or rack out from the combi steamer.

5. Sponge

To remove condensation inside the oven.

General Preparation and Advice before Use

Control Panel – Basic Functions

Icon	Function Descriptions
\bigcirc	Rotary Knob Function / Time / Temperature Settings Rotary Knob Button Confirm / Start / Pause Settings
¢	 Setting Button 1. Setting the clock: In standby mode, press and hold the setting button for 3 seconds to enter the clock setting screen to set the clock (See "Setting the Clock" on page 60 for detailed instructions). 2. Preset function: After setting the cooking mode, cooking time and cooking temperature, press the setting button to enter the preset screen to preset the timer (See "Preset Function" on page 80-81 for detailed instructions). 3. In pause mode, press the setting button to reset cooking time and temperature (See "Adjust the cooking time during cooking process" on page 82 for detailed instructions).
5	 Return Button Return / Reset; Press the return button during setting to go back to the previous screen or reset cooking modes or cooking time. Mute Mode To activate mute mode: In standby mode, press and hold the button for 3 seconds to activate the mute mode. The mute icon lights up on the display panel. To release mute mode: In standby mode, press and hold the return button for 3 seconds while it is activated.
-`(<u> </u>) ≣	 Oven Light Button 1. Touch once to switch the light on for 3 minutes. The oven light icon will not light up on the display panel. 2. Press and hold for 3 seconds, the oven light will stay on. The oven light icon will light up on the display panel. Press and hold for 3 seconds again to switch off the oven light. 3. The oven light will light up for 3 minutes when the door is open.
_ 0	 Child Lock Button Press and hold the button for 3 seconds to activate / release the child lock. To activate child lock: Press and hold the button for 3 seconds. The control panel will be locked and no operation is possible. The child lock icon lights up on the display panel. To release child lock: To release, press and hold the child lock button for 3 seconds while it is activated.
Ċ	Power Button After 5 minutes without operation after activate the combi steamer, including opening or closing the oven door. Combi steamer will automatically enter to power-saving mode, display panel goes out. In power-saving mode, only power button is operable.

General Preparation and Advice before Use

Control Panel – Special Functions

Combination Button	Icon	
Combination Button: Cavity temperature display	ઌ૿ +-૽ૺ૽ૢૼ-	To di To

Function Descriptions

To change temperature display to actual oven temperature, press the [Setting] + [Oven Light] buttons simultaneously for 3 seconds during operation.

To go back to the set cooking temperature, press the [Setting] + [Oven Light] buttons simultaneously for 3 seconds.

Control Panel – Major Features

■ Control Panel – Description of Major Features



Actual Temperature Setting

This indicates the actual oven temperature during cooking. When changed to this temperature display, the thermostat icon lights up.

Icon	Mode	Function Descriptions	Default Time/ Temperature	Time/ Temperature Selection Range
ت	Steam	Steam cooking preserves the original taste, nutrients and color of food cooked. It is suitable for steaming vegetables, meat and seafood or braising soup.	30 minutes / 100°C	Time: 5-419 mins (maximum 6 hours 59 mins) Temperature: 50-110°C
R	Turbo Convection	Cooking time is shortened in this mode to bake and roast food quickly. It is suitable for baking large meat and cakes.	30 minutes / 180°C	Time: 5-239 mins (maximum 3 hours 59 mins) Temperature: 100-230°C
	Upper Grill	Suitable for roasting baking- food or at a final stage of roasting or baking. It helps browning the surface of your dish.	30 minutes / 180°C	Time: 5-239 mins (maximum 3 hours 59 mins) Temperature: 100-230°C
	Bottom Grill	Suitable for baking the final stage or for food that needs to be cooked from the bottom periodically during cooking. e.g. pizzas, macaroon.	30 minutes / 180°C	Time: 5-239 mins (maximum 3 hours 59 mins) Temperature: 100-230°C
	Conventional Bake	Traditional single-level baking and grilling mode. Heat is released from the top and bottom to get food baked evenly. Suitable for cooking meat, fish, bread and cookies, pastries and desserts etc., and particularly suitable for cakes with moist ingredients at the top.	30 minutes / 180°C	Time: 5-239 mins (maximum 3 hours 59 mins) Temperature: 100-230°C
~	Convection	The upper and bottom heater and rear fan operate simultaneously in this mode. Suitable for all baking dishes, such as meat, seafood, pizzas, bread and cookies, pastries and desserts.	30 minutes / 180°C	Time: 5-239 mins (maximum 3 hours 59 mins) Temperature: 100-230°C

General Preparation and Advice before Use

lcon	Mode	Function Descriptions	Default Time/ Temperature	Time/ Temperature Selection Range
R	Forced Air	The appliance comes with a rear fan which distributes the hot air produced by the rear heater evenly inside the oven. Food on different levels are heated evenly. It can be used in cooking multiple levels.	30 minutes / 180°C	Time: 5-239 mins (maximum 3 hours 59 mins) Temperature: 100-230°C
C C	Forced Air + Steam	Cooking food with hot air and steam to prevent moisture loss during high baking temperature. The rear fan produces good circulation of hot air to ensure even heating on multiple levels. This mode is suitable for all types of food.	30 minutes / 180°C	Time: 5-419 mins (maximum 6 hours 59 mins) Temperature: 100-230°C
S.	Convection + Steam	This mode combines upper, lower heat, hot air and steam cooking. It is a perfect all-in-one combination cooking. Adding steam during the cooking process can prevent moisture loss during high temperature cooking. Suitable for cooking all types of food, such as large cuts of meat or baking moist cakes.	30 minutes / 180°C	Time: 5-419 mins (maximum 6 hours 59 mins) Temperature: 100-230°C
	Proving	This mode works with steam to ensure stable and humidity inside the oven. It allows doughs (for pizzas or bread) to rise quicker in a stable environment, and it used for fermenting pizzas or bread.	30 minutes / 35°C	Time: 5-419 mins (maximum 6 hours 59 mins) Temperature: 30-40°C
	Bread Reheat	Bread is reheated at a regulated temperature and steam is added to reheat bread that tastes just like freshly-baked. Two heating modes are available: Room temperature bread and refrigerated bread.	10 minutes	Time: 5-59 mins Temperature: Cannot be adjusted
	Slow Cook	Steam is injected to maintain temperature inside the oven for slow cooking. Low temperature is used, meat and seafood can be preserved the original flavor without overcooking. Food can be placed in vacuum bags for this mode.	30 minutes / 60°C	Time: 5-419 mins (maximum 6 hours 59 mins) Temperature: 50- 90°C

lcon	Mode	Function Descriptions	Default Time/ Temperature	Time/ Temperature Selection Range
	Drying Fruit	Food is dehydrated with hot air in low heat. Suitable for preparing dried fruit and sliced vegetable or meat jerkies.	60 minutes / 80°C	Time: 5-779 mins (maximum 12 hours 59 mins) Temperature: 40-90°C
*	Defrost	Defrost chilled or frozen food.	30 minutes / 55°C	Time: 5-419 mins (maximum 6 hours 59 mins) Temperature: 50-60°C
	Preheat – Steam	Oven is heated to preset temperature by steam.	Present time / 100°C	Temperature: 50-110°C
	Preheat – Baking	Oven is heated to preset temperature by baking function.	Present time / 180°C	Temperature: 100-230°C
	Sterilization At sterilization temperature 110 sterilize dinnerw feeding bottles.		30 minutes / 110°C	Time: 5-419 mins (maximum 6 hours 59 mins) Temperature: 110°C
	Keep Warm Keeping for air. Suitable dishes warm		30 minutes / 55°C	Time: 5-239 mins (maximum 3 hours 59 mins) Temperature: 50-60°C
Cavity Drying		In this mode, the oven is heated to a high temperature so any excessive moisture and steam are evaporated. This function is used for drying the oven after any steam cooking modes.	25 minutes	Time: Cannot be adjusted Temperature: Cannot be adjusted
Descaling		Descaling icon will be on once combi steamer has reached 100 hours steam related cooking time to remind the user to run descaling programme mode. A descaler is required.	50 minutes	Time: Cannot be adjusted Temperature: Cannot be adjusted

56

General Preparation and Advice before Use

General Preparation and Advice before Use

Use and Cooking Tips

- 1. Minimum time setting is 5 minutes for all cooking modes (Except the "Increase the Cooking Time after Cooking is 5. Completed" function).
- 2. After cooking is done, the fan will continue to work for 3 minutes for cool down purpose. This is normal.
- 3. The combi steamer will pause automatically if you open the oven door during cooking. Cooking will continue automatically at the set time and temperature once the door is closed.
- 4. Take extra care when removing container from the oven after heating, like soup, sauce or beverage. To prevent over boiling, following steps should be taken in cooking liquid.
- (a) Do not over-heat liquid food. Boiling liquid may splash out and cause scalding when you remove it from the combi steamer.
- (b) When heating up liquid food, make sure the container is at most 80% full because a small amount of liquid may splash out suddenly when boiled.
- (c) Stir the liquid before and during heating.
- (d) Allow the food to stand inside the combi steamer for a while when heating is done. Stir it gently before removing.
- (e) When using a feeding bottle or heating baby food, stir or shake the food and check the temperature before

feeding to avoid burning.

- Only use a thermometer designed for ovens to check food temperature during cooking, if necessary. If longer cooking time is required, put the food back into the combi steamer to continue cooking.
- 6. To avoid overheating or over-browning, it is recommended to take the food out when roasting or steaming is finished.
- 7. To maintain constant temperature during cooking, do not open the oven door unless it is necessary. To avoid affecting oven temperature, do not open the oven door to check food during cooking. If you have opened the oven door, extend the cooking time accordingly.
- 8. To ensure even browning and cooking, adjust or turn the food's position or direction of the steam or grill plate halfway during heating.
- 9. Tray Placement Tips

For single layer cooking: It's recommended to place a tray on the 3rd layer.

For two layers cooking: It's recommended to place a tray on the 2nd and 4th layer.

For multi-layers cooking: It's recommended to place a tray on the 2nd, 3rd and 4th layer.



The suggested tray placement above is solely for reference. Tray placement is affected by the quantity, type and shape of food and containers.

Recommended Recipes

Dish	Ingredients	Category	Cooking mode	Temper- ature	Cooking Time	Pre- heat	Suggested Tray	Tray Placement
Flowering Chinese Cabbage	App.1/2 catty	Vegetable	Steam	110°C	5 mins	Yes	Steam Tray	3rd layer
Steamed egg	1 egg + 2 portions of water	Egg	Steam	100°C	9 mins	Yes	Steam Tray	3rd layer
Steamed rice	120g rice + 120g water	Grain	Steam	100°C	25 mins	No	Steam Tray	3rd layer
Bear's heads, conch and lean pork soup	300g ingredients + 1000g water	Soup	Steam	100°C	180 mins	No	Steam Tray	3rd layer
Steamed minced pork	370g	Meat	Steam	100°C	25 mins	Yes	Steam Tray	3rd layer
Roast chicken thighs	4 chicken thighs	Meat	Convection + Steam	200°C	18 mins	Yes	Grill Rack/ Baking Tray	3rd layer
Minced pork and rice hot pot	150g minced pork + 100g rice + 100g water	Meat + Grain	Convection + Steam	180°C	40 mins	Yes	Grill Rack/ Baking Tray	3rd layer
Muffins with raisins	12 pieces	Bread	Turbo Convection	180°C	22 mins	Yes	Baking Tray	2nd and 4th layer
Round buns	230g	Bread	Turbo Convection	180°C	25 mins	Yes	Baking Tray	3rd layer
Chocolate brownies	6 pieces	Dessert	Convection	180°C	20 mins	Yes	Baking Tray	3rd layer
Macarons	12 pieces	Dessert	Bottom Grill	140°C	15 mins	Yes	Baking Tray	4th layer
Frozen filling bread	1 piece	Bread	Bread Reheat mode 1	Default	12 mins	No	Grill Rack/ Baking Tray	3rd layer
Room temperature filling bread	1 piece	Bread	Bread Reheat mode 2	Default	10 mins	No	Grill Rack/ Baking Tray	3rd layer
Frozen bread	1 piece	Bread	Bread Reheat mode 1	Default	10 mins	No	Grill Rack/ Baking Tray	3rd layer
Room temperature bread	1 piece	Bread	Bread Reheat mode 2	Default	8 mins	No	Grill Rack/ Baking Tray	3rd layer

doneness, starting temperature as well as the quantity, size and shape of food and containers.

The suggested cooking time above is solely for reference. Cooking time and results are affected by the preferred degree of

Setting the Clock

When the appliance is first powered on, it will beep and returned to standby mode. The default clock display is 12:00. The display panel lights up completely.



The combi steamer returned to energy saving mode if no button is pressed or door is opened for 5 minutes. Under energy saving mode, display will be turned off, only the power button can be used. Press the power button to exit the energy saving mode and back to the startup screen.

Example: Set the clock to the current time 13:20.

Steps:

1. On the standby screen, press and hold the setting button $\mathbf{d}^{\mathbf{r}}$ for 3 seconds. The hour digits flash.

(as shown in the diagram below)

12:00

2. Set the hour by turning the knob. When the hour reaches 13, press the knob to confirm. (as shown in the diagram below) The display will change to the minute setting automatically. The minute digits flash.



3. Set the minute by turning the knob. When the minute reaches 20, press the knob to confirm. (as shown in the diagram below)

13:20

4. Time setting is complete. (as shown in the diagram below)



Important: If no action is taken within 5 minutes during the setting process, all settings will be cancelled and the display will return to the standby screen. The combi steamer is in standby.

Steam Mode

Steam cooking preserves the original taste, nutrients and color of food. It is suitable for steaming vegetables, meat and seafood or braising soup. Always ensure the water tank is filled before using this mode.

	Temperature	Time
Default Setting	100°C	30 mins
Setting Range	50°C - 110°C	5 mins - 6 hours and 59 mins

Example: Set the cooking time to 1 hour and 40 minutes; cooking temperature is 90°C. Steps:

the diagram below). The display will jump to hour setting automatically.



jump to minute setting automatically.



will jump to temperature setting automatically.



4. Turn the knob until the temperature display shows 90°C. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking.

Operation Instructions

1. In standby mode, turn the knob clockwise to (>) Steam Mode. The icon will flash. Press the knob to confirm (as shown in

2. Turn the knob until the hour display shows 01. Press the knob to confirm (as shown in the diagram below). The display will

3. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below). The display

Turbo Convection Mode



Cooking time is shortened in this mode to bake and roast food quickly. It is suitable for baking large meat and cakes. It is recommended to place aluminum foil or baking paper onto the baking tray before cooking.

	Temperature	Time
Default Setting	180°C	30 mins
Setting Range	100°C - 230°C	5 mins - 3 hours and 59 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 210°C.

Steps:

1. In standby mode, turn the knob clockwise to 🕑 Turbo Convection Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



2. Press the knob to confirm the 00 hour setting. (as shown in the diagram below). The display will jump to minute setting automatically.

3. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.



4. Turn the knob until the temperature display shows 210°C. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking.

Operation Instructions

Upper/ Bottom Grill/ Conventional Ba

Three grill modes are available: upper grill, bottom grill and conventional bake (upper and bottom grill). You can select a suitable mode according to the types of food and cooking result that you are looking for. It is recommended to place aluminum foil or baking paper onto the baking tray before cooking.

Upper Grill Mode: Suitable for roasting baking food or at a final stage of roasting or baking. It helps browning the surface of your dish.

during cooking, e.g. pizzas, macaroon.

Conventional Mode: Traditional single-level baking and grilling mode. Heat is released from the top and bottom to get food baked evenly. Suitable for cooking meat, fish, bread and cookies, pastries and desserts etc., and particularly suitable for cakes with moist ingredients at the top.

	Temperature	Time
Default Setting	180°C	30 mins
Setting Range	100°C - 230°C	5 mins - 3 hours and 59 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 210°C. Steps:

knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



automatically.



will jump to temperature setting automatically.





5. Setting is complete. The combi steamer will start cooking.

	\square	\square	\square
ake Mode	\bigcup		

Bottom Grill Mode: Suitable for baking in the final stage or for food that needs to be cooked from the bottom periodically





Convection Mode

~

The upper and lower heaters and rear fan operate simultaneously in this mode. Suitable for all baking dishes, such as meat, seafood, pizzas, bread and cookies, pastries and desserts. It is recommended to place aluminum foil or baking paper onto the baking tray before cooking.

	Temperature	Time
Default Setting	180°C	30 mins
Setting Range	100°C - 230°C	5 mins - 3 hours and 59 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 210°C.

Steps:

1. In standby mode, turn the knob clockwise to 🗹 Convection Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



2. Press the knob to confirm the 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.

3. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.

4. Turn the knob until the temperature display shows 210°C. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking.

Operation Instructions

■ Forced Air Mode 🕄

The appliance comes with a rear fan which distributes the hot air produced by the rear heater evenly inside the oven. Foods on different levels are heated evenly. It can be used in cooking multiple levels. It is recommended to place aluminum foil or baking paper onto the baking tray before cooking.

	Temperature	Time
Default Setting	180°C	30 mins
Setting Range	100°C - 230°C	5 mins - 3 hours and 59 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 210°C. Steps:

in the diagram below). The display will jump to hour setting automatically.



automatically.



will jump to temperature setting automatically.



4. Turn the knob until the temperature display shows 210°C. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking.

1. In standby mode, turn the knob clockwise to 🕙 Forced Air Mode. The icon will flash. Press the knob to confirm (as shown

2. Press the knob to confirm the 00 hour setting (as shown in the diagram below). The display will jump to minute setting

3. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below). The display

■ Forced Air + Steam Mode

Cooking food with hot air and steam to prevent moisture loss during high temperature cooking. The rear fan provides good circulation of hot air to ensure even heating on multiple levels. This mode is suitable for all types of food. It is recommended to place aluminum foil or baking paper onto the baking tray before cooking. Always ensure the water tank is filled before using this mode.

	Temperature	Time
Default Setting	180°C	30 mins
Setting Range	100°C - 230°C	5 mins - 6 hours and 59 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 210°C.

Steps:

1. In standby mode, turn the knob clockwise to 🕙 Forced Air + Steam Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



2. Press the knob to confirm the 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.

3. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.

4. Turn the knob until the temperature display shows 210°C. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking.

Operation Instructions

■ Convection + Steam Mode \Im

This mode combines upper, lower heat, hot air and steam cooking. It is a perfect all-in-one combination cooking. Adding steam during the cooking process can prevent moisture loss during high temperature cooking. Suitable for cooking all types of food, such as large cuts of meat or baking moist cakes. It is recommended to place aluminum foil or baking paper onto the baking tray before cooking. Always ensure that the water tank is filled before using this mode.

	Temperature	Time
Default Setting	180°C	30 mins
Setting Range	100°C - 230°C	5 mins - 6 hours and 59 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 210°C. Steps:

(as shown in the diagram below). The display will jump to hour setting automatically.



automatically.



will jump to temperature setting automatically.





5. Setting is complete. The combi steamer will start cooking.

1. In standby mode, turn the knob clockwise to 🕑 Convection + Steam Mode. The icon will flash. Press the knob to confirm

2. Press the knob to confirm the 00 hour setting (as shown in the diagram below). The display will jump to minute setting

3. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below). The display

4. Turn the knob until the temperature display shows 210°C. Press the knob to confirm (as shown in the diagram below).

\square Proving Mode

This mode works with steam to ensure stable high temperature and humidity inside the oven. It allows dough (for pizza or bread) to rise quicker in a stable environment, and is used for fermenting dough for pizzas or bread. Always ensure that the water tank is filled before using this mode.

	Temperature	Time
Default Setting	35°C	30 mins
Setting Range	30°C - 40°C	5 mins - 6 hours and 59 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 35°C.

Steps:

1. In standby mode, turn the knob clockwise to 🔄 Proving Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



2. Press the knob to confirm the 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.



3. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.



4. Turn the knob to confirm the 35°C temperature setting (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking (as shown in the diagram below).



Bread Reheat Mode



Bread is reheated at a regulated temperature and steam is added to reheat bread that tastes just like freshly-baked. Two heating modes are available: Room temperature bread and refrigerated bread. Always ensure that the water tank is filled before using this mode.

Suggested cooking time: Reheating time for frozen bread: about 10-15 minutes; Reheating time for room temperate bread: about 8-13 minutes. It is recommended to add 5-10 minutes for bread with fillings. This suggested cooking time is solely for reference. Cooking time is affected by the bread's quantity, size, type and personal taste.

	Temperature	Time
Default Setting	10 mins	"1" Refrigerated bread
Setting Range	5 - 59 mins	"1" Refrigerated bread / "2" Room temperature bread

Example: Cooking bread that has been refrigerated. Set the cooking time to 25 minutes Steps:

shown in the diagram below). The display will jump to minute setting automatically.



will jump to mode options automatically.



Press the knob to confirm (as shown in the diagram below).



If you wish to change the mode, turn the knob until mode "2" is displayed if necessary. Press the knob to confirm.



4. Setting is complete. The combi steamer will start cooking (as shown in the diagram below).



Operation Instructions

1. In standby mode, turn the knob clockwise to 🖄 Bread Reheat Mode. The icon will flash. Press the knob to confirm (as

2. Turn the knob until the minute display shows 25. Press the knob to confirm (as shown in the diagram below). The display

3. The combi steamer will enter bread type options. Default option is "1", refrigerated bread reheat mode.

Important: The function of "Combination Button: Cavity temperature display" is not available in this mode.
■ Slow Cook Mode

Steam is injected to maintain temperature inside the oven for slow cooking. Low temperature is used, meat and seafood can be preserved the original flavor without overcooking. Food can be placed in vacuum bags. Always ensure that the water tank is filled before using this mode.

	Temperature	Time
Default Setting	60°C	30 mins
Setting Range	50°C - 90°C	5 mins - 6 hours and 59 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 60°C.

Steps:

1. In standby mode, turn the knob clockwise to 🖉 Slow Cook Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



2. Press the knob to confirm the 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.



3. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.



4. Press the knob to confirm 60°C temperature setting. (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking (as shown in the diagram below).







Food is dehydrated with hot air in low heat. Suitable for preparing dried fruit and vegetable slices or meat jerkies.

	Temperature	Time
Default Setting	80°C	60 mins
Setting Range	40°C - 90°C	5 mins - 12 hours and 59 mins

Example: Set the cooking time to 2 hours; cooking temperature is 90°C. Steps:

shown in the diagram below). The display will jump to hour setting automatically.



jump to minute setting automatically.



setting automatically.



4. Turn the knob until the temperature display shows 90°C. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking (as shown in the diagram below).



Operation Instructions

1. In standby mode, turn the knob clockwise to 🖉 Drying Fruit Mode. The icon will flash. Press the knob to confirm (as

2. Turn the knob until the hour display shows 02. Press the knob to confirm (as shown in the diagram below). The display will

3. Press the knob to confirm the 00 minute setting (as shown in the diagram below). The display will jump to temperature

Defrost Mode

Defrost chilled or frozen food with steam. Always ensure that the water tank is filled before using this mode.

	Temperature	Time
Default Setting	55°C	30 mins
Setting Range	50°C - 60°C	5 mins - 6 hours and 59 mins

Example: Set the cooking time to 1 hour and 40 minutes; defrosting temperature is 60°C.

Steps:

1. In standby mode, turn the knob clockwise to $\binom{*}{\delta}$ Defrost Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



2. Turn the knob until the hour display shows 01. Press the knob to confirm (as shown in the diagram below). The display will jump to minute setting automatically.



3. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.



4. Turn the knob until the temperature display shows 60°C. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking (as shown in the diagram below).





Preheat Mode

The Preheat Mode can be operated with steam or baking mode. The oven will be heated to preset temperature.

	Steam Preheating	Baking Preheating
Temperature		Temperature
Default Setting	100°C	180°C
Setting Range	50°C - 110°C	100°C - 230°C

Oven will automatically adjust the cooking time according to set temperature. "END" will be displayed and an audio tone will be heard when the temperature reaches the preset temperature. Current time is displayed during preheating. Always ensure that the water tank is filled before using steam preheating. Example: Set the steam preheating temperature to 100°C. Steps:

Press the knob to confirm (as shown in the diagram below).



(as shown in the diagram below).



3. Setting is complete. The combi steamer will start preheating (as shown in diagram below).



72

1. In standby mode, turn the knob clockwise to I Preheat Mode. The icon will flash. Steam is the default setting.

2. The display will jump to temperature setting automatically. Press the knob to confirm the default temperature 100°C

Example: Set the baking preheating temperature to 200°C.

Steps:

1. In standby mode, turn the knob clockwise to Preheating Mode. The icon will flash. Steam is the default setting. Turn the knob to select the baking preheating mode, and then press the knob to confirm (as shown in the diagram below).



2. The display will jump to temperature setting automatically. Turn the knob until the display shows 200°C. Press the knob to confirm (as shown in the diagram below).



3. Setting is complete. The combi steamer will start preheating (as shown in the diagram below).



When preheating is complete, the display will show "END" and an audio tone will be heard (as shown in the diagram below). After preheating the combi steamer, you can select other cooking modes to continue your cooking as required.



Important: The function of "Adjust or Increase the Cooking Time during/after Cooking is Completed" is not available in this mode.

$|\langle \rangle$ Sterilization Mode

At sterilizing mode, high temperature 110°C is used to sterilize dinnerware, cutlery or feeding bottles. Always ensure that the water tank is filled before using this mode.

Temperature		Time
Default Setting	110°C	30 mins
Setting Range	Cannot be adjusted	5 mins - 6 hours and 59 mins

Example: Set the cooking time to 35 minutes. Steps:



automatically.



3. Turn the knob until the minute display shows 35. Press the knob to confirm (as shown in the diagram below).



4. Setting is complete. The combi steamer will start cooking (as shown in the diagram below).



Operation Instructions

1. In standby mode, turn the knob clockwise to 💮 Sterilization Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.

2. Turn the knob to confirm the 00 hour setting (as shown in the diagram below). The display will jump to minute setting

Кеер	Warm	Mode	1:0
------	------	------	-----

Keeping food warm with hot air. Suitable for keeping cooked dishes warm.

	Temperature	Time
Default Setting	55°C	30 mins
Setting Range	50°C - 60°C	5 mins - 3 hours and 59 mins

Example: Set the cooking time to 1 hours and 30 minutes; cooking temperature is 60°C. Steps:

1. In standby mode, turn the knob clockwise to 🔟 Keep Warm Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



2. Turn the knob until the hour display shows 01. Press the knob to confirm (as shown in the diagram below). The display will jump to minute setting automatically.



3. Press the knob to confirm the "30" minute setting (as shown in the diagram below). The display will jump to temperature setting automatically.



4. Turn the knob until the temperature display shows 60°C. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking (as shown in the diagram below).





Cavity Drying Mode



In this mode, the oven is heated to a high temperature so any excessive moisture and steam are evaporated. This function is used for drying the oven after any steam cooking modes.

Temperature		Time
Default Setting	Cannot be adjusted	25 mins
Setting Range	Cannot be adjusted	Cannot be adjusted

Steps:

shown in the diagram below).



2. The combi steamer will start cooking (as shown in the diagram below).



Important:

- 1. The function of "Combination Button: Cavity temperature display" is not available in this mode.

Operation Instructions

1. In standby mode, turn the knob clockwise to Drying Mode. The icon will flash. Press the knob to confirm (as

2. The function of "Adjust or Increase the Cooking Time during/after Cooking is Completed" is not available in this mode.

■ Descaling Mode

Water used in steaming mode may result in scale accumulated inside cavity and water pipe.

"Descaling" icon 🖄 will be on once combi steamer has reached 100hrs steam related cooking time to remind the user to run the descaling programme mode. The light will stay on until the descaling is performed.

Descaling is carried out in three stages that involve one descaling process and two descaling and cleaning processes. The user has to change the liquid in the tank 3 times during the entire cleaning process. It is also necessary to empty the drip tray by cleaning up. Icon 🖄 will be lighted to remind cleaning up the drip tray is needed.

Also, descaler is required for this mode. Customer can select the Wpro descaler under Whirlpool brand. This product can be used in steamer for cleaning limescale deposits effectively, optimizing machine performance and prolonging the lifespan of the appliance. For more details, please visit our website: www.whirlpool.com.hk

For satisfactory results, follow the suggested dosage for descaler and water below:

Stage 1: Descaling. Running time is 30 minutes. Suggested dosage: 50ml descaling agent and 500ml pure water. Stage 2: 1st descaling and cleaning process. Running time is 10 minutes. Suggested dosage: 550ml pure water. Stage 3: 2nd descaling and cleaning process. Running time is 10 minutes. Suggested dosage: 550ml pure water.

	Temperature	Time
Default Setting	Cannot be adjusted	50 mins
Setting Range	Cannot be adjusted	Cannot be adjusted

Steps:

- 1. Stage 1: Descaling
 - A. Fill the water tank up to the level of the descaling 550ml icon 😵 with 50ml descaling agent and 500ml pure water.
 - B. In standby mode, turn the knob clockwise to 🔯 Descaling Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below).



C. The descaling mode will start (as shown in the diagram below)



- D. Stage 1 takes 30 minutes. When done, the time display digits will flash and an audio tone will sound to indicate stage 1 is complete. En Drip tray cleaning reminder icon will light up on the display panel to remind the user to empty the drip tray.
- E. Pour out the dirty liquid and put the drip tray back into place.
- 2. Stage 2: 1st descaling and cleaning process
 - A. Open the oven door, fill the water tank up to the level of the descaling 550ml icon 🔅 with 550ml pure water.
 - B. Put the water tank back into place and close the oven door. Descaling and cleaning will begin automatically.
 - C. When done, the time display digits will flash and an audio tone will sound to indicate stage 2 is complete. Drip tray cleaning reminder icon will light up on the display panel to remind the user to empty the drip tray.
 - D. Pour out the dirty liquid and put the drip tray back into place.

3. Stage 3: 2nd descaling and cleaning process

- A. Open the oven door. Fill the water tank up to the level of the descaling 550ml icon [with 550ml pure water. B. Put the water tank back into place and close the oven door. Descaling and cleaning will begin automatically.
- C. When done, the display will show "END" and an audio tone will sound. 🖄 Drip tray cleaning reminder icon will light up on the display panel to remind the user to empty the drip tray.
- D. Pour out the dirty liquid and put the drip tray back into place.
- 4. Descaling is complete.

Important:

- 1. The function of "Combination Button: Cavity temperature display" is not available in this mode.
- 2. The function of "Adjust or Increase the Cooking Time during/after Cooking is Completed" is not available in this mode. 3. Descaling mode will be interrupted if the steps of descaling mode is taken in the wrong way (including pause during the descaling process or open and close the oven door not following instructions etc). Please restart descaling mode and
- follow the instructions in the manual.

Operation Instructions

Preset Function (1)

You must set the clock before using the preset function. For instructions on clock setting, please see "Setting the Clock" on page 60 of this instruction manual.

Example: The current time is 16:30. You want to preset cooking time for the Bottom Grill Mode. Cooking time is 40 minutes and temperature is 210°C. Cooking will stop at 18:00.

Steps:

1. In standby mode, turn the knob clockwis Dettom Grill Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



2. Press the knob to confirm the 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.

3. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.

4. Turn the knob until the temperature display shows 210°C. Press the setting button 🖸 to confirm (as shown in the diagram below).

5. The screen for presetting the finishing time will be seen. The clock will go back to current time display, i.e. 16:30. The "16" digits will flash. The (1) preset function icon at the top of the display panel will also flash to indicate preset setting is in process (as shown in the diagram below).



jump to minute setting automatically.



7. Turn the knob until the minute display shows 00. Press the knob to confirm.

time 16:30, indicating preset setting is complete (as shown in the diagram below).



A. Checking Preset Function Status

and hold the setting button of a second again to return to the preset function screen.

B. Cancelling Preset Function:

To cancel any preset function setting, press the 🕐 power button directly. The combi steamer will return to the standby screen automatically.

Important: Preset Function is available in 9 Mainly Cooking Modes, Bread Reheat Mode, Slow Cook Mode and Drying Fruit Mode. (See "Control Panel - Major Features/ Description of Major Features on P.54-57 for details)

Suggestion: Preset cooking operation may be cancelled if children touch the screen accidentally. To avoid this, activate the child lock function after setting the preset function. For instructions on setting the child lock, please see "Control Panel -Basic Functions" on page 52 of this instruction manual. The child lock will not affect cooking. The combi steamer will start cooking normally at the preset time.

Operation Instructions

6. Turn the knob until the hour display shows 18. Press the knob to confirm (as shown in the diagram below). The display will

8. The () preset function icon of the display panel will flash. Display will change from operating time back to the current

Press and hold the setting button 💣 for 3 seconds to check the preset stop time. The preset function icon will flash. Press

■ Adjust or Increase the Cooking Time during/after Cooking is Completed (

A. Adjust the cooking time during cooking process

You can extend or shorten the cooking time and the temperature as required during the cooking process. Example: Change the cooking time and temperature settings from 01:40 and 90°C to 02:00 and 100°C. Steps:

1. During cooking, press the knob to interrupt and pause the cooking. The time display will flash (as shown in the diagram below).



2. Press the setting button 🗳. The display will go to the reset cooking time screen automatically. The hour digit flashes, and the ("Extended Cooking Time" icon lights up on the display (as shown in the diagram below).



3. Turn the knob until the hour display shows 02. Press the setting button 🗳 to confirm (as shown in the diagram below). The display will jump to minute setting automatically.



4. Turn the knob until the minute display shows 00. Press the setting button 🗳 to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.



5. Turn the knob until the temperature display shows 100°C. Press the knob to confirm (as shown in the diagram below).



6. Setting is complete. Cooking will be resumed with new settings (as shown in the diagram below).



B. Increase the cooking time after cooking is completed

You can increase the cooking time after cooking is completed. Temperature cannot be adjusted.

	Temperature	Time
Setting Range	Cannot be adjusted	1 – 59 mins



To increase the cooking time, follow the steps below: Example: Cooking is completed and need to increase the cooking time by 3 minutes. Steps:

1. Press the knob to confirm to increase the cooking time, the display will jump to minute setting automatically.



2. Turn the knob until the minute display shows 03. Press the knob to confirm (as shown in the diagram below).



below)



Note: If no action is taken within 3 minutes after cooking is completed, the combi steamer will return to standby mode.

Operation Instructions

When cooking is completed, the "END" will be shown on display and an audio tone sounds. The 🖓 "Extended Cooking Time" icon will light up on the display and the 🖄 "drip tray cleaning reminder" icon will flash for 3 minutes. (Note: the drip tray cleaning reminder icon will light up only if the steam mode has been in operation) (As shown in the diagram below).

3. Setting is complete. Cooking will resume with added cooking time under previous settings (as shown in the diagram

Residual Heat Indicator –

In standby or energy-saving mode the H "Residual Heat Indicator" icon will be shown to warn that cavity exceed 50°C and is not suitable for cleaning (as shown in the diagram below). The icon will be off until cavity drops below 50°C. Users should not clean the appliance until the icon is off.

15:20

Н

Child Lock -O

Steamer is equipped with child lock so that children cannot switch on or change any setting accidentally.

A. Activating the Child Lock:

Press and hold the -O "Child Lock" button for 3 seconds. Child lock is enabled. The "Child Lock" icon lights up (as shown in the diagram below).



B. Cancelling the Child Lock:

Press and hold the "Child Lock" button for 3 seconds to disable the child lock function. The "Child Lock" icon goes off.

Cleaning and Maintenance

- 1. Under normal circumstances, cleaning is the only 10. Tap water, drinking water or distilled water is suggested for steaming function. Avoid using mineral water. maintenance required.
- when the combi steamer is cool and the H Residual Heat Indicator icon disappeared. Disconnect the power plug from the main power supply before cleaning. Do not use any steam cleaner to clean this appliance.
- 3. To avoid corrosion which would shorten the useful life of your combi steamer, always keep it clean. Always clean the appliance after use.
- 4. To avoid damage to the combi steamer body, control panel, oven walls and accessories, do not use any cleaning cloth that contains metal, scrubbing cleaners, steel brush or cloth with a rough surface for cleaning. Use a sponge or cloth soaked in gentle detergent or kitchen towel paper sprayed with glass cleaner to clean the appliance. Always make sure the cavity (including the bottom) is completely dried after use.
- 5. Salt is a corrosive substance that would result in rust stains if left to build up inside the oven. Acidic sauces, such as ketchup, mustard and preserves, contain chemicals like chlorine and acids which would damage the stainless steel surface.
- 6. Do not allow grease and food debris to remain on the oven door and door seal. If the door seal is not kept clean, the oven door may fail to close when the appliance is in operation. This would cause damage to the front and sides of the combi steamer.
- 7. After each use:

i) Empty the black drip tray under the oven door to prevent overflow, splash and soiling of the worktop. (The drip tray can be removed. It collects condensation water every time after use when door is opened

ii) Empty the water tank.

iii) Always leave the door opened for 15-30 minutes or run the Cavity Drying Mode to dry the oven and door frame.

- 8. If the oven is very dirty, run the Sterilization Mode (110°C) to remove grease and dirt with steam for 30 minutes before cleaning. Do not start cleaning until the appliance has cooled down. For stubborn grease stains, repeat these steps several times. Never use any cleaning cloth that contains metal, scrubbing cleaners, steel brush or cloth with a rough surface for cleaning.
- 9. It is suggested to run the Descaling Mode at least once a month or when the descaling icon lights up.

Cleaning and Maintenance

- 2. Cleaning and maintenance should only be carried out 11. The water tank must be checked at least once a month. Clean it if necessary and put it back correctly.
 - 12. Disconnect the main power if the appliance will not be used for a long period. Keep the oven clean and put the appliance in a dry place away from corrosive gases.
 - 13. After every use, clean and air dry the oven (including the top, sides and bottom). If discoloration is detected at the bottom or inside the oven, remove the stains with a stainless steel cleaner (e.g. Wpro Steel Cleaner).

Cleaning and Maintenance

How to Remove the Back Panel

A. Dismantling the Back Panel

1. With the socket tool, turn anticlockwise to remove the screw. Dismantle the back panel (as shown in the diagram below).



With the socket tool, turn anticlockwise to remove the screw.

2. Clean the back panel (as shown in the diagram below).



How to Lower the Upper Heater

towards the arrow position as shown below.



2. You can clean the top of the oven now (as shown in the diagram below).



3. After cleaning, gently press the upper heater backwards to snap into place.

Important:

- icon is disappeared.

B. Assembly the Back Panel

Put the back panel inside the oven, matching the screw holes in the rear plate. Insert the 2 original screws and turn clockwise until tight and secure.

Important: Exercise caution during the whole process to avoid cutting your hands or scratching the oven surface.

Cleaning and Maintenance

1. Put your thumbs on heater's mounting staniless steel bracket (left and right side of the round nut). Push back gently



Put your thumbs on heater's mounting staniless steel bracket (left and right side of the round nut) and push back gently. The heater will be lowered.

The heater will be lowered for easy cleaning.

1. Both thumbs and gentle force is required to press backwards for the steel bracket to easily lock into place. 2. Cleaning should only be carried out when the combi steamer is cool and the H Residual Heat Indicator

Others

Troubleshooting

A. Possible Problems

 $- \bigcirc$

	Problem	Cause	Solution
		Combi steamer is not connected to power supply	Ensure it is connected to power supply
1	No Display	Malfunction of power socket	Check if other electrical appliances work normally
		Power cords is not working	Contact after-sales service
		Power supply plug is not connected correctly	Try to plug in the power supply again
		Oven door is not closed properly	Close the oven door again
2	Combi steamer is not working	Water tank is not in a correct position	Put the water tank back correctly
		Circuit board is damaged	Contact after-sales service
		Child lock is enabled	Disable the child lock
0	Diantes is not used in a reason whe	Display is damaged	Contact after-sales service
3	Display is not working properly	Circuit board is damaged	Contact after-sales service
4	Lots of Water or steam can be	Oven door is not closed tightly	Close the oven door tightly again
4	found during cooking	Door seal is damaged	Contact after-sales service
E	Quan light is not working	Light is damaged	Contact after-sales service
5	Oven light is not working	Control board is damaged	Contact after-sales service
6	Fan motor fails to work properly	Fan motor is damaged	Contact after-sales service
0		Control board is damaged	Contact aller-sales service
7	Control panel is not working	Control panel is out of order	Contact after-sales service
	properly	Control board is damaged	Contact aller-sales service
		Water tube is damaged	
8	No steam	Water pump is damaged	Contact after-sales service
		Water tank is empty or not in place	
9	Water leakage	The water tank is not in a correct position	Fill the water tank and put it back correctly

B. Following conditions are normal

	Condition	Cause
1	Fame and smell can be detected during the first time of use	These are emitted by the protective oil and it is normal.
2	Noise can be heard using any steam related mode	This is normal during water pumping into machine for steaming.
3	Water condensation can be found around the ventilation vent or door	The combi steamer produces a large amount of steam under steam cooking mode. Most of the steam will be vented from the frontal ventilation and some condensation water will be found around the ventilation vent.
4	The fan continues to work after cooking is finished	The fan will continue to run for 3 minutes after each cooking mode for cooling purpose to discharge oven heat completely. It is normal.
5	White powder can be found around the air inlet	This is water scale. It is normal. If white powder (water scale) is detected, it is recommended to run the Descaling Mode for cleaning purpose.
6	Bottom and cavity of oven's color has yellowing.	Stainless steel will generate yellow marks when heated and not kept clean. It is recommended to clean the combi steamer after each use to avoid the yellowing issue caused.

Others

Others

Product Specifications

Model	CS2320
Rated Voltage and Frequency	220-240V~ 50/60Hz
Rated Input Power	2050W
Product Dimension (H x W x D)	405 x 530 x 457 mm
Cavity Dimension (H x W x D)	244 x 387 x 342 mm
Oven Capacity	32L
Net Weight	Approximately 25 kg

90



星級服務 STAR SERVICE

查詢熱線 Star Hotline 香港 Hong Kong: 2406 9138 澳門 Macau: 0800157 送貨查詢熱線 Delivery Hotline: 2407 3126

S48893-Whirlpool Combi Steamer User Manual_EN_V12.indd 92-93

-

26/7/2016 下午12:55