

# SPECIFICATIONS


Dimensions	540(W)x570(D)x945(H)mm
Weight	34 kg
Water quantity (HIGH)	52L
Voltage	AC 220V-240V~50Hz
Input Power	360W
Required Water Pressure	0.03 MPa – 0.8 MPa

## WARNING - This appliance must be earthed.

### FOR WASHER PLUG 3 PIN ( BS Standard Plug With 13 Amp Fuse )


The wires are coloured in accordance with the following code:  
Green/yellow: Earth    Light Blue: Neutral    Brown: Live

The wires in the appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follow :

- The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  or coloured green or green and yellow.
- The wire which is coloured light blue must be connected to the terminal which is marked with the letter N or coloured white.
- The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured black.

### FOLLOWING CAUTIONS ARE FOR WASHER USING DOUBLECORE CORD ONLY.


- If the 2-pin type socket-outlet has a grounding terminal, attach the end of the Grounding Wire to the terminal.
  - When grounding the washer, connect the grounding wire before plugging in the Power Cord.
  - If the 2-pin type socket-outlet has no grounding terminal, consult your nearest dealer or attach the end of Grounding Wire to a suitable grounding point, such as a metal water pipe.
- Never connect the Grounding Wire to a gas pipe.
- Unplug the Power Cord before disconnecting the Grounding Wire.

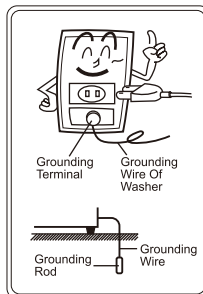

# Whirlpool

WVEC750AHG

## INSTRUCTION MANUAL FULLY AUTOMATIC TUB WASHER

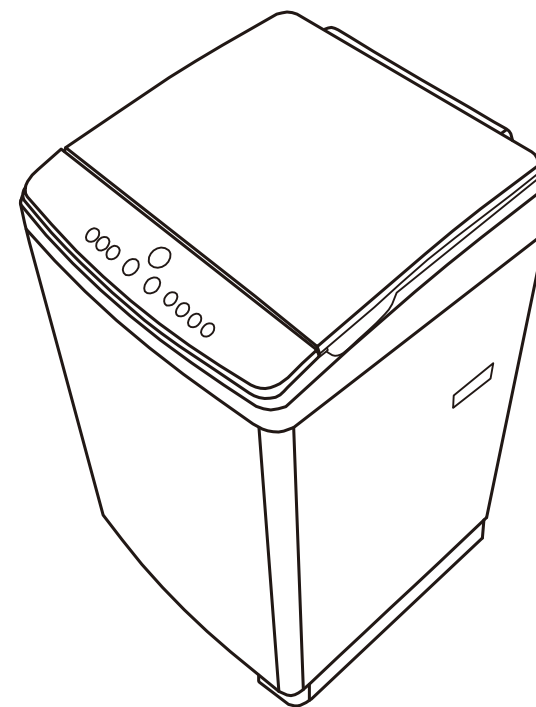

Before operating this washing machine, please read this instructions manual carefully and completely.

301B12A004723-



# Table of Contents

Precautions-----	2~4
Notes on Maintenance-----	4
Packing Instructions-----	5
Parts Names-----	5
Installation Instructions-----	6~8
Washing Tips-----	8
Description of Operation Panel Functions-----	9~10
Quick Start-----	11
Program Customization-----	11~13
Spacing issue-----	14
Wool Program Instructions-----	15
Description of other Functions, Method for Setting These Functions-----	16~18
Preset Time/Schedule Function-----	16
Operation Steps-----	16
Smart Memory Function-----	16
Two-step Clean Function-----	16
Pre-wash Function-----	17
Water Level ( Varied Wash )Function-----	17
Residual Water Draining Function-----	17
Tub Light Function-----	17
Soak Function-----	17
Child Lock Function-----	18
Disabling Beeps-----	18
Non-malfunction Cases-----	18
Troubleshooting Guide-----	19



 




# Precautions

Please read this instructions manual carefully before using your machine.

- The precautions stated here are classified as “Warning” and “Attention” according to the damage and the emergency caused by misoperation, and are described respectively in line with the marks below.

 <b>Warning</b>	Misoperation may cause death.
 <b>Attention</b>	Misoperation may cause body injury or damage the machine.

		
This mark indicates the content of warning or attention.	This mark indicates the prohibited action.	This mark indicates the compulsory action to be carried out.

 <b>Warning</b>	
 <ul style="list-style-type: none"> <li>Dismantling, repair or alterations should only be carried out by professional technician as otherwise you may be subject to electric shock, may cause fire or sustain injuries.</li> </ul>	<ul style="list-style-type: none"> <li>This washing machine is equipped with a 3 pin plug which includes an earthing wire. This appliance must be earthed.</li> </ul> 
<ul style="list-style-type: none"> <li>Electricity supply must be unplugged with dry hands. Otherwise, this may cause electric shock.</li> </ul> 	<ul style="list-style-type: none"> <li>Do not put water in direct contact with the unit during maintenance and repair. This may cause short circuit or electric shock.</li> </ul> 
<ul style="list-style-type: none"> <li>Damaged or loosen wire or plug should not be used. Otherwise electric shock, short circuit or fire may take place.</li> <li>Do not damage wire. Do not damage or alter the wire forcibly bend, pull twist or handle the wire. Besides, please do not put weight on or trap the wire. Damage of wire may case electric shock or fire.</li> </ul> 	<ul style="list-style-type: none"> <li>Do not put gasoline, benzine, alcohol, thinner or fabrics with these stains into or near to the washing machine. To prevent fire or explosion which may cause injuries.</li> </ul> 

## Precautions

### ⚠ Warning

- Keep child away from the wash/spin tub and do not place box or shelves next to the washing machine.

Children may fall in to the tub resulting in injuries.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



Prohibited

- Do not put your hand into the wash/spin tub until it has stopped completely.  
Even when the spinning of the tub is slow, there is still a danger of being caught in the motion, resulting in injuries. Particular attention should be paid when children are around.



- Do not put your hands into the wash/spin tub during the washing and rinsing process.

Even when the spinning is slow, hands may be trapped by clothes. If necessary, please press pause button, and put your hands into the tub after it has stopped completely.



Prohibited

- Please use the single socket with special voltage and current matched with plug marked specification.

The share of the same socket with other electric appliances may cause fire due to excessive loading.



Clear

- Thoroughly wipe the power plug when dirt is adhering the prong or around the base of the prong.

Failure to do so may cause a fire.

- Washing machine should not be installed in humid places or in places exposed to wind and rain.

Otherwise, electricity leakage causing electric shock or fire may occur.



Prohibited

- This washing machine is strictly prohibited to get close to the locations with candle, mosquito-repellent incense, dog-end or other kinds of open flame.

To avoid injuries caused by the lock damage.

 


Prohibited

### ⚠ Attention

- Do not pull the wire from the socket when unplugging the unit.

To avoid electric shock or fire cause by short circuit may result.



Prohibited



- Please unplug the unit when not using the unit for a long period of time.

Electric shock or leakage may occur due to deformation of plastic parts of the unit.



- Electricity supply must be unplugged with dry hands during maintenance and repair.

Otherwise, electric leakage causing injuries may occur.

If the power cord or supply cord is damaged, the manufacturer or its service agent or similarly qualified person must replace it in order to avoid a hazard.

- Do not connect to the hot water supply. If there is a need for warm water, water of above 50°C should not be used for washing.

Electric shock or leakage may occur due to deformation of plastic parts of the unit.



Prohibited

## Precautions

### ⚠ Attention

- Do not wash, rinse and spin the water proof fabric or cloth.

e.g. Sleeping bag, raincoat, cover of skiing, utilities, bicycles, cars and motors. Otherwise, this may lead to injury by abnormal vibration during spinning or damage the washing machine, wall, floor and clothes.



Prohibited

- Do not stand on or put weight on the top of the unit.


Otherwise, deformation and damage may cause injuries.



Prohibited

- Keep hands and feet away from the bottom of the washing when it is in motion.

Ports in motion beneath in the unit may cause injuries.

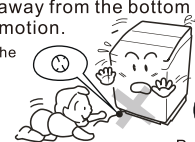

Prohibited



Water leakage

- Check water supply hose connection by turning on the water before washing. To prevent damages caused by possible water leakage due to loosen screw.

- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- Do not block the ventilation openings at the bottom of washer by carpeting when the washer is installed on a carpeted floor.



Water leakage

- Water supply hose should be tightly screwed to the unit.

Failure to do so may result in water leakage. After prolonged usage, the unit may result in water leakage caused by loosen union nut. So please check it in time and screw tightly again.



- Please turn off the water tap when not using the unit.

To prevent damages caused by water leakage.



## Notes on Maintenance

Use a soft cloth to wipe water and dirt on the Housing

- Do not pour water directly on the Housing. This may result in a short circuit or electric shock.
- Do not use a brush, polish, gasoline or other volatile materials to wipe the Washing Machine. This may damage the Main Body Surface Coating or plastic parts.
- You can choose to retain or tear off the Transport Protection Film on the Housing Surface, which will not influence the normal use of the product.



Cleaning of the Water Inlet Valve (recommended once every half yearly)


- Dirt deposits will influence the Water Inlet Volume. Please remove the Water Inlet Hose, remove the Lint Filter of the Inlet Valve, and remove the dirt on the Lint before re-installing it.






 



Water Inlet Valve

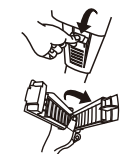Cleaning of the Lint Filter (clean it each time after it is used)


- Remove the Lint Filter.
  - Remove large lint and brush fine lint from the Lint Filter.
- Reinstall the Lint Filter. During the installation, snap the frame claws into the bottom groove. (The Lint Filter is a wearing part)



## Packing Instructions

Washing Machine	Manual	Drain Hose Assembly	Water Inlet Hose Assembly	Rat Guard	Screw	Warranty Card
						

## NAME OF PARTS

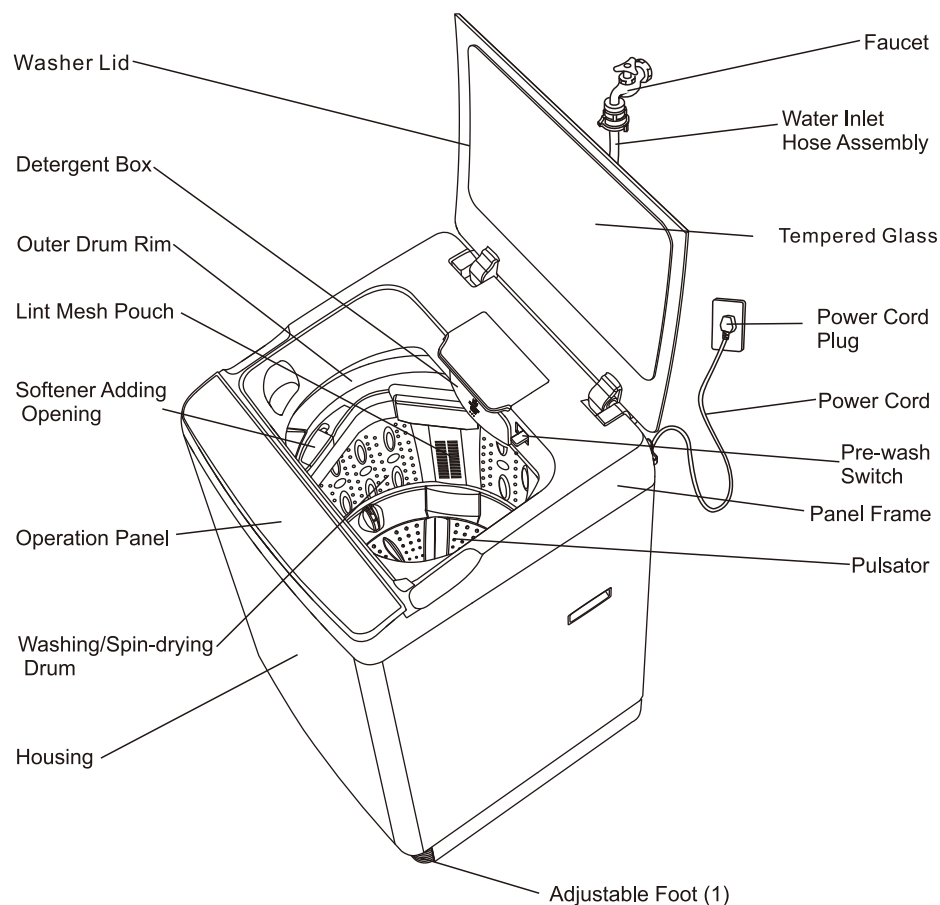


(This diagram is for reference only.  
The actual product shall prevail.)

## Installation Instructions

### Shield Installation

1. Take out the Shield on the Panel Frame protective packaging and the Screws in the bag.
2. Tilt the Washing Machine backward and slowly put it down on a cushion.
3. Push the Shield straight along the Seat Slot until it is installed in place.
4. Fix the Shield and Seat with Screws.
5. Lift the Washing Machine gently until it is placed steadily.

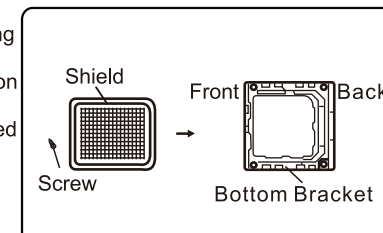


### Placement of the Washing Machine

1. Choose a dry place without direct sunlight to the Washing Machine.
2. Place the Washing Machine on steady solid ground.
3. The Washing Machine should be placed where there is a suitable drainage so as to drain water smoothly. The floor drainer shall be in the same plane as that where the Washing Machine is placed or slightly lower than the plane, to avoid Washing Machine leakage causing any damage.
4. Place the Washing Machine as firmly as possible. If necessary, level the Washing Machine by adjusting the Adjustable Feet of the Washing Machine according to the order shown in the figures. The maximum allowable inclination of the plane on which the Washing Machine is placed is 2°.

Notes:

- When the Washing Machine is placed on the floor or a flexible support stand, the Washing Machine may vibrate.
- Do not place any object such as a carpet below the Washing Machine to prevent the bottom opening from being blocked.

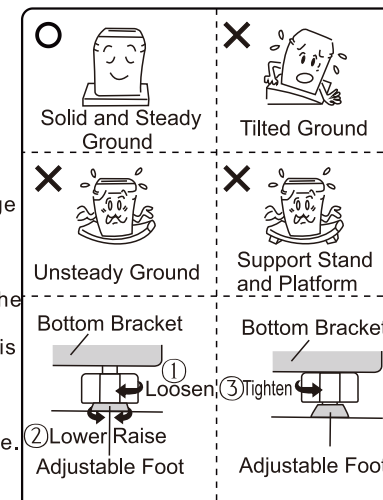

### Faucet Selection


Faucet Type: (the faucet mouth shall be smooth)

Type A: The most appropriate

Type B: Faucet length must be greater than 16mm.

Otherwise the universal joint cannot be installed.

Type C: Water leakage may occur with the part shown in the figure.

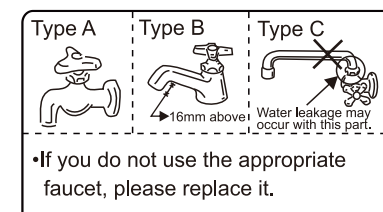

### Notes:


1. When installing the Washing Machine, please be sure to remove the Pedestal and Bracket for transportation at the bottom of the Washing Machine. Otherwise it cannot be used.
2. During installation or initial use, a small amount of water will flow out of the Drain Hose, which is residual water left over from the factory during routine inspection.
3. Unplug the Power Cord and turn off the Faucet when the Washing Machine is not in used to avoid accidental fires and water leakage accidents.




# Installation Instructions

## Installation of the Universal Joint


1. Hold the Universal Joint in one hand and the Locking Rod in the other hand and then detach the Universal Joint from the Water Inlet Hose.

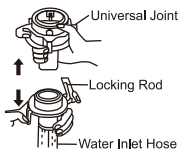


2. Evenly adjust the four screws on the Universal Joint so that the two screws near the wall fully contact the outside of the Faucet first.

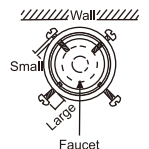

 3. Insert the Universal Joint vertically onto the Faucet with its internal seal tightly attaching to the opening of the Faucet and tighten the 4 screws with a screwdriver.




4. Remove the seal from the Universal Joint and tighten the Universal Joint.

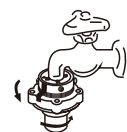


## Connection of the Water Inlet Hose

1. Connect the Water Inlet Hose to the Universal Joint.

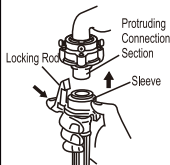


 2. Align the Water Inlet Hose with the opening of the Water Inlet Valve, and turn the fastening screw nut clockwise on the Water Inlet Hose until it cannot be turned.




4. Check whether the Water Inlet Hose is Connected Firmly

 - Pull the Water Inlet Hose downwards to check whether the Water Inlet Hose is firmly connected to the Universal Joint. Then slowly turn on the Faucet to see if water leakage occurs. If water leakage occurs, turn off the Faucet and reinstall.
- After long-term use, the Universal Joint may become loose. Reinstall it.
- Turn off the Faucet when the laundry Program ends or the Machine will not be used for a long time.




## Removal of the Water Inlet Hose

1. Turn off the Faucet.
2. Press the Power Button to turn on the power. Then press the Start/Pause Button.
3. Turn off the power after 15 seconds.
4. Pull down the Locking Rod and Sleeve with your fingers and remove the Water Inlet Hose.
5. Turn the Water Inlet Hose on the Inlet Valve anticlockwise until the Water Inlet Hose is removed.

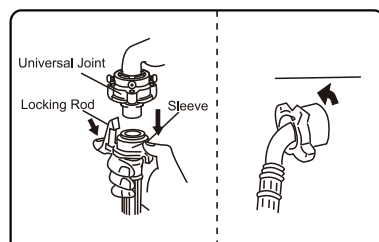

## Connection of the Drain Hose

1. Connect the Drain Hose to the Drain Mouth and then fix it with a hose clamp as shown in the figure on the right:

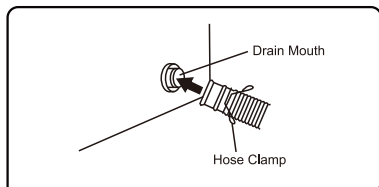

Note: Be sure to use the new Water Inlet Hose included in the accessories instead of an old Water Inlet Hose.


# Installation Instructions

## Changing of the Position of the Drain Hose

Depending on the use location, the Drain Hose can be changed from being on the right side to being on the left side.


- During the changing, unplug the Power Cord.
- To prevent scratches or injuries, please wear gloves.

1. Remove the cap on the Drain Mouth on the left.
2. Lay the Washing Machine backward down on a soft cushion.
3. Loosen the Hose Clamp and unplug the Inner Drain Pipe from the Drain Valve.
4. Push the joint on the Drain Mouth and pull the Inner Drain Pipe out of the Drain Mouth on the right side of the Washing Machine.
5. Insert the Inner Drain Pipe from the Drain Mouth on the left side and snap the joint.
6. Connect the Inner Drain Pipe to the Drain Valve and fix it with the Hose Clamp.
7. Install the Drain Mouth Cap on the left in the appropriate position on the right.
8. Lift the Washing Machine gently until it is placed steadily.

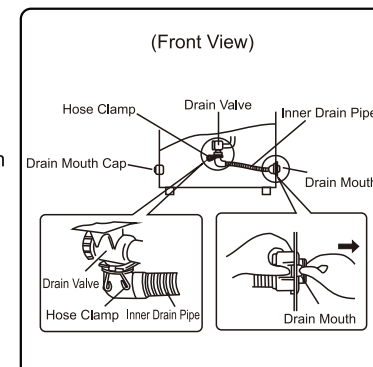

## Extension of the Drain Hose

 If the drain hose length is not sufficient, please purchase more Drain Hoses from the seller or the company and then connect the Drain Hoses to each other.

Extension of the Drain Hose	Extension Height	Extension Length	
There is a step in the middle	Within 15cm	Within 1cm	
There are no steps in the middle	—	Within 3cm	

# Washing Tips

 
- Please wash colored and white, thick and thin laundry separately. Please wash laundry according to the clothing care tags.



- Please wipe dirt and sand off the laundry first.
- Make sure there are no items in the clothing pockets. (such as nails, coins, etc. that may damage clothes, create abnormal sounds or cause a malfunction of the washing machine.)



- Please put clothes that can easily float, or large, heavy clothes in first.
- If any clothes come to the surface, please temporarily stop washing and press the clothes down into the water.



- Tighten loose straps on the clothes, ensure zippers and buttons are done up.




- When washing fine fabrics such as lingerie, lace-trimmed items, nylon and thin chemical fiber fabrics, etc., they should be placed in a mesh washing bag.



- For the clothes that lose their wool or thread easily, please turn them inside out during washing.



## Description of Operation Panel Functions

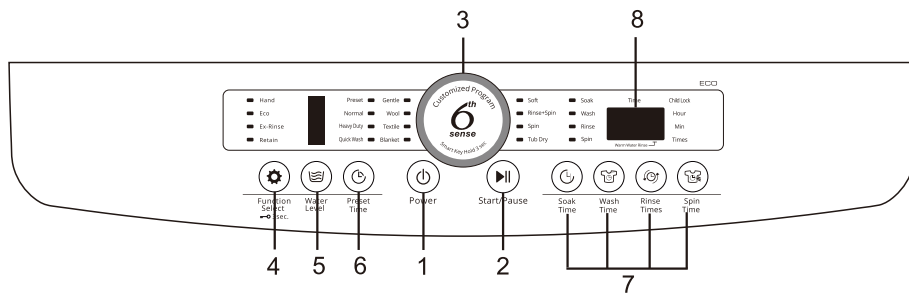

### 1.Power Button

- To turn on the Washing Machine, please press this Button. To cut off the power, press the Button again. After this Button is pressed, if no other Buttons are pressed within 10 minutes, the power will be cut off automatically. After the program stops running, the power will be cut off automatically within 5 seconds (within 10 minutes if the Draining Function is enabled).

### 2.Start/Pause Button

- When the power is turned on, the Washing Machine will start running after this Button is pressed. This Button can also be used to temporarily stop the operation. You can just press this Button again to resume the operation.

### 3.6<sup>th</sup> Sense Button

- After the Machine is powered up and the Power Button is pressed, you can press the 6<sup>th</sup> Sense Button to switch between 12 automatic programs: Preset, Normal Heavy Duty, Quick Wash, Gentle, Wool, Textile, Blanket, Soft, Rinse+Spin, Spin and Tub Dry.

- When the Machine is power up, you can start the Normal Wash Program by pressing and holding the 6th Sense Button for three seconds.

Note: If you select the Preset, Normal, Heavy Duty, Quick Wash, Textile or Soft Program, the Washing Machine will carry out automatic fuzzy judgment to automatically select the appropriate water level, water flow and other procedures.

### 4.Function Button

- You can use this Button to switch between the Specialized Programs: Hand (Wash), Eco, Ex-Rinse and Retain (Water) Functions.
- This Button can be used to set the Child Lock Function. See Page 18 for the method for setting the Child Lock Function.

### 5.Water Level Button

- This Button is used to select the water level appropriate for the laundry to be washed. Washing and rinsing can be done at different water levels. Only Levels 5 to 8 can be chosen for the Blanket Program. Only Levels 3 to 8 can be chosen for the Wool or Gentle Program.

### 6.preset time

- You can use this Button to set the end time of the Program.

Note: This function is unavailable for the Gentle, Wool, Rinse+Spin, Spin and Tub Dry Programs.

## Description of Operation Panel Functions

### 7.Procedure Button

You can use this group of Buttons to set the Soak Time, Wash Time, Rinse Times, and Spin Time freely.

### 8.Description of Digital Display Functions

- Displays the remaining time during operation.

For example: Remaining Time: 20 minutes -----

- Displays when will the Scheduled/ Preset Program ends during Preset Time Setting.

For example: Ends in 2 hours: ----- "⌚" The Preset Time Indicator will blink.

- Displays the Fault Code when an abnormality occurs.

For example: Failed to add water: -----

## Quick Start

### 1. Get Ready

- ① Connect and lay down the Drain Hose.
  - ② Connect the Water Inlet Hose to the Faucet and unscrew the Faucet.
    - Before turning on the Faucet, you need to make sure that the screws of the Universal Joint have been tightened. Loose screws may cause water leakage.
  - ③ Plug the Power Plug into a power socket.
  - ④ Add the laundry.
2. Press the Power Button.
3. Press the Start/Pause Button
- The Sensor will automatically detect the laundry amount (Preset, Normal, Heavy Duty, Quick Wash, Textile or Soft)
  - The appropriate water level, water flow and other operating Programs will be selected automatically.
4. Add some detergent to the Detergent Box or the Drum. (Use the appropriate amount of detergent according to the instructions for the detergent used)
5. Close the Washer Lid.
- If the Washer Lid is not closed, the Washing Machine will automatically stop running and emit alarming beeps before it starts spin-drying.

Model	WVEC750AHG							
Water Level	1	2	3	4	5	6	7	8
Volume (L)	About 15	About 20	About 24	About 28	About 32	About 38	About 45	About 52

During fuzzy judgment of the water level, there will be some differences due to the laundry texture, size and so on. This is a normal phenomenon.

## Program Customization

1. Preparation: Lay down the Drain Hose. Turn on the Faucet. Plug the Power Cord Plug into the power socket. Add the laundry.
2. Press the Power Button.
3. According to the laundry type, press the 6<sup>th</sup> Sense Button to set the desired Program.
- See the table below for the selection of each Program.

## Program Customization

Program Selection Guide			Default Program Settings		
Program	Applicable Laundry Type	Laundry Amount	Washing Time	Rinse Method	Spin-drying Time
Preset	The user customizes the program	Rated Laundry Amount	10 minutes	Spray+Soak Rinse	5 minutes
Normal	Daily wear clothes	Rated Laundry Amount	10 minutes	Soak Rinse Twice	5 minutes
Heavy Duty	Heavy clothes, heavily dirtied coats	Rated Laundry Amount	12 minutes	Spill Rinse Twice	8 minutes
Quick Wash	Suitable for lightly soiled clothes	3.0kg	5 minutes	Soak Rinse Once	3 minutes
Gentle	Fine textiles, silk textiles, etc.	2.0kg	6 minutes	Soak Rinse Twice	2 minutes
Wool	Wool clothes and other textiles	1.5kg	6 minutes	Soak Rinse Twice	2 minutes
Textile	Cotton and linen clothes	Rated Laundry Amount	10 minutes	Spill Rinse Twice	8 minutes
Blanket	Large household textiles	4.0kg	12 minutes	Spill Rinse Twice	8 minutes
Soft	Soft summer clothes with more sweat stains	3.0kg	8 minutes	Soak Rinse Once	3 minutes
Rinse+Spin	Laundry to be only rinsed and spin-dried	–	–	Soak Rinse Once	5 minutes
Spin	Laundry to be only spin-dried	–	–	–	5 minutes
Tub Dry	Only for drying the drum interior	–	–	–	60 minutes

**The programme used for the evaluation of models under the mandatory Water Efficiency Labelling Scheme (WELS) and the recommended Washing Programme for soiled clothes is as follows: Normal + Highest water level**

4. You can press the Preset Time Button and a group of Buttons under the Procedure button to freely set the preset time, soak time, rinse times and spin time. Once activated, the Digital Display will show numbers cyclically as follows:

• Preset Time Options Displayed:

0 → 1 → 2 → ... → 5 → 6 → ... → 24 hours (except for the Gentle, Wool, Rinse+Spin, Spin and Tub Dry Programs.)

• Soak Time Options Displayed:

0 → 5 → 10 → 15 → ... → 40 minutes (except for the Gentle, Wool, Blanket, Rinse+Spin, Spin and Tub Dry Programs.)

• Wash Time Options Displayed:

0 → 5 → 10 → ... → 15 → ... → 20 minutes

• Rinse Times Options Displayed:

0 → 1 → 1. → 2 → 2. → 3 → 3. → 4 → 4. (the number indicates times; the lit "." Indicator indicates Spill Rinse)

• Spin Time Options Displayed:

0 → 1 → 2 → 3 → 4 → 5 → 6 → 7 → 8 → 9 minutes (for the Preset, Normal, Heavy Duty, Quick Wash, Textile, Blanket, Soft, Rinse+Spin, Spin and Tub Dry Programs only)

• Spin-drying Time Options Displayed:

0 → 1 → 2 → 3 minutes (for the Wool and Gentle Programs only)

 
- Setting of a Single Procedure: Press the 6<sup>th</sup> Sense Button. Select the Normal Program and then select the wash time, rinse times and spin time. You can set the Program to perform the function of washing, rinsing, or spin-drying only.

## Program Customization

5. Press the Water Level Button to select the appropriate level. Add some detergent.
6. Press the Start/Pause Button
7. Close the Washer Lid.
- If you want to change the pre-set Procedure, please turn off the Power Switch and then turn on it again, and select your desired Program
8. Specialized Programs: If necessary, press the Function Button to enable your desired additional functions, which can be the Hand (Wash), Eco, Ex-Rinse or Retain (Water) Function.
- **Hand (Wash)** : This function requires a washing load less than or equal to 3kg and is only available for the Preset, Normal and Heavy Duty Programs. When the function is enabled, the Indicator of this function will be lit and the Water Level Button and Washing Time Button will be disabled.
- **Eco** : After this function is enabled, the corresponding Indicator will be lit and the Washing Mode will be changed to the Eco Mode. This function is available for the Preset, Normal, Heavy Duty, Quick Wash, Gentle, Wool, Textile, Blanket and Soft Programs only.
- **Extra Rinse** : After this function is enabled, the corresponding Indicator will be lit while the original Washing Procedure and Spin-drying Procedure will remain unchanged and the first Rinsing Procedure will be changed to Spray+Spill Rinse. This function is unavailable for the Spin Dry and Tub Dry Programs.
- **Retain(Water)**: When proceeding to the Spin-drying Procedure, the program will pause without draining, and the Indicator will blink accompanied by beeps. The Spin-drying Procedure will restore when you press the Start Button. If there is no operation within 1 hour, the power will be cut off automatically.

### Description of Three Rinse Methods

#### 1. Soak Rinse (the usual method)



At the end of the Spin cycle, Water is added into the drum. A rinse will start.

#### 2. Spray Rinse (water-saving)



After the spin-drying ends, the spin drier will rotate slowly while water is added. Like taking a shower, the laundry will have the detergent on it removed and drained to the sewer (the Washing Machine will immediately stop working when the Washer Lid is opened during the spray rinse).

#### 3. Spill Rinse (in the event too much detergent is being used)



At the end of the Spin cycle, Water is added into the drum while a rinse cycle starts. The foam produced during the rinse will overflow from the Spill Mouth and drained into the sewer.

## Blanket Program Instructions


**The Blanket Program applies to washing blankets and other large items.**

• When this Program is used, the water level is automatically set to Level 8. However, you can change the Water Level to Level 5 ~ 8 according to the size of the blankets and large items.

### Operation Steps

1. Open the Washer Lid and press the Power Button.
2. Press the 6<sup>th</sup> Sense Button until the Blanket Indicator is lit.
3. Pour the liquid detergent into the Washing Machine. If you are using powder detergent, dissolve it thoroughly in 5L of warm water (about 30°C) and then slowly pour the solution into the Washing Machine.
4. Place the rolled side of the blanket down in the Washing Machine.
5. Press the Start/Pause Button (If necessary, you can adjust the water level manually.)
6. Close the Washer Lid.
- If the Washer Lid is not closed properly, the Washing Machine will automatically stop running before starting spin-drying.
- After the wash ends, the beeper will emit beeps and then the power will be cut off automatically within 5 seconds.
- After the wash ends, turn off the Faucet and clean the Lint Filter Pouch.


### How to Fold a Blanket and Put it in the Washing Machine

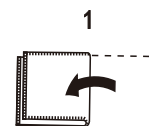


Fold the blanket in half



Then fold it in the same direction into 4 layers

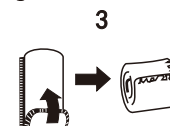

Roll up the blanket

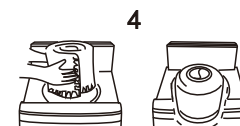


Place the rolled side of the blanket down in the Washing Machine.

### After the Wash Ends

Take out the blanket and hang it from the middle in the shade.

- Notes: Pre-wash the dirty parts by hand.
- Do not use too much detergent.
  - Stains can be removed effectively with warm water (about 30°C).
  - During the washing process, if a part of the blanket is exposed above the water surface, press the Start/Pause Button. The Washing Machine will temporarily stop running. Press the exposed part into the water and press the Start/Pause Button again to resume the wash.

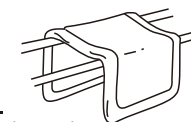



## Wool Program Instructions

- This Program is used for washing wool clothes. Please check the clothing care tag before starting the wash.
- When the Wool Program is used, the water level is automatically set to Level 6. However, you can change the water level to Level 3 ~ 8 according to the size of the wool clothes.

### Operation Steps

- 1.Open the Washer Lid and press the Power Button.
  - 2.Press the 6<sup>th</sup> Sense Button until the Wool Indicator is lit.
  - 3.Pour the liquid detergent into the Washing Machine. If you are using powder detergent, dissolve it thoroughly in 5L of warm water (about 30°C) and then slowly pour the solution into the Washing Machine.
  - 4.Put wool clothes in the Washing Machine.
  - 5.Press the Start/Pause Button (If necessary, you can adjust the Water Level manually.)
  - 6.Close the Washer Lid.
- If the Drum Cover is not closed properly, the Washing Machine will automatically stop running before starting spin-drying.
  - After the wash ends, there will be beeps and the power will be cut off automatically within 5 seconds.
  - After the wash ends, turn off the Faucet and clean the Lint Filter Pouch.

### Caution

- The laundry amount shall be less than 1.5kg.
  - After the Program ends, please immediately take out the clothes and air them to prevent them from becoming deformed due to too long placement.
  - The Wool Program cannot be scheduled.
  - In order to avoid damage to the clothes, the temperature of the washing water shall not exceed 30°C.
  - Please wash clothes of white or bright colors and the clothes of dark colors separately.
- Using dedicated wool detergents can reduce the damage to clothes and improve the washing effect.

## Description of other Functions, Method for Setting These Functions

### Preset Time/ Schedule Function


- The Pre-set schedule time is the program end time.
- Before making a Preset, first turn on the Faucet, and then lay down the Drain Hose and check whether the Universal Joint is tightened to avoid water leakage accidents.

### Operation Steps

- 1.Press the Preset Time Button.
  - 2.If necessary, press the 6<sup>th</sup> Sense Button or the Procedure Button to select the appropriate laundry Program and Procedure Settings.
  - 3.Press the Preset Time button to set the schedule end time. The Digital Display will show the set time, which is increased by one hour whenever the Button is pressed once. The maximum time is 24 hours.
  - 4.If necessary, use the Water Level Button to set the appropriate Water Level. Add some detergent, softener, etc.
  - 5.Press the Start/Pause Button
  - 6.Close the Washer Lid.
- All the Indicators except the "C" Indicator will go out in about one minute. (If the Child Lock is enabled, the Child Lock Indicator will be lit)
  - Preset Wash is unavailable for the Gentle, Wool, Rinse+Spin, Spin and Tub Dry Programs.
  - If you want to check the Preset/ Scheduled Program, please press any Button other than the Power Button. Then the Preset/ Scheduled Program will be displayed for 5 seconds.
  - To change the Preset/ Scheduled Program, please turn off the power and then restart the Machine and carry out the resetting.

### Instructions for Adding Detergent for a Preset Wash

- Synthetic powder detergent can be directly added into the Drum.
- Liquid detergent and bleach can be poured directly into the hole in the Panel Frame but not directly on the laundry. Otherwise, they may cause fading of clothes.
- After softener is diluted with water of a volume 2 times that of the softener to be used, pour the diluted softener into the Softener Inlet. Please do not use soap, because it cannot be dissolved easily and will lead to a poor washing effect.

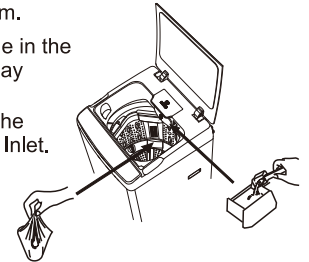

### Smart Memory Function

- If you choose the Preset, Normal or Heavy Duty Program the Washing Machine will remember your choice after the Program ends. When you use the Machine the next time, the remembered Program will be displayed after you turn on the power. The Machine will start running when you simply press the Start/Pause Button.
- For the Normal or Heavy Duty Program, no wash parameters but only the Program will be remembered.

### Two-step Clean Function

- During the washing process, after the water level of the washing machine reaches the level that is two levels lower than the pre-set water level, the wash will start while water is added.
- When the two lowest levels are set, the wash will start after the pre-set water levels are reached.
  - The Two-step Clean Function is unavailable for the Gentle, Wool and Blanket Programs
  - If the Soak Time Procedure is selected, after the soak ends, the Two-step Clean Function will be disabled during the wash.



## Description of other Functions, Method for Setting These Functions

### Pre-wash Function

As the drum is being filled with water, push the Pre-Wash Switch. Water will flow out from the Pre-Wash mouth. Then you can manually wash the laundry partially.  
When the added water reaches the set Water Level, water addition will automatically stop.

### Water Level (Varied Wash) Function

In order to improve the detergent content in the washing water and save water, you can set different water levels for a wash and rinse respectively. It is recommended that the wash proceeds at a lower water level and the rinse at a higher water level. In this way, a clean wash and a thorough rinse can be ensured.

### Setting Method

Press the Power Button to turn on the power. After selecting the appropriate Program, press the Washing Time Button to set the washing time, press the Water Level button to set the wash water level, press the Rinsing Times Button to set the rinsing times, press the Water Level Button again to set the rinsing water level, press the Spin Button to set the spin-drying time, and finally, press the Start/Pause Button to start. Then the wash and rinse will proceed at different pre-set water levels.

### Residual Water Draining Function

After it is enabled, within 9 minutes after the Program ends, the Drain Valve will open automatically to drain the remaining water inside the Machine to prevent it from becoming frozen when the weather turns cold. (Used when the temperature is below 0°C)

### Setting Method

•Press the Power Button. Press and hold the Spin Button for more than 3 seconds until you hear a beep. Repeat the operation to enable beeps.

### Tub Light Function

The Tub Light will be lit when the Washer Lid is opened and will go out 2 minutes after the Washer Lid is closed. The Tub Light will go out automatically 3 minutes after the Washer Lid is not closed.

### Soak Function

After the Soak Function is enabled, a dynamic soak can be added before a wash (this function is unavailable for the Gentle, Wool, Blanket, Rinse+ Spin, Spin and Tub Dry Programs). The soaking time is 0 - 40 minutes with an increment of 5 minutes.

## Description of other Functions, Method for Setting These Functions

### Child Lock Function

You can enable the Child Lock Function to avoid injury to a child opening the Washer Lid of the Washing Machine.

### Setting Method

Press the Power Button to turn on the power. Press and hold the Function Button for more than 3 seconds until you hear a beep. Repeat the operation to enable it again.

- After the Child Lock is enabled, the Washing Machine will stop running and display “**ES**” and emit alarming beeps when the Washer Lid is opened for more than 5 seconds during a wash.
- After the Child Lock is enabled, while a Program is running, no Buttons except the Power Button will respond.

### Disabling Beeps

Cancel Method: Press the Power Button. Press and hold the Start/Pause Button for more than 3 seconds until you hear a beep. Repeat the operation to enable beeps.

## Non-malfunction Cases

- 1.Sometimes water is added during a wash or rinse. This is automatic water replenishment due to a lowered water level.
- 2.At the beginning of Spin-drying, the Drum will stop and start intermittently. This is intermittent Spin-drying designed to achieve a better Spin-drying effect.
- 3.During the Spill Rinse, the Drain Hose does not drain water. This is due to the set water level being too low or the water pressure being too low.
- 4.Sometimes water is replenished during Spin-drying. This is an automatic replenishment due to the improper placement of the laundry to be Spin-dried.
- 5.After the Spin-drying ends, there is the sound of residual water, which is the sound of the balance liquid that is in the balance ring and designed to reduce Spin-drying vibration.
- 6.There was a power failure during operation and the operation cannot be automatically resumed after the power supply restores. Please set the Machine again.

## TROUBLE SHOOTING GUIDE

When the following problems occur, the microcomputer will detect the abnormal condition and an electronic buzzer sounds for approximately 10 seconds and the indicators flash as shown below. At the same time, the washer stops operation.

Kind of Trouble	Trouble Indication	Where to Check
The washer does not work at all.		<ul style="list-style-type: none"> <li>• Press the POWER ON/OFF button.</li> <li>• Press the START/PAUSE button.</li> <li>• Check whether power failure occurs.</li> <li>• Check whether the fuse or circuit breaker has been activated.</li> </ul>
Water does not flow into the Wash/Spin Tub.	<b>E1</b>	<ul style="list-style-type: none"> <li>• Turn on the water supply faucet.</li> <li>• Check whether the water supply has been cut off.</li> <li>• Check whether the metal filter of the water inlet is clogged.</li> <li>• Check whether the water inlet has been blocked.</li> <li>• Check whether water pressure is too low.</li> </ul>
Water does not drain out.	<b>E2</b>	<ul style="list-style-type: none"> <li>• Check whether the height of drain hose is more than 1000mm .</li> <li>• Check whether the drain hose is clogged.</li> </ul>
The washer does not spin.	<b>E3</b>	<ul style="list-style-type: none"> <li>• Check whether the laundry is clumped on one side of the Wash/Spin Tub.</li> <li>• Check whether the washer is on the level surface.</li> </ul>
	<b>E4</b>	<ul style="list-style-type: none"> <li>• Close the washer lid.</li> </ul>
The buzzer keeps beeping.	<b>E5</b>	<ul style="list-style-type: none"> <li>• Check whether the CHILD LOCK is set.</li> <li>• Close the washer lid.</li> </ul>
Other troubles.	<b>EA Eb EC</b>	<ul style="list-style-type: none"> <li>• Please press the Power Button to turn off the power, unplug the Power Cord Plug, and call the company's Customer Service number as soon as possible.</li> </ul>