

Whirlpool



Health & Safety, Use & Care, Installation Guide and Online Warranty Registration Information

產品安全指引、使用說明、安裝指南及
網上登記保養資料

Model 產品型號：CS1252A / CS1252B



www.whirlpool.com.hk
www.whirlpool.com.sg

Table of Contents

■ General Preparation and Advice before Use	Page
Important Safety Information	45
Precautions before First Use	45
Precautions and Advice	45-46
Mounting the Appliance	47
Earthing Instructions	48
Appliance and Accessories Chart	48-49
Control Panel	50
Control Panel – Basic Functions	51
Control Panel – Major Features	52
Control Panel – Description of Major Features	53-55
Use and Cooking Tips	56

■ Operation Instructions	Page
Setting the Clock	57
Steam Mode	58
Forced Air + Steam Mode	59
Upper/Bottom Grill/Conventional Bake Mode	60
Forced Air Mode	61
Convection Mode	62
Air Fry Mode	63
Convection + Steam Mode	64
Proving Mode	65
Bun Reheat Mode	66
Bread Reheat Mode	67
Slow Cook Mode	68
Drying Fruit Mode	69
Defrost Mode	70
Preheat - Steam Mode	71
Preheat - Baking Mode	72
Keep Warm Mode	73
Cavity Drying Mode	74
Sterilization Mode	75
Descaling Mode	76-77
Preset Function	78-79
Adjust the setting during Cooking Process / Increase the Cooking Time after Cooking is Completed	80-81
Residual Heat Indicator	82
Child Lock	82

■ Cleaning and Maintenance	Page
Cleaning and Maintenance	83
How to Lower the Upper Heater	84

■ Others	Page
Troubleshooting	85-86
Product Specifications	87

General Preparation and Advice before Use

■ Important Safety Information

This manual contains important information on safety, use and maintenance of the product. Please read the manual carefully and keep it in an easily accessible place for future reference.

■ Precautions before First Use

1. Two or more people are required to install or move this appliance as it is heavy. It must be securely placed on a firm and level surface. Failure to do so can cause physical injuries or damage to the appliance.
2. This appliance is designed solely for indoor and domestic use. Follow the cooking instructions indicated in the manual. Do not use this appliance for outdoor, commercial or any other purposes.
3. Check that the voltage on the rating label corresponds to the voltage in your home.
4. Ensure that the appliance is not damaged. Do not operate the appliance if it has a damaged mains cord or plug. If it is not working properly, or it has been damaged or dropped. Please contact Whirlpool Customer Services.
5. Do not immerse the power cord or plug in water. Keep the power cord away from hot surfaces to avoid electrical shock, fire or other accidents.
6. This combi steamer is designed for free standing installation. Do not install as a built-in appliance.
7. Allow adequate ventilation space on all sides and do not place any object on top. Keep a minimum distance of 30cm between the combi steamer and any overhead wall cabinet; and a minimum distance of 5cm between both sides of the appliance and the walls.
8. To avoid damage to the appliance, do not block the ventilation vent.
9. Run the "Sterilization Mode" for 30 minutes to clean and sterilize the combi steamer before first use.
10. The manufacturer disclaims all liability for faults arising from improper use of this appliance.
11. Steam is emitted from the top ventilation vent. Blocking the outlets will result in damage to the combi steamer.
12. Use heat resistant utensils for cooking, such as heat resistant glass and heat resistant plastic. Non-heat

resistant containers should not be used with combi steamer. For steaming functions, container with heat resistant >120°C should be used. For convection functions, container with heat resistant >250°C should be used.

13. Odour will be emitted from the cavity when using different baking functions for the first time. It is normal.

■ Precautions and Advice

1. Stop using the combi steamer and contact Whirlpool Customer Service immediately if the door or door seal is damaged.
2. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
3. To avoid fire hazard or explosion, do not heat or use flammable materials in or near the appliance.
4. To avoid fire hazard, do not use the appliance to dry cloth, paper, spices, herbs, wood, flowers or other flammable objects.
5. Overcooking food poses a fire hazard.
6. Never leave the appliance unattended during use, particularly when cooking with paper, plastic or other flammable materials. Paper may catch fire or get burned and some plastic materials may melt when heating up food with the appliance. If any object inside or outside the appliance is ignited or emits smoke, close the appliance door and switch off the combi steamer. Disconnect the power supply and the socket with circuit leakage breaker.
7. This combi steamer is specifically designed to heat or cook food. It is not designed for industrial or laboratory used.
8. This combi steamer is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or instruction of a person responsible for their safety.
9. After cooking, clean the combi steamer only when it has completely cooled down. Wipe away any food debris or waste inside the oven. Top of the oven cavity gets burned easily and care should be taken to keep it clean. For best cooking results, keep the combi steamer completely dry by opening the door every time after cooking.

General Preparation and Advice before Use

10. Use oven gloves to take food and containers out of the appliance to avoid burning.
11. To avoid a hazard, do not touch the upper heater in the oven when using the appliance.
12. Do not use the combi steamer for storage.
13. After heating food or beverages in nursing bottles or infant food cans, always stir and check the temperature before serving. This will ensure that heat is evenly distributed and the risk of scalding or burns can be avoided.
14. Wait 10-15 minutes after each program before continuing to another mode.
15. Steam will be rapidly evaporated and not easily seen if the oven cavity at the high temperature or just finished all convection modes. It is normal.
16. Do not touch the door and door frame when using the appliance.
17. Fill the water tank with tap water, drinking water or distilled water up to the MAX mark (maximum level). Insert the water tank into the appliance completely until it clicks to ensure it is fixed in the right position.
18. If the water tank is cracked or damaged, stop using it to avoid power leakage or electrical shock caused by water leakage.
19. For hygienic reasons and to prevent condensation inside the combi steamer, empty the water tank and keep the combi steamer completely dry every time after cooking.
20. Do not fill the water tank with any liquids other than water (except descaler).
21. To avoid condensation and oven temperature drops, do not open the oven door when cooking with "Steam" mode unless it is absolutely necessary. If you have opened the oven door, extend the cooking time accordingly.
22. If it is necessary to open the oven door to turn the food or for other purposes during cooking, keep a distance from the oven door (particularly the face) to prevent scalding.
23. All maintenance and repairs should be carried out by a similarly qualified person. It is dangerous to fix the appliance by anyone except a similarly qualified person. Never dismantle, repair or modify the appliance by yourself.
24. Accessible parts of the appliance may become hot during use. Young children should be kept away.
25. When combi steam is plugged, never touch the appliance, the power cord or plug with wet hands or other wet body parts.
26. Do not place or hang any objects on the oven door or the door handle. It may affect the door's opening and closing or damage the door hinges.
27. After cooking ends of certain cooking programs, the electric fan will continue running for a certain period of time to cool down the cavity.
28. The combi steamer and its parts should be kept clean. Failure to do so will result in deterioration of the appliance surface and affect its life cycle. It may also cause danger.
29. Remove the power supply plug before cleaning. Do not use corrosive cleaners as they may cause damage or corrosion.
30. Water in the water tank will be heated up and discharged to the drip tray during "Descaling Mode". Do not allow children to touch or go near the combi steamer.
31. Remove the power supply plug before cleaning the cavity.
32. Clean dust from the power supply plug on a regular basis. If the product will not be used for a long time, remove the power supply cord. Do not pull the power supply cord but hold the plug to remove it.
33. Never leave the combi steamer in operation unattended.
34. Overheated fat and oil catch fire easily. Except grilling meat, heating oil during cooking is dangerous. Such practice should never be allowed.
35. Maximum load for the oven door is 4.5kg. To avoid damaging the combi steamer, do not place food or heavy objects on the oven door.
36. Please do not block the door sensor, otherwise it may cause accidents and fire.
37. This appliance is not intended to be operated by means of an external timer or separate remote - control system.
38. Water tank may become hot during the cooking process or after cooking is completed.
39. Children should be supervised to ensure that they do not play with appliance.




Caution: Hot Surface !

General Preparation and Advice before Use

■ Mounting the Appliance

1. Good ventilation must be ensured around the combi steamer. Do not place any objects on top of the appliance and allow a minimum distance of 30cm between the combi steamer and any overhead wall cabinet. Keep a minimum distance of 5cm between both sides of the appliance and walls. Appliance back can be closed to the wall.

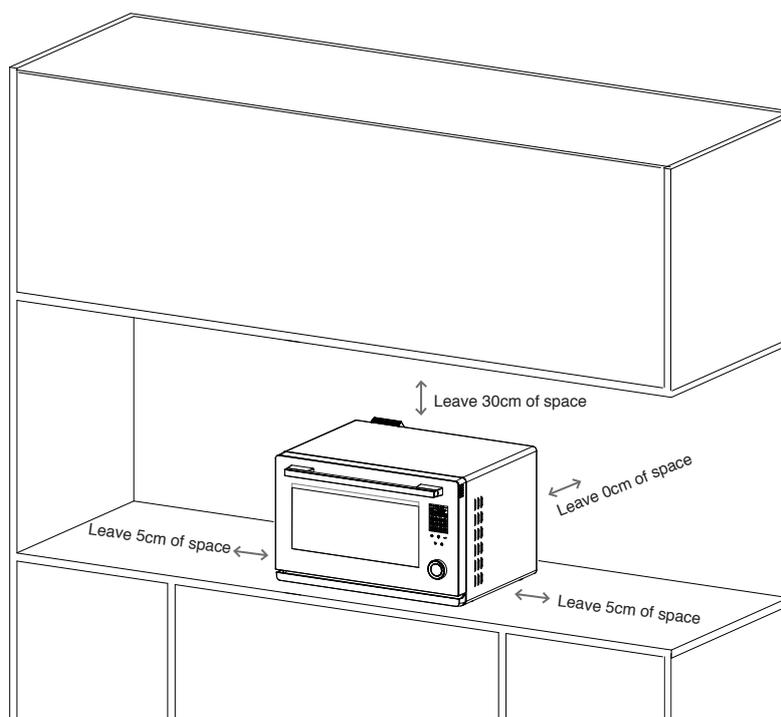


2. To prevent fire, do not block the air outlet and steam outlet. Maintain the product regularly and prevent foreign matter and dust from blocking the air outlet and steam outlet.
3. Do not put the appliance in a hot or humid place, such as gas stove, electrified areas or sink.
4. This appliance must be placed on a firm and stable surface.

General Preparation and Advice before Use

■ Earthing Instructions


This appliance must be earthed. In case of electric leakage, the ground can provide a current loop to avoid electric shock. The power supply plug that comes with this appliance must be inserted into a single-phase-bipolar socket with grounding.

■ Appliance and Accessories Chart

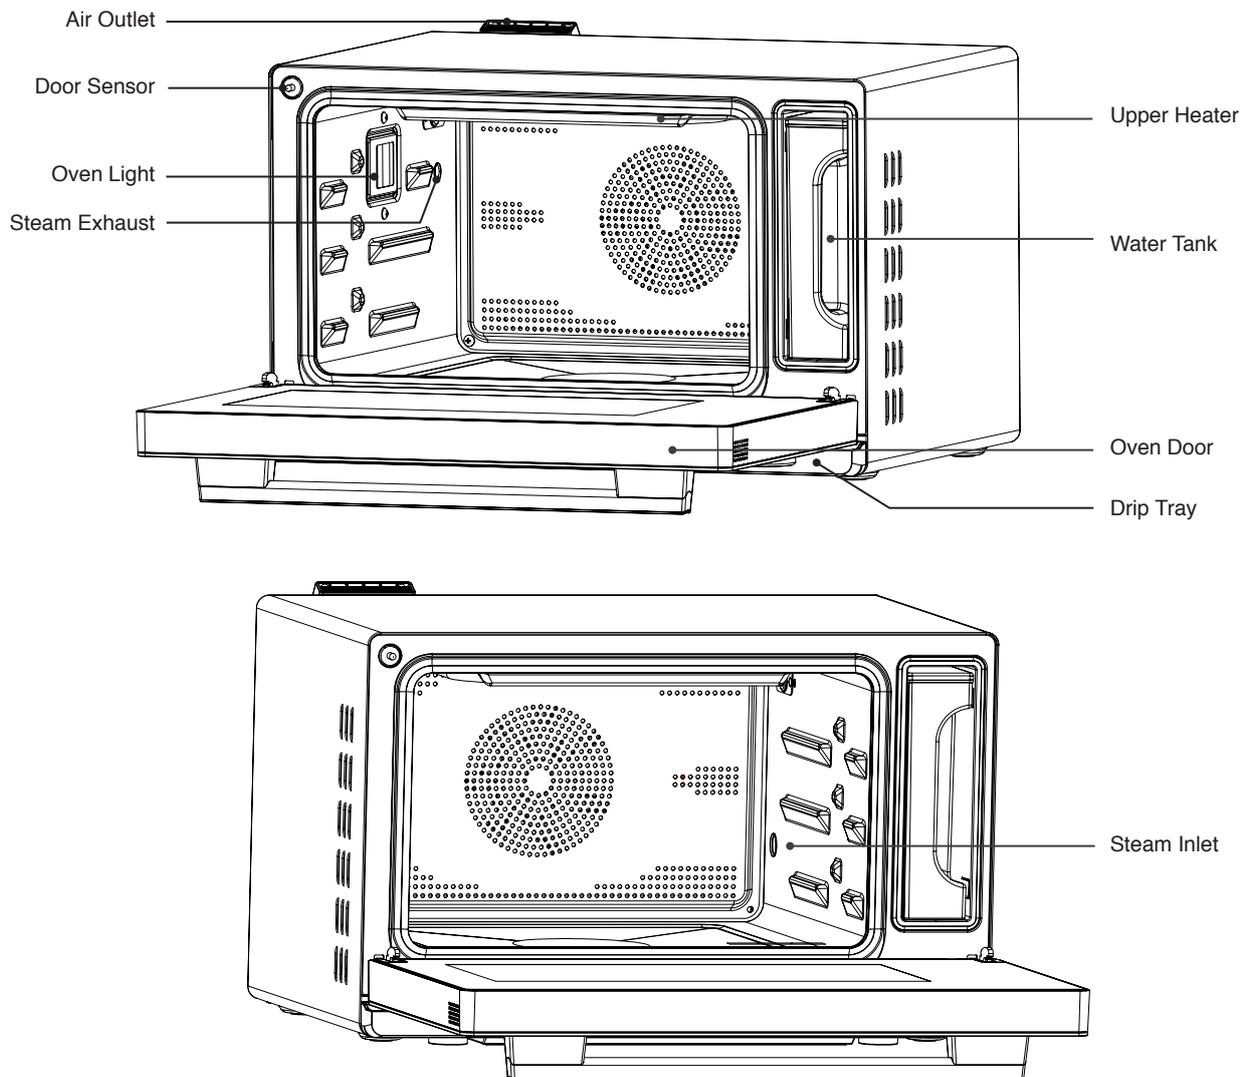

1. Control Panel: To operate the combi steamer (For details see the control panel instructions P.51-55).
2. Air Outlet: To exhaust excessive steam from the cavity.
3. Oven Light: To light up the oven to observe the food being cooked.
4. Steam Exhaust: To discharge excess steam from the cavity.
5. Upper Heater: To generate heat to cook food.
6. Water Tank: To be filled with water to generate steam.
7. Steam Inlet: To release steam into the cavity.
8. Oven Door:
 1. Make sure the door is closed before starting to cook.
 2. The combi steamer will pause if you open the oven door during cooking. The selected mode will continue automatically once the door is closed.
9. Drip Tray: To collect excess water when the door is open and foul water from Descaling Mode.
10. Door Sensor: To sense the door closed.

General Preparation and Advice before Use

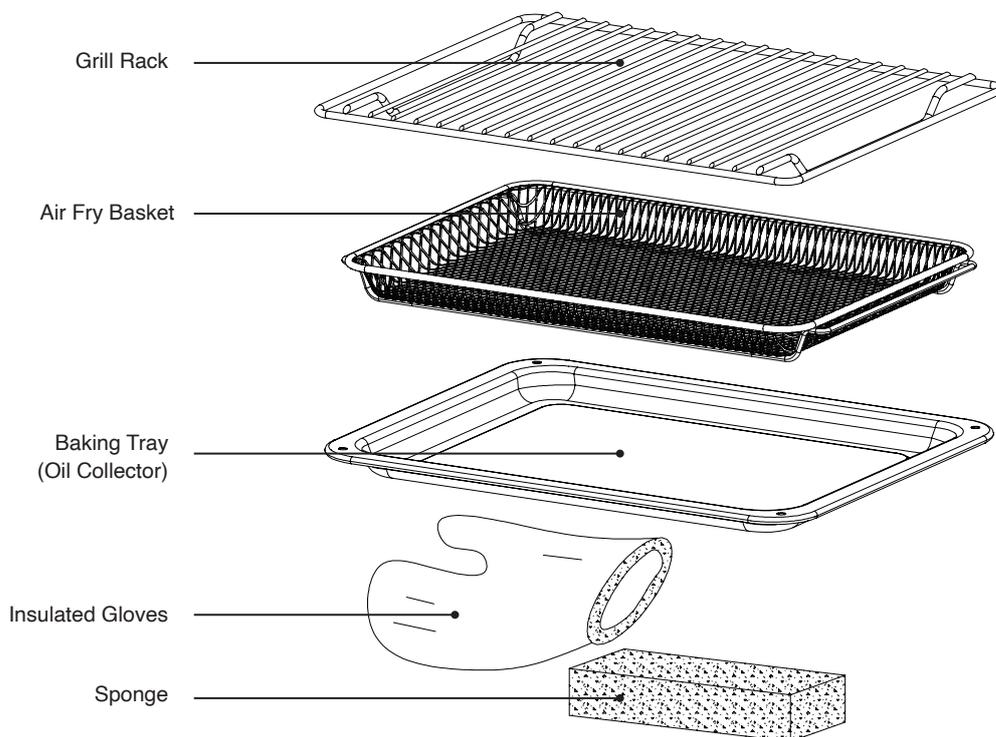

1. Grill Rack

(A) For multi-layers cooking, it is recommended to place the grill rack on the lowest level for better air circulation and even oven temperature.

(B) When grilling food without any container, please place baking paper or aluminum foil onto the grill rack before cooking.

(C) The maximum weight that can be placed on the grill rack is 4kg.

2. Air Fry Basket

Mainly for use under “Air Fry” mode.

3. Baking Tray (oil collector)

(A) When baking food without any container, please place baking paper or aluminum foil onto the metal tray.

(B) The maximum weight that can be placed on the metal tray is 5 kg.

4. Insulated gloves



To take food or rack out from the combi steamer.

5. Sponge

To remove condensation inside the oven.


General Preparation and Advice before Use

■ Control Panel

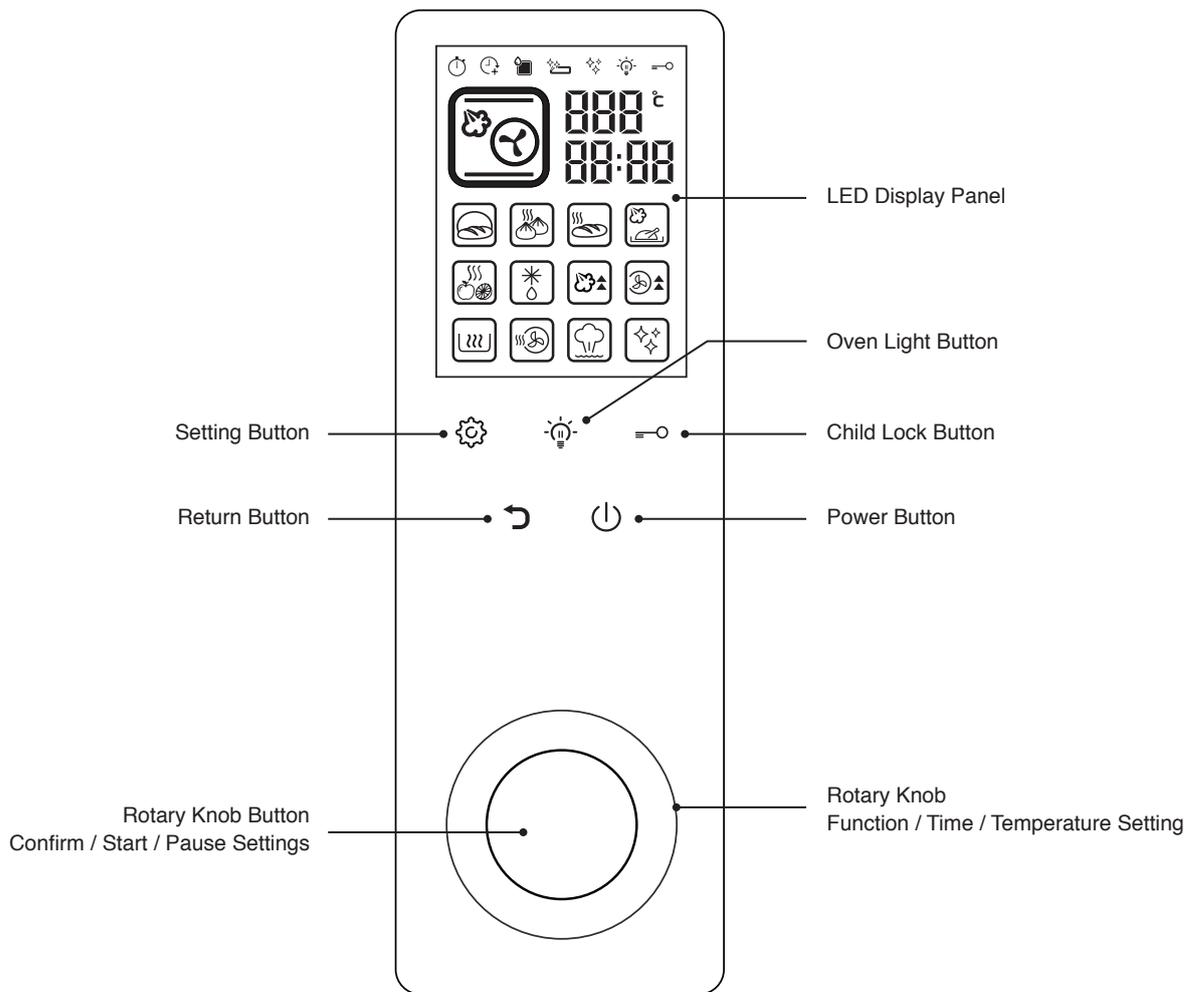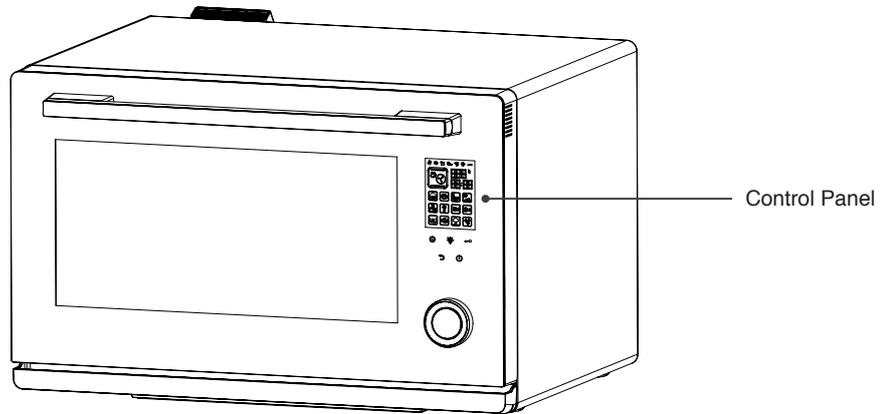

General Preparation and Advice before Use

 ■ Control Panel – Basic Functions

Icon	Function Descriptions
	<p>Rotary Knob Function / Time / Temperature Settings</p> <p>Rotary Knob Button Confirm / Start / Pause Settings</p>
	<p>Setting Button</p> <ol style="list-style-type: none"> 1. Setting the clock: In standby mode, press and hold the setting button for 3 seconds to enter the clock setting screen to set the clock (See “Setting the Clock” on page 57 for detailed instructions). 2. Preset function: After setting the cooking mode, cooking time and cooking temperature, press the setting button to enter the preset screen to preset the timer (See “Preset Function” on page 78-79 for detailed instructions). 3. In pause mode, press the setting button to reset cooking time and temperature (See “Adjust the setting during cooking process” on page 80 for detailed instructions).
	<p>Return Button</p> <ol style="list-style-type: none"> 1. Return / Reset; 2. Press the return button during setting to go back to the previous screen or reset cooking modes or cooking time.
	<p>Oven Light Button</p> <ol style="list-style-type: none"> 1. Touch once to switch the light on for 3 minutes. The oven light icon will not light up on the display panel. 2. Press and hold for 3 seconds, the oven light will stay on. The oven light icon will light up on the display panel. Press and hold for 3 seconds again to switch off the oven light. 3. The oven light will light up for 3 minutes when the door is open.
	<p>Child Lock Button</p> <p>Press and hold the button for 3 seconds to activate / release the child lock.</p> <p>To activate child lock: Press and hold the button for 3 seconds. The control panel will be locked and no operation is possible. The child lock icon lights up on the display panel.</p> <p>To release child lock: To release, press and hold the child lock button for 3 seconds while it is activated.</p>
	<p>Power Button</p> <p>After 5 minutes without operation after activate the combi steamer, including opening or closing the oven door. Combi steamer will automatically enter to power-saving mode, display panel goes out. In power-saving mode, only power button is operable.</p>

General Preparation and Advice before Use

Control Panel - Major Features

Water Tank Icon

This icon lights up as the function operated with water, please ensure water tank is filled before cooking. Flashing icon indicates that water tank is empty.

Drip Tray Cleaning Reminder

This icon lights up only if the steam mode has been in operation, the icon will flash for 3 minutes.

Adjust the setting during cooking process / Extended Cooking Time

Descaling Reminder

Oven Light


Child Lock

Temperature Setting

Adjustment range: 30°C - 230°C

Clock and Time

Clock: Clock is displayed in standby: 24-hour clock
Display range: 00:00-23:59
Time: The duration of cooking time
Adjustable range: 00:05-12:59

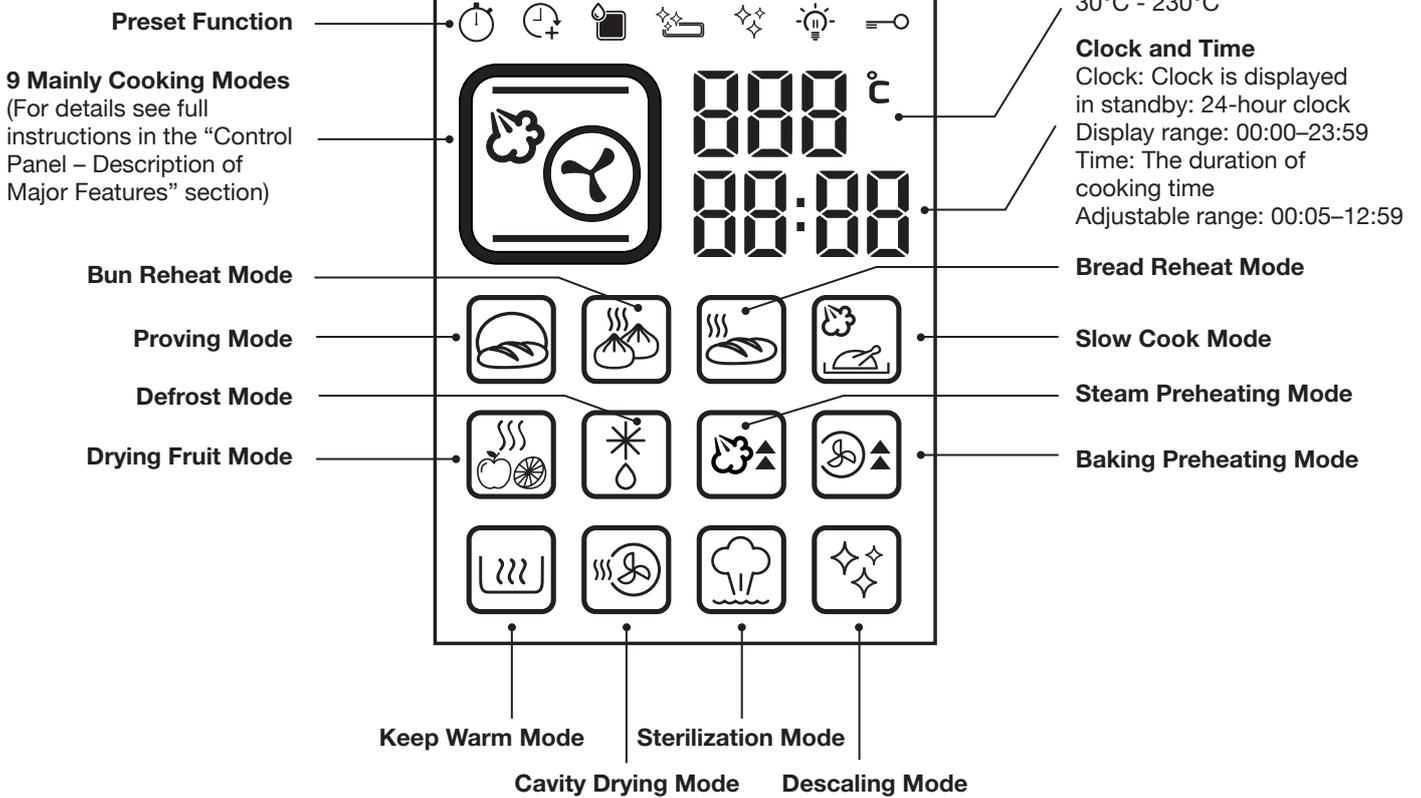

General Preparation and Advice before Use

■ Control Panel – Description of Major Features

Icon	Mode	Function Descriptions	Default Time/ Temperature	Time/ Temperature Selection Range
	Steam	Steam cooking preserves the original taste, nutrients and color of food cooked. It is suitable for steaming vegetables, meat and seafood or braising soup.	30 minutes / 100°C	Time: 5-419 mins (maximum 6 hours 59 mins) Temperature: 50-110°C
	Forced Air + Steam	Cooking food with hot air and steam to prevent moisture loss during high baking temperature. The rear fan produces good circulation of hot air to ensure even heating on multiple levels. This mode is suitable for all types of food.	30 minutes / 180°C	Time: 5-90 mins (maximum 1 hours 30 mins) Temperature: 100-230°C
	Upper Grill	Suitable for roasting baking-food or at a final stage of roasting or baking. It helps browning the surface of your dish.	30 minutes / 180°C	Time: 5-90 mins (maximum 1 hours 30 mins) Temperature: 100-230°C
	Bottom Grill	Suitable for baking the final stage or for food that needs to be cooked from the bottom periodically during cooking. e.g. pizzas, macaroon.	30 minutes / 180°C	Time: 5-90 mins (maximum 1 hours 30 mins) Temperature: 100-230°C
	Conventional Bake	Traditional single-level baking and grilling mode. Heat is released from the top and bottom to get food baked evenly. Suitable for cooking meat, fish, bread and cookies, pastries and desserts etc., and particularly suitable for cakes with moist ingredients at the top.	30 minutes / 180°C	Time: 5-90 mins (maximum 1 hours 30 mins) Temperature: 100-230°C
	Forced Air	The appliance comes with a rear fan which distributes the hot air produced by the rear heater evenly inside the oven. Food on different levels are heated evenly. It can be used in cooking multiple levels.	30 minutes / 180°C	Time: 5-90 mins (maximum 1 hours 30 mins) Temperature: 100-230°C

General Preparation and Advice before Use

Icon	Mode	Function Descriptions	Default Time/ Temperature	Time/ Temperature Selection Range
	Convection	The upper and bottom heater and rear fan operate simultaneously in this mode. Suitable for all baking dishes, such as meat, seafood, pizzas, bread and cookies, pastries and desserts.	30 minutes / 180°C	Time: 5-90 mins (maximum 1 hours 30 mins) Temperature: 100-230°C
	Air Fry	This mode uses fan to circulate heat inside the cavity to air fry food. It is suitable for crispy food or baking large meat.	30 minutes / 180°C	Time: 5-90 mins (maximum 1 hours 30 mins) Temperature: 100-230°C
	Convection + Steam	This mode combines upper, lower heat, hot air and steam cooking. It is a perfect all-in-one combination cooking. Adding steam during the cooking process can prevent moisture loss during high temperature cooking. Suitable for cooking all types of food, such as large cuts of meat or baking moist cakes.	30 minutes / 180°C	Time: 5-90 mins (maximum 1 hours 30 mins) Temperature: 100-230°C
	Proving	This mode works with steam to ensure stable and humidity inside the oven. It allows doughs (for pizzas or bread) to rise quicker in a stable environment, and it used for fermenting pizzas or bread.	30 minutes / 35°C	Time: 5-419 mins (maximum 6 hours 59 mins) Temperature: 30-40°C
	Bun Reheat	Bun is reheated at a regulated temperature and steam is added to reheat that tastes just like freshly-steamed bun.	10 minutes / 100°C	Time: 5-59 mins Temperature: Cannot be adjusted
	Bread Reheat	Bread is reheated at a regulated temperature to reheat bread that tastes just like freshly-baked.	10 minutes / 160°C	Time: 5-59 mins Temperature: Cannot be adjusted
	Slow Cook	Steam is injected to maintain temperature inside the oven for slow cooking. Low temperature is used, meat and seafood can be preserved the original flavor without overcooking. Food can be placed in vacuum bags for this mode.	30 minutes / 60°C	Time: 5-419 mins (maximum 6 hours 59 mins) Temperature: 50-90°C

General Preparation and Advice before Use

Icon	Mode	Function Descriptions	Default Time/ Temperature	Time/ Temperature Selection Range
	Drying Fruit	Food is dehydrated with hot air in low heat. Suitable for preparing dried fruit and sliced vegetable or meat jerkies.	60 minutes / 80°C	Time: 5-779 mins (maximum 12 hours 59 mins) Temperature: 40-90°C
	Defrost	Defrost chilled or frozen food.	30 minutes / 55°C	Time: 5-419 mins (maximum 6 hours 59 mins) Temperature: 50-60°C
	Preheat – Steam	Oven is heated to preset temperature by steam.	Present time / 100°C	Temperature: 50-110°C
	Preheat – Baking	Oven is heated to preset temperature by baking function.	Present time / 180°C	Temperature: 100-230°C
	Keep Warm	Keeping food warm with hot air. Suitable for keeping cooked dishes warm.	30 minutes / 55°C	Time: 5-239 mins (maximum 3 hours 59 mins) Temperature: 50-60°C
	Cavity Drying	In this mode, the oven is heated to a high temperature so any excessive moisture and steam are evaporated. This function is used for drying the oven after any steam cooking modes.	25 minutes / 230°C	Time: Cannot be adjusted Temperature: Cannot be adjusted
	Sterilization	At sterilization mode, high temperature 110°C is used to sterilize dinnerware, cutlery or feeding bottles.	30 minutes / 110°C	Time: 5-419 mins (maximum 6 hours 59 mins) Temperature: Cannot be adjusted
	Descaling	Descaling icon will be on once combi steamer has reached 100 hours steam related cooking time to remind the user to run descaling programme mode. A descaler is required.	50 minutes / 85°C	Time: Cannot be adjusted Temperature: Cannot be adjusted

General Preparation and Advice before Use

■ Use and Cooking Tips

1. Minimum time setting is 5 minutes for all cooking modes (Except the “Increase the Cooking Time after Cooking is Completed” function).
2. After specific cooking functions are done, the fan will continue to work for 3 minutes for cool down purpose. This is normal.
3. The combi steamer will pause automatically if you open the oven door during cooking. Cooking will continue automatically at the set time and temperature once the door is closed.
4. Take extra care when removing container from the oven after heating, like soup, sauce or beverage. To prevent over boiling, following steps should be taken in cooking liquid.
 - (a) Do not over-heat liquid food. Boiling liquid may splash out and cause scalding when you remove it from the combi steamer.
 - (b) When heating up liquid food, make sure the container is at most 80% full because a small amount of liquid may splash out suddenly when boiled.
 - (c) Stir the liquid before and during heating.
 - (d) Allow the food to stand inside the combi steamer for a while when heating is done. Stir it gently before removing.
 - (e) When using a feeding bottle or heating baby food, stir or shake the food and check the temperature before feeding to avoid burning.
5. Only use a thermometer designed for ovens to check food temperature during cooking, if necessary. If longer cooking time is required, put the food back into the combi steamer to continue cooking.
6. To avoid overheating or over-browning, it is recommended to take the food out when roasting or steaming is finished.
7. To maintain constant temperature during cooking, do not open the oven door unless it is necessary. To avoid affecting oven temperature, do not open the oven door to check food during cooking. If you have opened the oven door, extend the cooking time accordingly.
8. To ensure even browning and cooking, adjust or turn the food's position or direction of the steam or grill plate halfway during heating.

Operation Instructions

■ Setting the Clock

When the appliance is first powered on, it will beep and returned to standby mode. The default clock display is 12:00. The display panel lights up completely.



The combi steamer returns to energy saving mode if no button is pressed or door is opened for 5 minutes. Under energy saving mode, display will be turned off, only the power button can be used. Press the power button to exit the energy saving mode and back to the startup screen.

Example: Set the clock to the current time 13:20.

Steps:

1. On the standby screen, press and hold the setting button  for 3 seconds. The hour digits flash.
(as shown in the diagram below)



2. Set the hour by turning the knob. When the hour reaches 13, press the knob to confirm.
(as shown in the diagram below) The display will change to the minute setting automatically. The minute digits flash.



3. Set the minute by turning the knob. When the minute reaches 20, press the knob to confirm.
(as shown in the diagram below)



4. Time setting is complete. (as shown in the diagram below)



Important: If no action is taken within 5 minutes during the setting process, all settings will be cancelled and the display will return to the standby screen. The combi steamer is in standby.

Operation Instructions

■ Steam Mode


Steam cooking preserves the original taste, nutrients and color of food. It is suitable for steaming vegetables, meat and seafood or braising soup. Always ensure the water tank is filled before using this mode.

	Temperature	Time
Default Setting	100°C	30 mins
Setting Range	50°C - 110°C	5 mins - 6 hours and 59 mins


Example: Set the cooking time to 1 hour and 40 minutes; cooking temperature is 90°C.

Steps:


1. In standby mode, turn the knob clockwise to  Steam Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.

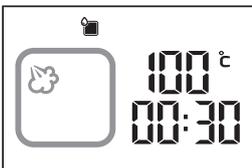

2. Turn the knob until the temperature display shows 90°C. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.

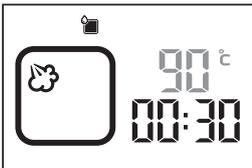


3. Turn the knob until the hour display shows 01. Press the knob to confirm (as shown in the diagram below). The display will jump to minute setting automatically.

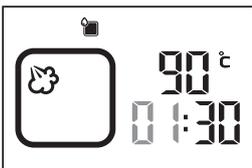

4. Turn the knob until the minutes display shows 40. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking (as shown in the diagram below).

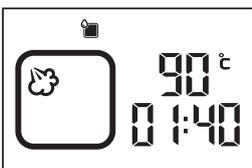

When cooking is completed, the “END” will be shown on display and an audio tone sounds. The  “Extended Cooking Time” icon (customer can increase the cooking time after cooking is completed) and  “Drip Tray Cleaning Reminder” icon (customer has to clear up the water in the drip tray if any) will flash.

Operation Instructions

■ Forced Air + Steam Mode




Cooking food with hot air and steam to prevent moisture loss during high temperature cooking. The rear fan provides good circulation of hot air to ensure even heating on multiple levels. This mode is suitable for all types of food. It is recommended to place aluminum foil or baking paper onto the baking tray cooking. Always ensure the water tank is filled before using this mode.

	Temperature	Time
Default Setting	180°C	30 mins
Setting Range	100°C - 230°C	5 mins - 1 hours and 30 mins


Example: Set the cooking time to 40 minutes; cooking temperature is 210°C.

Steps:


1. In standby mode, turn the knob clockwise to  Forced Air + Steam Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.

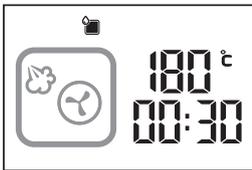

2. Turn the knob until the temperature display shows 210°C. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.

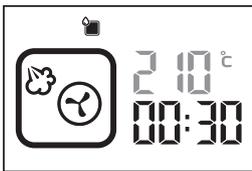

3. Press the knob to confirm 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.

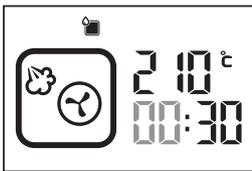

4. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking. (as shown in the diagram below)



When cooking is completed, the “END” will be shown on display and an audio tone sounds. The  “Extended Cooking Time” icon (customer can increase the cooking time after cooking is completed) and  “Drip Tray Cleaning Reminder” icon (customer has to clear up the water in the drip tray if any) will flash.

Operation Instructions

■ Upper/ Bottom Grill/ Conventional Bake Mode

Three grill modes are available: upper grill, bottom grill and conventional bake (upper and bottom grill). You can select a suitable mode according to the types of food and cooking result that you are looking for. It is recommended to place aluminum foil or baking paper onto the baking tray before cooking.

Upper Grill Mode: Suitable for roasting baking food or at a final stage of roasting or baking. It helps browning the surface of your dish.

Bottom Grill Mode: Suitable for baking in the final stage or for food that needs to be cooked from the bottom periodically during cooking, e.g. pizzas, macaroon.

Conventional Mode: Traditional single-level baking and grilling mode. Heat is released from the top and bottom to get food baked evenly. Suitable for cooking meat, fish, bread and cookies, pastries and desserts etc., and particularly suitable for cakes with moist ingredients at the top.

	Temperature	Time
Default Setting	180°C	30 mins
Setting Range	100°C - 230°C	5 mins - 1 hours and 30 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 210°C.

Steps:

1. In standby mode, turn the knob clockwise to  or  or  Mode. Icon of the selected grill mode will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.




2. Turn the knob until temperature display shows 210°C. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



3. Press the knob to confirm the 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.



4. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below).

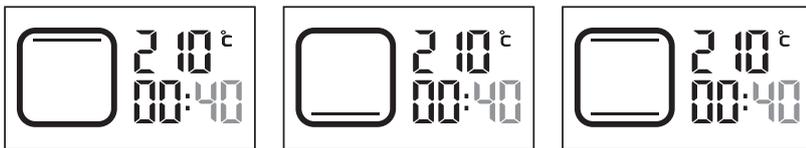

5. Setting is complete. The combi steamer will start cooking. (as shown in the diagram below)



When cooking is completed, the "END" will be shown on display and an audio tone sounds. The  "Extended Cooking Time" icon (customer can increase the cooking time after cooking is completed) will flash.

Operation Instructions

■ Forced Air Mode



The appliance comes with a rear fan which distributes the hot air produced by the rear heater evenly inside the oven. Foods on different levels are heated evenly. It can be used in cooking multiple levels. It is recommended to place aluminum foil or baking paper onto the baking tray before cooking.

	Temperature	Time
Default Setting	180°C	30 mins
Setting Range	100°C - 230°C	5 mins - 1 hours and 30 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 210°C.

Steps:

1. In standby mode, turn the knob clockwise to  Forced Air Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.



2. Turn the knob until the temperature display shows 210°C. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



3. Press the knob to confirm 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.



4. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking. (as shown in the diagram below)



When cooking is completed, the “END” will be shown on display and an audio tone sounds. The  “Extended Cooking Time” icon (customer can increase the cooking time after cooking is completed) will flash.

Operation Instructions

■ Convection Mode



The upper and lower heaters and rear fan operate simultaneously in this mode. Suitable for all baking dishes, such as meat, seafood, pizzas, bread and cookies, pastries and desserts. It is recommended to place aluminum foil or baking paper onto the baking tray before cooking.

	Temperature	Time
Default Setting	180°C	30 mins
Setting Range	100°C - 230°C	5 mins - 1 hours and 30 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 210°C.

Steps:

1. In standby mode, turn the knob clockwise to  Convection Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.



2. Turn the knob until the temperature display shows 210°C. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



3. Press the knob to confirm the 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.



4. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking. (as shown in the diagram below)



When cooking is completed, the “END” will be shown on display and an audio tone sounds. The  “Extended Cooking Time” icon (customer can increase the cooking time after cooking is completed) will flash.

Operation Instructions

■ Air Fry Mode


This mode uses fan to circulate heat inside the cavity to air fry food. It is suitable for crispy food or baking large meat.

	Temperature	Time
Default Setting	180°C	30 mins
Setting Range	100°C - 230°C	5 mins - 1 hours and 30 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 210°C.

Steps:

1. In standby mode, turn the knob clockwise to  Air Fry Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.

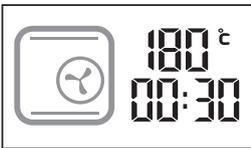

2. Turn the knob until the temperature display shows 210°C. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



3. Press the knob to confirm the 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.



4. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking (as shown in the diagram below).



When cooking is completed, the “END” will be shown on display and an audio tone sounds. The  “Extended Cooking Time” icon (customer can increase the cooking time after cooking is completed) will flash.

Operation Instructions

■ Convection + Steam Mode




This mode combines upper, lower heat, hot air and steam cooking. It is a perfect all-in-one combination cooking. Adding steam during the cooking process can prevent moisture loss during high temperature cooking. Suitable for cooking all types of food, such as large cuts of meat or baking moist cakes. It is recommended to place aluminum foil or baking paper onto the baking tray before cooking. Always ensure that the water tank is filled before using this mode.

	Temperature	Time
Default Setting	180°C	30 mins
Setting Range	100°C - 230°C	5 mins - 1 hours and 30 mins


Example: Set the cooking time to 40 minutes; cooking temperature is 210°C.

Steps:


1. In standby mode, turn the knob clockwise to  Convection + Steam Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.

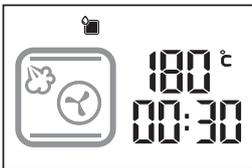

2. Turn the knob until the temperature display shows 210°C. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.

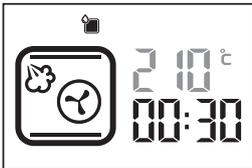


3. Press the knob to confirm 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.

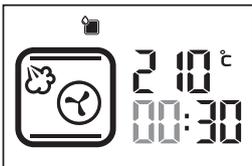

4. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking. (as shown in the diagram below)

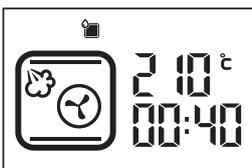

When cooking is completed, the “END” will be shown on display and an audio tone sounds. The  “Extended Cooking Time” icon (customer can increase the cooking time after cooking is completed) and  “Drip Tray Cleaning Reminder” icon (customer has to clear up the water in the drip tray if any) will flash.

Operation Instructions

■ Proving Mode



This mode works with steam to ensure stable high temperature and humidity inside the oven. It allows dough (for pizza or bread) to rise quicker in a stable environment, and is used for fermenting dough for pizzas or bread. Always ensure that the water tank is filled before using this mode.

	Temperature	Time
Default Setting	35°C	30 mins
Setting Range	30°C - 40°C	5 mins - 6 hours and 59 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 35°C.

Steps:

1. In standby mode, turn the knob clockwise to  Proving Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.



2. Press the knob to confirm the 35°C temperature setting (as shown in the diagram below). The display will jump to hour setting automatically.



3. Press the knob to confirm 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.



4. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking (as shown in the diagram below).



When cooking is completed, the “END” will be shown on display and an audio tone sounds. The  “Extended Cooking Time” icon (customer can increase the cooking time after cooking is completed) and  “Drip Tray Cleaning Reminder” icon (customer has to clear up the water in the drip tray if any) will flash.

Operation Instructions

■ Bun Reheat Mode



Bun reheated at a regulated temperature and steam is added to reheat that tastes just like freshly-steamed bun. Always ensure that the water tank is filled before using this mode.

Suggested cooking time: Reheating time for frozen bun: about 10-15 minutes; Reheating time for room temperate bun: about 8-13 minutes. It is recommended to add cooking time for bun with fillings as needed. This suggested cooking time is solely for reference. Cooking time is affected by bread's quantity, size, type and personal taste.

	Temperature	Time
Default Setting	100°C	10 mins
Setting Range	Cannot be adjusted	5 - 59mins


Example: Cooking bread that has been refrigerated. Set the cooking time to 25 minutes.

Steps:


1. In Standby mode, turn the knob clockwise to  Bun Reheat Mode, the icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to minute setting automatically.



2. Turn the knob until the minute display shown 25. Press the knob to confirm (as shown in the diagram below).

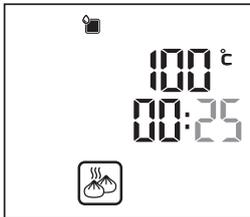

3. Setting is complete. The combi steamer will start cooking. (as shown in the diagram below)

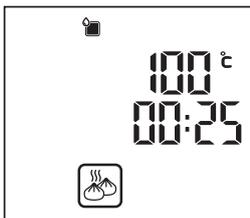

When cooking is completed, the "END" will be shown on display and an audio tone sounds.

The  "Extended Cooking Time" icon (customer can increase the cooking time after cooking is completed) and  "Drip Tray Cleaning Reminder" icon (customer has to clear up the water in the drip tray if any) will flash.

Operation Instructions

■ Bread Reheat Mode

Bread is reheated at a regulated temperature that tastes just like freshly-baked.

Suggested cooking time: Reheating time for frozen bread: about 10-15 minutes; Reheating time for room temperature bread: about 8-13 minutes. It is recommended to add cooking time for bread with fillings as needed. This suggested cooking time is solely for reference. Cooking time is affected by the bread's quantity, size, type and personal taste.

	Temperature	Time
Default Setting	160°C	10 mins
Setting Range	Cannot be adjusted	5 mins - 59 mins

Example: Cooking bread that has been refrigerated. Set the cooking time to 25 minutes

Steps:

1. In standby mode, turn the knob clockwise to  Bread Reheat Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to minute setting automatically.



2. Turn the knob until the minute display shows 25. Press the knob to confirm (as shown in the diagram below).



3. Setting is complete. The combi steamer will start cooking (as shown in the diagram below).



When cooking is completed, the "END" will be shown on display and an audio tone sounds. The  "Extended Cooking Time" icon (customer can increase the cooking time after cooking is completed) will flash.

Operation Instructions

■ Slow Cook Mode

Steam is injected to maintain temperature inside the oven for slow cooking. Low temperature is used, meat and seafood can be preserved the original flavor without overcooking. Food can be placed in vacuum bags. Always ensure that the water tank is filled before using this mode.

	Temperature	Time
Default Setting	60°C	30 mins
Setting Range	50°C - 90°C	5 mins - 6 hours and 59 mins

Example: Set the cooking time to 40 minutes; cooking temperature is 60°C.

Steps:

1. In standby mode, turn the knob clockwise to  Slow Cook Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.



2. Press the knob to confirm the 60°C temperature setting (as shown in the diagram below). The display will jump to hour setting automatically.



3. Press the knob to confirm 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.



4. Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below).



5. Setting is complete. The combi steamer will start cooking (as shown in the diagram below).



When cooking is completed, the "END" will be shown on display and an audio tone sounds.

The  "Extended Cooking Time" icon (customer can increase the cooking time after cooking is completed) and  "Drip Tray Cleaning Reminder" icon (customer has to clear up the water in the drip tray if any) will flash.

Operation Instructions

■ Drying Fruit Mode


Food is dehydrated with hot air in low heat. Suitable for preparing dried fruit and vegetable slices or meat jerkies.

	Temperature	Time
Default Setting	80°C	60 mins
Setting Range	40°C - 90°C	5 mins - 12 hours and 59 mins


Example: Set the cooking time to 2 hours; cooking temperature is 90°C.

Steps:


- In standby mode, turn the knob clockwise to  Drying Fruit Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.

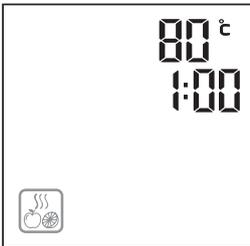


- Turn the knob until the temperature display shows 90°C. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.

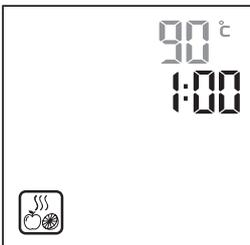


- Turn the knob until the hour display shows 02. Press the knob to confirm (as shown in the diagram below). The display will jump to minute setting automatically.

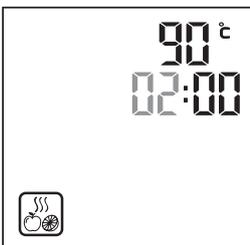

- Press the knob to confirm the 00 minute setting (as shown in the diagram below).

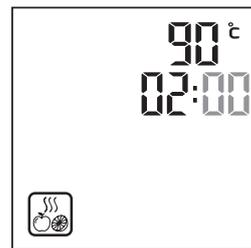

- Setting is complete. The combi steamer will start cooking (as shown in the diagram below).

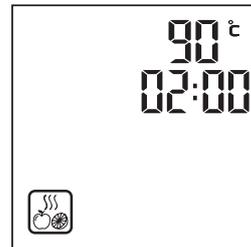

When cooking is completed, the “END” will be shown on display and an audio tone sounds. The  “Extended Cooking Time” icon (customer can increase the cooking time after cooking is completed) will flash.

Operation Instructions

■ Defrost Mode



Defrost chilled or frozen food with steam. Always ensure that the water tank is filled before using this mode.

	Temperature	Time
Default Setting	55°C	30 mins
Setting Range	50°C - 60°C	5 mins - 6 hours and 59 mins


Example: Set the cooking time to 1 hour and 40 minutes; defrosting temperature is 60°C.

Steps:


- In standby mode, turn the knob clockwise to  Defrost Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). This display will jump to temperature setting automatically.




- Turn the knob until the temperature display shows 60°C. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.

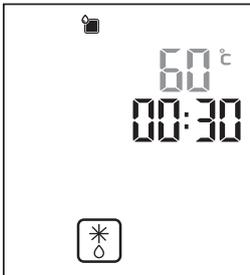


- Turn the knob until the hour display shows 01. Press the knob to confirm (as shown in the diagram below). The display will jump to minute setting automatically.

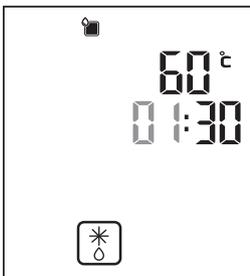

- Turn the knob until the minute display shows 40. Press the knob to confirm (as shown in the diagram below).

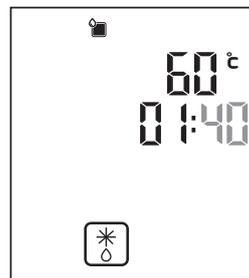

- Setting is complete. The combi steamer will start cooking (as shown in the diagram below).

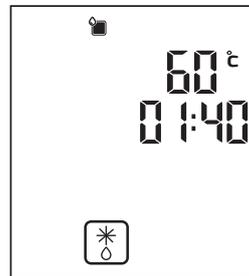

When cooking is completed, the “END” will be shown on display and an audio tone sounds.

The  “Extended Cooking Time” icon (customer can increase the cooking time after cooking is completed) and  “Drip Tray Cleaning Reminder” icon (customer has to clear up the water in the drip tray if any) will flash.

Operation Instructions

■ Preheat - Steam Mode

The Preheat Mode can be operated with steam mode. The oven will be heated to preset temperature.

Temperature	
Default Setting	100°C
Setting Range	50°C - 110°C

Oven will automatically adjust the cooking time according to set temperature. “END” will be displayed and an audio tone will be heard when the temperature reaches the preset temperature. Current time is displayed during preheating. Always ensure that the water tanks is filled before using steam preheating.

Example: Set the steam preheating temperature to 100°C.

Steps:

1. In standby mode, turn the knob clockwise to  Steam Preheating Mode. The icon will flash. Steam is the default setting. Press the knob to confirm (as shown in the diagram below).




2. The display will jump to temperature setting automatically. Press the knob to confirm the default temperature 100°C (as shown in the diagram below).



3. Setting is complete. The combi steamer will start preheating (as shown in diagram below).



When preheating is complete, the display will show “END” and an audio tone will be heard. The  “Drip Tray Cleaning Reminder” icon (customer has to clear up the water in the drip tray if any) will flash (as shown in the diagram below). After preheating the combi steamer, you can select other cooking modes to continue your cooking as required.

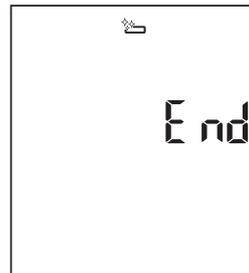

Important: The function of “Increase the Cooking Time after Cooking is Completed” is not available in this mode.

Operation Instructions

■ Preheat - Baking Mode

The Preheat Mode can be operated with baking mode. The oven will be heated to preset temperature.


Temperature	
Default Setting	180°C
Setting Range	110°C - 230°C

Oven will automatically adjust the cooking time according to set temperature. "END" will be displayed and an audio tone will be heard when the temperature reaches the preset temperature. Current time is displayed during preheating.


Example: Set the baking preheating temperature to 200°C.

Steps:


1. In standby mode, turn the knob clockwise to  Baking Preheating Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below).

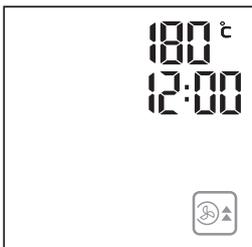


2. The display will jump to temperature setting automatically. Turn the knob until the display shows 200°C. Press the knob to confirm (as shown in the diagram below).

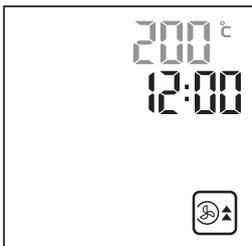

3. Setting is complete. The combi steamer will start preheating (as shown in diagram below).

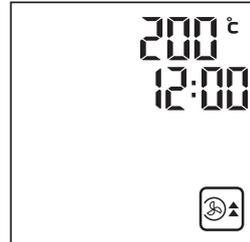

When preheating is complete, the display will show "END" and an audio tone will be heard (as shown in the diagram below). After preheating the combi steamer, you can select other cooking modes to continue your cooking as required.

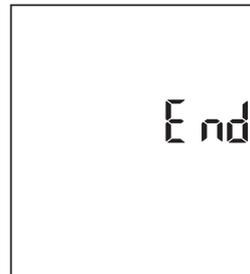

Important: The function of "Increase the Cooking Time after Cooking is Completed" is not available in this mode.

Operation Instructions

■ Keep Warm Mode

Keeping food warm with hot air. Suitable for keeping cooked dishes warm.

	Temperature	Time
Default Setting	55°C	30 mins
Setting Range	50°C - 60°C	5 mins - 3 hours and 59 mins

Example: Set the cooking time to 1 hours and 30 minutes; cooking temperature is 60°C.

Steps:


- In standby mode, turn the knob clockwise to  Keep Warm Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.




- Turn the knob until the temperature display shows 60°C. Press the knob to confirm (as shown in the diagram below) The display will jump to hour setting automatically.




- Turn the knob until the hour display shows 01. Press the knob to confirm (as shown in the diagram below). The display will jump to minute setting automatically.

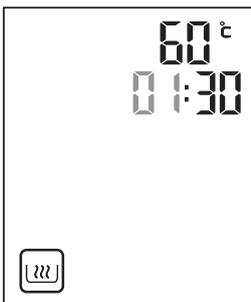

- Press the knob to confirm “30” minute setting (as shown in the diagram below).

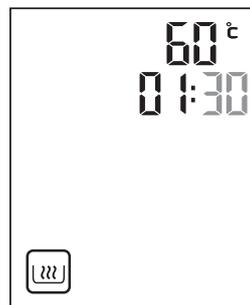

- Setting is complete. The combi steamer will start cooking (as shown in the diagram below).

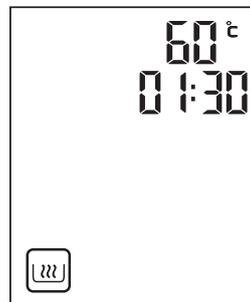

When cooking is completed, the “END” will be shown on display and an audio tone sounds.

The  “Extended Cooking Time” icon (customer can increase the cooking time after cooking is completed) will flash.

Operation Instructions

■ Cavity Drying Mode

In this mode, the oven is heated to a high temperature so any excessive moisture and steam are evaporated. This function is used for drying the oven after any steam cooking modes.


	Temperature	Time
Default Setting	230°C	25 mins
Setting Range	Cannot be adjusted	Cannot be adjusted

Steps:

1. In standby mode, turn the knob clockwise to  Cavity Drying Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below).



2. The combi steamer will start cooking (as shown in the diagram below).

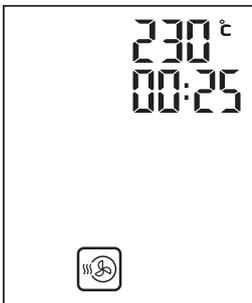

When cooking is completed, the “END” will be shown on display and an audio tone sounds.

The  “Extended Cooking Time” icon (customer can increase the cooking time after cooking is completed) will flash.

Important:

The function of “Adjust the Setting during Cooking Process” is not available in this mode.

Operation Instructions

■ Sterilization Mode

At sterilizing mode, high temperature 110°C is used to sterilize dinnerware, cutlery or feeding bottles. Always ensure that the water tank is filled before using this mode.

	Temperature	Time
Default Setting	110°C	30 mins
Setting Range	Cannot be adjusted	5 mins - 6 hours and 59 mins

Example: Set the cooking time to 35 minutes.

Steps:


1. In standby mode, turn the knob clockwise to  Sterilization Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.




2. Turn the knob to confirm the 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.



3. Turn the knob until the minute display shows 35. Press the knob to confirm (as shown in the diagram below).

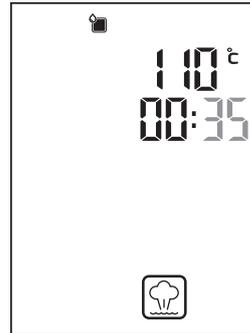

4. Setting is complete. The combi steamer will start cooking (as shown in the diagram below).

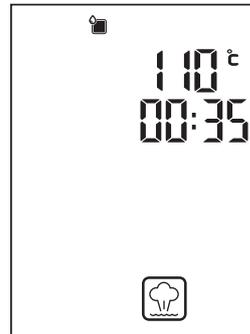

When cooking is completed, the “END” will be shown on display and an audio tone sounds.

The  “Extended Cooking Time” icon (customer can increase the cooking time after cooking is completed) and  “Drip Tray Cleaning Reminder” icon (customer has to clear up the water in the drip tray if any) will flash.

Operation Instructions

■ Descaling Mode



Water used in steaming mode may result in scale accumulated inside cavity and water pipe.

“Descaling” icon  will be on once combi steamer has reached 100hrs steam related cooking time to remind the user to run the descaling programme mode. The light will stay on until the descaling is performed.

Descaling is carried out in three stages that involve one descaling process and two descaling and cleaning processes. The user has to change the liquid in the tank 3 times during the entire cleaning process. It is also necessary to empty the drip tray by cleaning up. Icon  will be lighted to remind cleaning up the drip tray is needed.

Also, descaler is required for this mode. Customer can select the Wpro descaler under Whirlpool brand. This product can be used in steamer for cleaning limescale deposits effectively, optimizing machine performance and prolonging the lifespan of the appliance. For more details, please visit our website: www.whirlpool.com.hk

For satisfactory results, follow the suggested dosage for descaler and water below:

Stage 1: Descaling. Running time is 30 minutes. Suggested dosage: 10ml descaling agent and 120ml pure water.

Stage 2: 1st descaling and cleaning process. Running time is 10 minutes. Suggested dosage: 130ml pure water.

Stage 3: 2nd descaling and cleaning process. Running time is 10 minutes. Suggested dosage: 130ml pure water.

	Temperature	Time
Default Setting	85°C	50 mins
Setting Range	Cannot be adjusted	Cannot be adjusted

Steps:

1. Stage 1: Descaling

- Fill the water tank up to the level of the descaling 130ml icon  with 10ml descaling agent and 120ml pure water.
- In standby mode, turn the knob clockwise to  Descaling Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below).



- The descaling mode will start (as shown in the diagram below).



- Stage 1 takes 30 minutes. When done, the time display digits will flash and an audio tone will sound to indicate stage 1 is complete.  Drip tray cleaning reminder icon will flash on the display panel to remind the user to empty the drip tray.
- Pour out the dirty liquid and put the drip tray back into place.

2. Stage 2: 1st descaling and cleaning process

- Open the oven door, fill the water tank up to the level of the descaling 130ml icon  with 130ml pure water.
- Put the water tank back into place and close the oven door. Descaling and cleaning will begin automatically.
- When done, the time display digits will flash and an audio tone will sound to indicate stage 2 is complete.  Drip tray cleaning reminder icon will flash on the display panel to remind the user to empty the drip tray.
- Pour out the dirty liquid and put the drip tray back into place.

Operation Instructions

3. Stage 3: 2nd descaling and cleaning process

- A. Open the oven door. Fill the water tank up to the level of the descaling 130ml icon  with 130ml pure water.
- B. Put the water tank back into place and close the oven door. Descaling and cleaning will begin automatically.
- C. When done, the display will show “END” and an audio tone will sound.  Drip tray cleaning reminder icon will flash on the display panel to remind the user to empty the drip tray.
- D. Pour out the dirty liquid and put the drip tray back into place.

4. Descaling is complete.

Important:

1. The function of “Adjust the setting during Cooking Process / Increase the Cooking Time after Cooking is Completed” is not available in this mode.
2. Descaling mode will be interrupted if the steps of descaling mode is taken in the wrong way (including pause during the descaling process or open and close the oven door not following instructions etc). Please restart descaling mode and follow the instructions in the manual.

Operation Instructions

■ Preset Function

You must set the clock before using the preset function. For instructions on clock setting, please see “Setting the Clock” on page 57 of this instruction manual.

Example: The current time is 16:30. You want to preset cooking time for the Bottom Grill Mode. Cooking time is 40 minutes and temperature is 210°C. Cooking will stop at 18:00.

Steps:

1. In standby mode, turn the knob clockwise  Bottom Grill Mode. The icon will flash. Press the knob to confirm (as shown in the diagram below). The display will jump to temperature setting automatically.



2. Turn the knob until the temperature display shows 210°C. Press the knob to confirm (as shown in the diagram below). The display will jump to hour setting automatically.



3. Press the knob to confirm the 00 hour setting (as shown in the diagram below). The display will jump to minute setting automatically.



4. Turn the knob until the minute display shows 40. Press the setting button  to confirm (as shown in the diagram below).




5. The screen for presetting the finishing time will be seen. The clock will go back to current time display, i.e. 16:30. The “16” digits will flash. The  preset function icon at the top of the display panel will also flash to indicate preset setting is in process (as shown in the diagram below).



Operation Instructions

6. Turn the knob until the hour display shows 18. Press the knob to confirm (as shown in the diagram below). The display will jump to minute setting automatically .

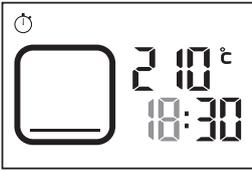

7. Turn the knob until the minute display shows 00. Press the knob to confirm.



8. The  preset function icon of the display panel will light up. Display will change from operating time back to the current time 16:30, indicating preset setting is complete (as shown in the diagram below).



A. Checking Preset Function Status

Press and hold the setting button  for 3 seconds to check the preset stop time. The preset function icon will flash. Press and hold the setting button  for 3 seconds again to return to the preset function screen.

B. Cancelling Preset Function:

To cancel any preset function setting, press the  power button directly. The combi steamer will return to the standby screen automatically.

Important: Preset Function is available in 9 Mainly Cooking Modes, Bun Reheat Mode, Bread Reheat Mode, Slow Cook Mode and Drying Fruit Mode. (See “Control Panel – Major Features/ Description of Major Features on P.52-55 for details)

Suggestion: Preset cooking operation may be cancelled if children touch the screen accidentally. To avoid this, activate the child lock function after setting the preset function. For instructions on setting the child lock, please see “Control Panel – Basic Functions” on page 51 of this instruction manual. The child lock will not affect cooking. The combi steamer will start cooking normally at the preset time.

Operation Instructions

■ Adjust the Setting during Cooking Process / Increase the Cooking Time after Cooking is Completed.

A. Adjust the setting during cooking process

You can extend or shorten the cooking time and the temperature as required during the cooking process.


Example: Change the cooking time and temperature settings from 01:40 and 90°C to 02:00 and 100°C.

Steps:


1. During cooking, press the knob to interrupt and pause the cooking. The time display will flash (as shown in the diagram below).




2. Press the setting button . The display will go to the reset cooking time screen automatically. The temperature display flashes, and the  “Adjust the setting during cooking / Extended cooking time” icon lights up on the display (as shown in the diagram below).

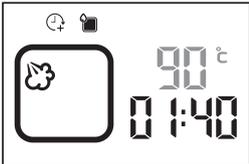


3. Turn the knob until the temperature display shows 100°C. Press the setting button  to confirm (as shown in the diagram below). The display will jump to hour setting automatically.

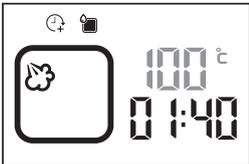


4. Turn the knob until the hour display shows 02. Press the setting button  to confirm (as shown in the diagram below). The display will jump to minute setting automatically.

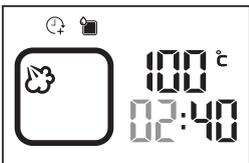

5. Turn the knob until the minute display shows 00. Press the knob to confirm (as shown in the diagram below).

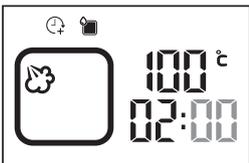

6. Setting is complete. Cooking will be resumed with new settings (as shown in the diagram below).

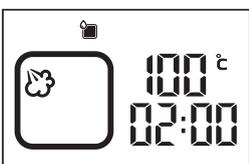

Operation Instructions

B. Increase the cooking time after cooking is completed

You can increase the cooking time after cooking is completed. Temperature cannot be adjusted.

	Temperature	Time
Setting Range	Cannot be adjusted	1 – 59 mins

When cooking is completed, the “END” will be shown on display and an audio tone sounds. The  “Extended Cooking Time” icon will flash on the display and the  “Drip Tray Cleaning Remind” icon will flash for 3 minutes. (Note: the drip tray cleaning reminder icon will light up only if the steam mode has been in operation) (As shown in the diagram below).




To increase the cooking time, follow the steps below:


Example: Cooking is completed and need to increase the cooking time by 3 minutes.

Steps:


1. Press the knob to confirm to increase the cooking time, the display will jump to minute setting automatically.

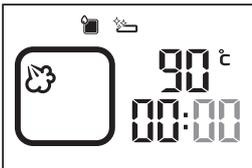

2. Turn the knob until the minute display shows 03. Press the knob to confirm (as shown in the diagram below).

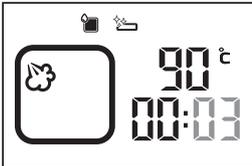

3. Setting is complete. Cooking will resume with added cooking time under previous settings (as shown in the diagram below).

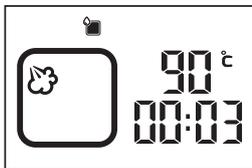

Note: If no action is taken within 5 minutes after cooking is completed, the combi steamer will return to standby mode.

Operation Instructions

■ Residual Heat Indicator

In standby or energy-saving mode the  “Residual Heat Indicator” icon will be shown to warn that cavity exceed 50°C and is not suitable for cleaning (as shown in the diagram below). The icon will be off until cavity drops below 50°C. Users should not clean the appliance until the icon is off.



■ Child Lock

Steamer is equipped with child lock so that children cannot switch on or change any setting accidentally.

A. Activating the Child Lock:

Press and hold the  “Child Lock” button for 3 seconds. Child lock is enabled. The “Child Lock” icon lights up (as shown in the diagram below).



B. Cancelling the Child Lock:

Press and hold the “Child Lock” button for 3 seconds to disable the child lock function. The “Child Lock” icon goes off.

Cleaning and Maintenance



■ Cleaning and Maintenance

1. Under normal circumstances, cleaning is the only maintenance required.
2. Cleaning and maintenance should only be carried out when the combi steamer is cool and the  Residual Heat Indicator icon disappeared. Disconnect the power plug from the main power supply before cleaning. Do not use any steam cleaner to clean this appliance.
3. To avoid corrosion which would shorten the useful life of your combi steamer, always keep it clean. Always clean the appliance after use.
4. To avoid damage to the combi steamer body, control panel, oven walls and accessories, do not use any cleaning cloth that contains metal, scrubbing cleaners, steel brush or cloth with a rough surface for cleaning. Use a sponge or cloth soaked in gentle detergent or kitchen towel paper sprayed with glass cleaner to clean the appliance. Always make sure the cavity (including the bottom) is completely dried after use.
5. Salt is a corrosive substance that would result in rust stains if left to build up inside the oven. Acidic sauces, such as ketchup, mustard and preserves, contain chemicals like chlorine and acids which would damage the stainless steel surface.
6. Do not allow grease and food debris to remain on the oven door and door seal. If the door seal is not kept clean, the oven door may fail to close when the appliance is in operation. This would cause damage to the front and sides of the combi steamer.
7. After each use:
 - i) Empty the black drip tray under the oven door to prevent overflow, splash and soiling of the worktop. (The drip tray can be removed. It collects condensation water every time after use when door is opened)
 - ii) Empty the water tank.
 - iii) Always leave the door opened for 15-30 minutes or run the Cavity Drying Mode to dry the oven and door frame.
8. If the oven is very dirty, run the Sterilization Mode (110°C) to remove grease and dirt with steam for 30 minutes before cleaning. Do not start cleaning until the appliance has cooled down. For stubborn grease stains, repeat these steps several times. Never use any cleaning cloth that contains metal, scrubbing cleaners, steel brush or cloth with a rough surface for cleaning.
9. It is suggested to run the Descaling Mode at least once a month or when the descaling icon lights up.
10. Tap water, drinking water or distilled water is suggested for steaming function. Avoid using mineral water.
11. The water tank must be checked at least once a month. Clean it if necessary and put it back correctly.
12. Disconnect the main power if the appliance will not be used for a long period. Keep the oven clean and put the appliance in a dry place away from corrosive gases.
13. After every use, clean and air dry the oven (including the top, sides and bottom). If discoloration is detected at the bottom or inside the oven, remove the stains with a stainless steel cleaner (e.g. Wpro Steel Cleaner).

Cleaning and Maintenance


■ How to Lower the Upper Heater

1. Put your thumbs to press against the spring hock to the back until release and pull down the upper heater. Push back gently towards the arrow position as shown below.

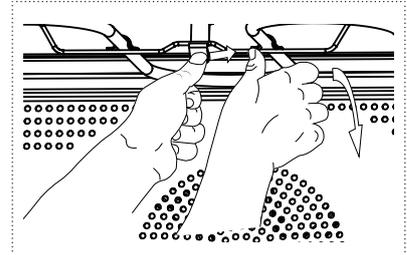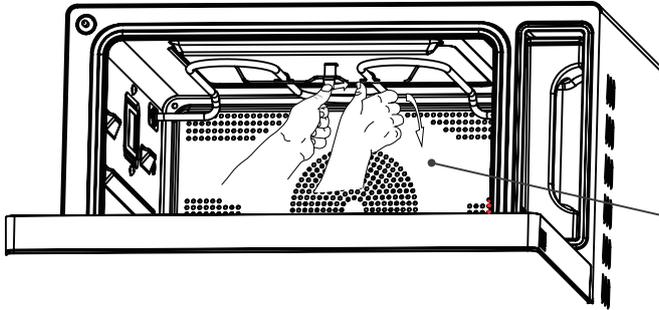

Put your thumbs to press against the spring hock to the back until release and pull down the upper heater. The heater can be lowered.

2. You can clean the top of the oven now (as shown in the diagram below).

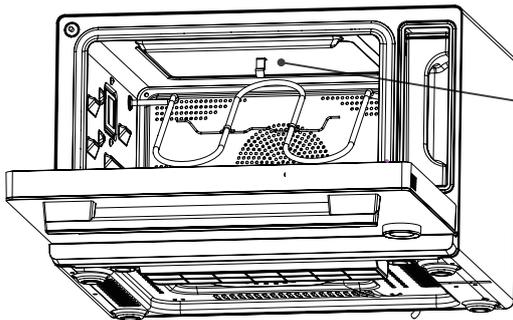

The heater can be lowered for easy cleaning.

3. After cleaning, gently press the upper heater upwards to snap into place.

Important:

1. Both thumbs and gentle force is required to press upwards for the steel bracket to easily lock into place.
2. Cleaning should only be carried out when the combi steamer is cool and the  Residual Heat Indicator icon disappeared.

Others

■ Troubleshooting

A. Possible Problems

	Problem	Cause	Solution
1	No Display	Combi steamer is not connected to power supply	Ensure it is connected to power supply
		Malfunction of power socket	Check if other electrical appliances work normally
		Power cords is not working	Contact after-sales service
2	Combi steamer is not working	Power supply plug is not connected correctly	Try to plug in the power supply again
		Oven door is not closed properly	Close the oven door again
		Water tank is not in a correct position	Put the water tank back correctly
		Circuit board is damaged	Contact after-sales service
		Child lock is enabled	Disable the child lock
3	Display is not working properly	Display is damaged	Contact after-sales service
		Circuit board is damaged	
4	Lots of Water or steam can be found during cooking	Oven door is not closed tightly	Close the oven door tightly again
		Door seal is damaged	Contact after-sales service
5	Oven light is not working	Light is damaged	Contact after-sales service
		Control board is damaged	
6	Fan motor fails to work properly	Fan motor is damaged	Contact after-sales service
		Control board is damaged	
7	Control panel is not working properly	Control panel is out of order	Contact after-sales service
		Control board is damaged	
8	No steam	Water tube is damaged	Contact after-sales service
		Water pump is damaged	
9	Water leakage	The water tank is not in a correct position	Fill the water tank and put it back correctly

Others

B. Following conditions are normal

	Condition	Cause
1	Fame and smell can be detected during the first time of use	These are emitted by the protective oil and it is normal.
2	Noise can be heard using any steam related mode	This is normal during water pumping into machine for steaming.
3	Water condensation can be found around the ventilation vent	The combi steamer produces a large amount of steam under steam cooking mode. Most of the steam will be vented from the frontal ventilation and some condensation water will be found around the ventilation vent.
4	The fan continues to work after cooking is finished	The fan will continue to run for 3 minutes after specific cooking functions for cooling purpose to discharge oven heat completely. It is normal.
5	White powder can be found around the air inlet	This is water scale. It is normal. If white powder (water scale) is detected, it is recommended to run the Descaling Mode for cleaning purpose.
6	Bottom and cavity of oven's color has yellowing.	Stainless steel will generate yellow marks when heated and not kept clean. It is recommended to clean the combi steamer after each use to avoid the yellowing issue caused.
7	Sound maybe created while closing the door during the cooking process or cooking is completed.	It is different pressure between room temperature and oven cavity. It is normal.
8	Water maybe spout out from air outlet while closing the door.	It is different pressure between room temperature and oven cavity. It is normal.

Others

■ Product Specifications

Model	CS1252A / CS1252B
Rated Voltage and Frequency	220-240V~ 50/60Hz
Rated Input Power	2100W
Product Dimension (H x W x D)	330 x 500 x 441 mm
Cavity Dimension (H x W x D)	220 x 366 x 309 mm
Oven Capacity	25L
Net Weight	Approximately 17 kg

Register your product online

網上登記新產品保養

香港 Hong Kong



Scan QR Code or visit
www.whirlpool.com.hk
to register your product warranty online.

You can download the user manual by:

- Visiting Our website **www.whirlpool.com.hk**
- Contacting our Customer Service at (852) 2406 9138.

掃描二維碼或登入
www.whirlpool.com.hk
以進行網上產品保養登記

可透過以下途徑下載使用說明書:

- 瀏覽我們的網頁 **www.whirlpool.com.hk**
- 致電我們的客戶服務中心 (852)2406 9138

新加坡 Singapore



Scan QR Code or visit
www.whirlpool.com.sg/warranty-registration
to register your product warranty online.

You can download the user manual by:

- Visiting Our website **www.whirlpool.com.sg**
- Contacting our Customer Service at (65) 6250 6888
or email **helpdesk.sg@whirlpool.com**

掃描二維碼或登入
www.whirlpool.com.sg/warranty-registration
以進行網上產品保養登記

可透過以下途徑下載使用說明書:

- 瀏覽我們的網頁 **www.whirlpool.com.sg**
- 致電我們的客戶服務中心 (65)6250 6888
或電郵至 **helpdesk.sg@whirlpool.com**

Whirlpool® Registered trademark/TM Trademark of Whirlpool group of companies
All rights reserved - <http://www.whirlpool.com.hk>

註冊商標/惠而浦集團的TM商標

版權所有 翻印必究 - <http://www.whirlpool.com.hk>

