

Health & Safety, Use & Care and Installation guide

Model: AP536WS

AP536WT

AP636W



Thank you for purchasing Whirlpool products. For better and safer use, please read this manual carefully and keep it for future reference.

# **Table of Contents**

Safety Precautions	2
Precautions for use	3
Part Names	5
Preparation before using the product	6
Notice for Use	7
Control Panel	8
Instructions for Use	9
Maintenance	11
Specifications	12
Troubleshooting Guide	13
Packing List	14



## **Safety Precautions**

In order to avoid possible injury or property damage to yourself or others, it is important to pay attention to the following precautions:

■ Ignoring or misinterpreting these symbols may result in the following two situations:



This symbol indicates "Serious injury or death".

**A** Caution

This symbol indicates "May cause personal injury or other object damage".

The contents to be complied with are classified as follows:



This symbol indicates a prohibited issue.



This symbol indicates a mandatory issue.

# Warning



Do not disassemble or modify the air purifier.

(Unauthorized disassembly or modification of the appliance may result in an accident or fire). Please contact the designated repair station for maintenance service.



Do not pull on the power cord while moving or storing.

(This may cause a short circuit or internal damage to the power cord may occur and result in a fire or electric shock.)

Do not touch the power plug with wet hands.

(This could result in electric shock.)

- Do not damage the power cord and socket.
- Do not cut, modify, over-twist, pull, twist, and tangle the power cord. Do not place heavy objects on the power cord or squeeze the power cord.

(Using a damaged power cord may result in electric shock or fire.)

- To repair the power cord or plug, contact the designated service station.
- Do not use the power supply, universal socket or connecting device of exceeded rated values. Use only 220-240V AC power supply.

(Using the universal socket or connecting device of exceeded rated value may cause overheat of the power supply and result in a fire.)

In order to better protect the product and prolong service life, do not plug the power plug in too frequently.



- Please clean the power plug periodically.
- If there is dust on the power plug, moisture may compromise the insulation of the plug and result in a fire.
- Unplug the power plug and wipe it with a dry cloth.

If the appliance is not used for a long period of time, unplug the power plug.



- Please insert the plug fully into the power outlets.
- If the plug is not fully inserted properly, it may cause an electric shock or even a fire.
- Do not use a damaged plug or a socket with loose outlets.



Children are not allowed to operate the product directly.

(This may cause an electric shock and injury.)

Prohibitions

Do not use chlorine and acid detergents.

(The toxic gases emitted from the detergent are harmful to health.)

Do not put fingers or metal objects into the air inlet, outlet and other crevices.

(Contact with the inside of the product may result in an electric shock or injury.)



■ This product is not suitable for a physically, perceptually or mentally handicapped person or a child to operate. Unless the person is in custody of someone and guided by someone while operating this product.



#### Precautions for use

# Warning



wet!

Do not wet the main body of the product.



When moving

Prohibi-

tions!

Do not place the running product upside down.

This may cause a short circuit and result ina fire or

electric shock.

- Turn off the product
- Hold the handle

This may cause damage to internal parts and result in an electric shock or fire.

# Caution



Do not use solvents such as benzene, thinners, etc. to clean the air purifier. Keep the product from contacting with insecticidal sprays.

The air purifier may be broken and damaged or a short circuit may occur to result in an electric shock or fire.



Do not get wet!

Do not use this air purifier in a place subject to high temperatures or humidity or other places where the main body of the product may get wet, such as a bathroom.

Current leakage may occur to the air purifier and result in an electric shock or fire.



When unplugging the power plug, hold the plug instead of the power cord.

Pulling the power cord directly may cause a short circuit or damage to the power cord, or result in an electric shock or fire.



Prohibitions!

Do not use this air purifier in places where greasy particles are present.

For example, breakage or damage may occur to the air purifier that is placed in a kitchen.

The air purifier shall not be used as a ventilator.



Keep it away from the flame!

Do not let volatile substances or combustible objects, such as tobacco or incense, get into the product.

This may cause a fire.



tions!

Do not use this air purifier in an indoor place where a fumigating pesticide is used.

Chemical residues may accumulate in the product and be released from the air outlet as a hazard to the health.

After using a pesticide, the room should be thoroughly ventilated before using the air purifier.



If you use the product together with a heater a room, the room should keep ventilated.

Otherwise carbon monoxide poisoning will occur.

## Caution

In any of the following cases, turn off the power of the product immediately.

- If a switch does not work.
- If the circuit breaker is activated or the fuse is burnt.
- If the power cord or plug is hot.
- If you smell a burning smell, hear abnormal sound or feel vibration.
- If there are any other anomalies or malfunctions.

If the product's power cord is damaged, you should contact the product manufacturer, service center or qualified technicians to replace the power cord in case any danger may occur.




#### Precautions for use


# **⚠** Caution

- This product is only for indoor instead of outdoor use.
- This product should be placed on a dry horizontal surface to use.
- Do not block the air inlet and outlet while the product is used.
- This product is not a substitute for a ventilation fan, vacuum cleaner or kitchen hood.
- If the room air quality is poor (e.g., there is a smell of smoke, newly decoration, etc.), it is strongly recommended to open the window while using this product so that better effects can be obtained.
- The distance between obstacles from all sides of the product being used should be more than 30CM respectively.
- Do not remove the front cover of the product being used in case the power supply would be cut off and unnecessary damage may occur to the product.
- If you need to dismount the front cover for maintaining the screen filter, turn off the product and unplug the power cord first.
- Do not place the product in the following places:
- Close to walls, curtains or other soft objects. (This may block the air inlet and outlet and affect the air circulation.)
- Places with direct sunlight. (Longterm sunshine may cause deformation and discoloration and affect the service life of the product.)
- Near TV sets, microwave ovens and other objects that produce the magnetic field. (This may cause product malfunctions and noise problems.)
- The air outlet is placed toward the furniture or other items. (Inclined to be stained.)





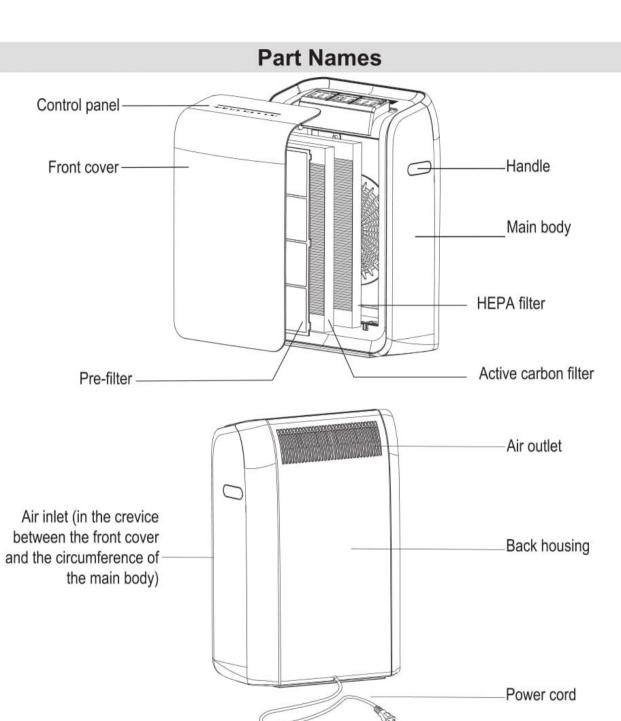

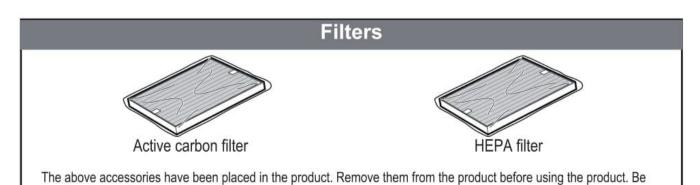

sure to remove plastic packaging bags.




# Preparation before using the product

Unpack the product.

After opening the carton, you can see foam for protecting the main body.

As shown in the figure, remove the left and right foam for protecting the main body respectively.

(In order to ensure transport safety, the main body and the front cover are packaged separately)

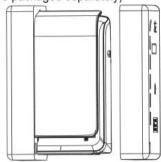

3. Take the filters out of the packaging bag.



5. Install the Pre-filter.

Snap the boss on the perimeter of the Pre-filter into the slot of the main body.




- Remove the Pre-filter, Active carbon filter, and high efficiency filter in sequence.
- 1 Remove the Pre-filter.
- Remove the Active carbon filter and HEPA filter.



 Re-install the HEPA filter and Active carbon filter back into the product.



- Install the front cover.
- Snap the upper claw of the front cover into the upper slot at the upper part of the main body.
- 2 Hold the lower end of the front cover and press down slightly to snap the lower claw of the front cover into the lower slot of the main body.

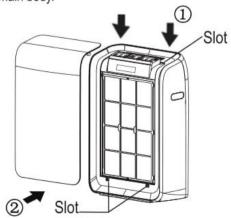



#### **Notice for Use**

#### Auto operation mode

In this mode, the product will automatically select an operating state depending on the amount of impurities in the air.

#### Air Quality Indicator

The air quality sensor will display the indicator color correspond to the air quality.

Air pollution level	Clean		Polluted	
Indicating color	Green	Blue	Yellow	Red
Air volume	Weak	Medium	Standard	High

#### Safety Lock Function

If the product is running, when user opens the front cover of the air purifier, the safety switch will turn off the power supply of the product spontaneously to ensure user safety. Although the product has a protection device, but it is advisable to first turn off the product and unplug the power cord before remove the front cover.

#### Filter Reset

When the filter needs to be replaced, the reset filter indicator will blink red and fan speed will be limited to "2", please replace the filter. After the filter is replaced, user only needs to press the Filter Reset button for 4 seconds, and the reset filter indicator turns off. Reset the filter to resumes normal operation and recalculates the filter timer. If the reset filter indicator does not light, after the replacement, press and hold "On / Off" + "Reset Filter" for more than 4 seconds to reset the filter timer.


#### Child Lock

Press "Filter Reset" and "Sleep" button imultaneously for more than 3 seconds, there is a sound beep and the display shows "L" for 3 seconds. Child Lock function is activated. There will be no response when you press any button. Press "Filter Reset" and "Sleep" button simultaneously for more than 3 seconds to unlock this function.



#### **Control Panel**

#### Panel indication and operation instructions

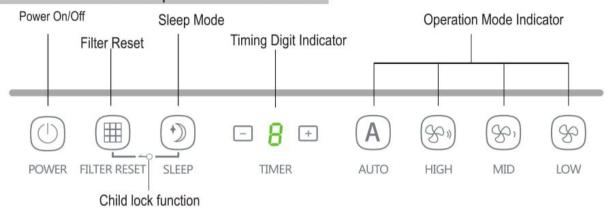

#### Power-on

Plug the machine's power plug into a power socket.

When the machine is powered up for the first time, the product will enter the idle mode after emitting a beep. None
of the indicators will be lit at this moment.

#### Operation

- Press the power button all the function indicators of the product will light up.
- The air quality indicator will light up in sequence as it is detecting air quality at the same time, auto operation mode will be activated.
- After approximately 30 seconds, the Air Quality Indicator color will change to the color corresponding to the detected air quality, and will continue to stay on auto mode. User can change to desired mode.

## Mode Switching

- Operation Mode can be switched between Auto, High, Mid and Low modes, while functions are enabled and the corresponding indicators are lit.
- When running in Auto Mode, machine will measure air quality and automatically adjust operation to appropriate purification to delivers best air quality.

#### Shutdown


Press the power button

• The product will stop running and enter the idle state. All the indicators will turn off.



#### Instructions for Use

#### Intelligent Operation Mode

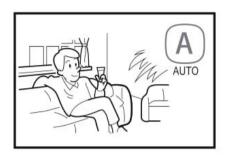



#### Auto Mode

When power on, the product enters Auto mode. In this mode, the product will automatically select the appropriate wind speed according to the indoor air quality.





#### High Speed Mode

When someone is cleaning your home or smoking in your home, you can choose the High Speed mode. In this mode, the product has the strongest purification ability to purify the indoor air quickly.





#### Medium Speed Mode

In this mode, the machine speed will be kept at "3", to purify air rapidly, but also reduce the power consumption.





#### Low Speed Mode

In this mode, the wind speed will not be affected by the air quality indicator light, it will run at low speed, more comfortable and energy-saving to meet the needs of different customers.





#### Sleep Mode

When you need a silent environment, you can choose the Sleep Mode.

In this mode, the machine will maintain low speed operation and turn off indicators (except Sleep Mode indicator) to avoid interfering with your sleep at night.



#### Instructions for Use

#### Intelligent Operation Mode



#### Timer

- Press the Timer button, and then you can set the operation time of the product.
- When the preset time is expired, the product automatically shuts down.
- The maximum timer time is 9 hours. The minimum timer time is 0 hours. When the timer is set to 0, the timing function of the product is disabled and the timing indicator goes out.

#### Photocatalyst Function

- The products has a photocatalyst function.
- When Auto Mode is activated, the product will automatically turn on the photocatalyst UV lamp, and the photocatalyst assembly will work. The photocatalyst function is disabled in the "High" "Mid" "Low" and "Sleep" modes.

Note: To avoid UV damage to the human body, do not closely observe with naked eyes when the UV lamp is powered on. Before dismounting the front cover for maintaining the filter or other purposes, please turn off the power supply of the product and unplug the power plug first.

#### Maintenance



# Be sure to disconnect the product from the power socked before cleaning the product

- Do not use the detergent shown on the right.
- When using a chemical wipe, please pay attention to the precautions for using a chemical wipe.
- Do not operate this product while the filter is dismounted. (If dust gets into the product, it may cause malfunctions and the purification effect will be unable to be achieved.)



## When the product will be unused for a long time


- Unplug the power plug.
- ② Maintain the main body.
- 3 Put the product into the packaging bag. Put the bag into the packaging carton. Place the carton in a dry place.



#### **Maintenance**

## Main body

- Please use a vacuum cleaner to clean the dust in the air inlet and outlet first.
- Finally, use a soft, dry cloth to wipe the surface of the entire main body.

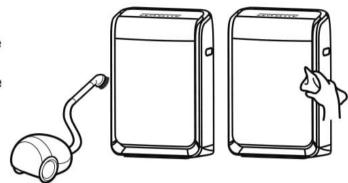

#### Pre-filter

- Clean surface dust with a vacuum cleaner.
- Can be soaked with clean water and then cleaned and dried before being used.

#### **Active Carbon Filter**

- Clean surface dust with a vacuum cleaner.
- The back does not need to be maintained.
- Cannot be washed

# Soak and clean it with clean water Newspapers, etc. (to avoid dust scattered on the ground.) Blue Surface (Easily damaged, please do not press it with force) Brush nozzle or slot nozzle

#### **HEPA Filter**

- Depending on the severity of the environment and running time may be generally used for 12 months.
- When there is strange smell, remove it from the product, remove the dust with a vacuum cleaner or a hair drye r, place it under the sun for 3-5 hours and then replace it back to the unit. If the odor cannot be removed, please consider to replace a new one.



# Filter Replacement

Filter replacement criteria (accessories will be sold separately)

Accessory Name	Replacement Cycle ※
Active Carbon Filter	About 12 months
HEPA Filter	About 12 months

Depending on the site of use and the actual situation (such as families with high smoking), the filter replacement cycle may be shortened. Generally, when the effect is not good, please replace it promptly.

- See Page 6 of the Manual for the filter replacement method.
- After the replacement is completed, reset the filter.
- Dispose the used filter as a non-combustible waste.

# **Specifications**

Model No.	AP536WS/AP536WT/AP636W	
Rated voltage / frequency	220V-240V~50-60Hz	
Rated input power	65W	
Product Weight	9.7kg	
Noise	Sound power level noise limit 65dB(A)	
Product Size	420mm (width) x 232mm (depth) x 665mm (height)	



# **Troubleshooting Guide**

When the machine does not work properly, confirm the following issues first. If the machine still cannot work properly, unplug the power plug and take it to the repair station for repair service.

#### Common Problems

#### Solution

The product does not work properly

- Please check whether the plug is plugged into the socket properly
- Please check whether the power button is turned on
- Please check whether the front cover is installed in place. Reinstall the front cover.

The product does not work after powered on

 Please check whether the front cover is installed in place. Reinstall the front cover.

Buttons make no response

- Please check whether the plug is plugged into the socket properly
- Please check whether the power button is turned on
- Please check whether the Child Lock function is enabled

Fresh air cannot be sent out smoothly

- Please check whether the plastic packaging of the new filter has been removed. Please remove the plastic packaging first
- Please check the state of the filter. If the filter is dirty, replace it with a new filter.

Poor air purification effect

- Please check whether the filter needs to be replaced
- The air quality of the room where you use this product may be very poor.
   In this case, open the window to improve air circulation

The screen filter replacement indicator is lit

- Please replace the filter
- After the filter is replaced, press and hold the Filter Reset button for 4 seconds, and then the filter timer will be reset



# Packing List

No.	Name	Quantity	Remarks
1	Main body	1	
2	Manual	1	
3	Warranty Card	1	
4	Pre-filter	1	Installed inside the product
5	Active Carbon Filter	1	Installed inside the product
6	HEPA Filter	1	Installed inside the product

Whirlpool® Registered trademark/TM Trademark of Whirlpool group of companies All rights reserved - http://www.whirlpool.com.hk



