

SPECIFICATIONS


	WVED900AHG	WVED1050AHG
Dimensions	540(W)x570(D)x945(H)mm	570(W)x600(D)x960(H)mm
Weight	37kg	40kg
Water quantity (HIGH)	60L	75L
Voltage	AC 220V-240V~50Hz	AC 220V-240V~50Hz
Input Power	300W	300W
Required Water Pressure	0.03 MPa – 0.8 MPa	0.03 MPa – 0.8 MPa

WARNING - This appliance must be earthed.

FOR WASHER PLUG 3 PIN (BS Standard Plug With 13 Amp Fuse)


The wires are coloured in accordance with the following code:
 Green/yellow: Earth Light Blue: Neutral Brown: Live

The wires in the appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follow :

- The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  or coloured green or green and yellow.
- The wire which is coloured light blue must be connected to the terminal which is marked with the letter N or coloured white.
- The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured black.

FOLLOWING CAUTIONS ARE FOR WASHER USING DOUBLCORE CORD ONLY.


- If the 2-pin type socket-outlet has a grounding terminal, attach the end of the Grounding Wire to the terminal.
 - When grounding the washer, connect the grounding wire before plugging in the Power Cord.
 - If the 2-pin type socket-outlet has no grounding terminal, consult your nearest dealer or attach the end of Grounding Wire to a suitable grounding point, such as a metal water pipe.
- Never connect the Grounding Wire to a gas pipe.
- Unplug the Power Cord before disconnecting the Grounding Wire.

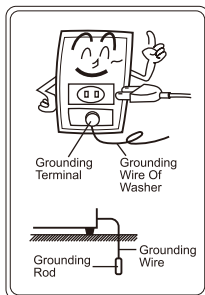

Whirlpool

WVED900AHG
WVED1050AHG

INSTRUCTION MANUAL FULLY AUTOMATIC TUB WASHER

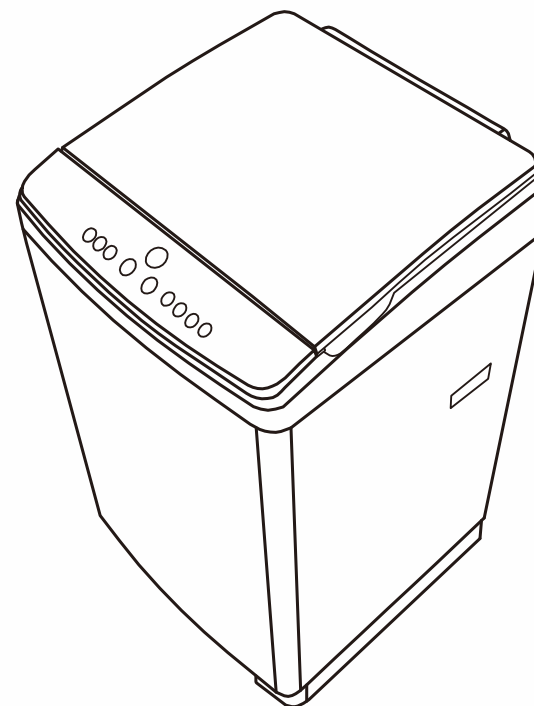



Before operating this washing machine, please read this instructions manual carefully and completely.

Table of Contents










Precautions-----	2~4
Notes on Maintenance-----	4
Packing Instructions-----	5
Parts Names-----	5
Installation Instructions-----	6~8
Washing Tips-----	8
Description of Operation Panel Functions-----	9~10
Quick Start-----	11
Program Customization-----	11~13
Blankets Program Instructions-----	14
Wool Program Instructions-----	15
Description of other Functions, Method for Setting These Functions-----	16~18
Schedule Function-----	16
Operation Steps-----	16
Smart Memory Function-----	16
Two-step Clean Function-----	16
Pre-wash Function-----	17
Water Level Varied Wash Function-----	17
Residual Water Draining Function-----	17
Drum Lamp Function-----	17
Soak Function-----	17
Child Lock Function-----	18
Disabling Beeps-----	18
Non-malfunction Cases-----	18
Troubleshooting Guide-----	19
Specifications and Parameters-----	20
Energy Efficiency Test Program-----	20
Description of the Hazardous Substance Contents in the Product-----	21

Precautions

- Please read the precautions carefully before using this product.
- This appliance is not designed to be used by persons with insufficient physical, sensory or mental functions (including children) or without experience and knowledge unless when such person uses this product, he/she is supervised or guided by another person who can ensure his/her safety to prevent a fire or injury from occurring.
- In order to avoid any property damage or personal injury to the user, we hereby give the following notes on matters that need to be observed in respect to safety:

 Warning	Contents with this mark indicate that there may be the possibility of death or injury.
 Caution	Contents with this mark indicate that there may be the possibility of injury or object damage.

		
Warning or Reminding Contents.	Prohibited Contents.	Note Contents.

 Warning	
 Non qualified or inexperienced personnels are not allowed to disassemble or repair the Washing Machine. <ul style="list-style-type: none"> • Fires, electric shocks or injuries may occur. • Please report to the company when a breakdown occurs. 	 Do not bend, pull or twist the Power Cord too much. <ul style="list-style-type: none"> • The Power Cord may be damaged leading to fires or electric shocks.
 During maintenance, please be sure to unplug the Power Cord from the outlet and not to unplug the Power Cord with wet hands. <ul style="list-style-type: none"> • Electric shocks or injuries may occur. 	 Do not use voltages other than 220V. <ul style="list-style-type: none"> • Injuries, fires or electric shocks may occur.
 Do not use a damaged or loosened Power Cord or Power Cord Plug. <ul style="list-style-type: none"> • Fires may occur. Electric shocks or short circuits may cause injuries or fires. 	 Dust and other dirt on the Power Cord Plug shall be removed regularly. <ul style="list-style-type: none"> • If dust accumulates on the Power Cord, a fire may occur due to poor insulation caused by moisture.
 Do not use the Washing Machine for other purposes. <ul style="list-style-type: none"> • This Washing Machine shall not be used for other purposes except for the washable clothes specified in the instructions to prevent any danger or damage to the Washing Machine from occurring. 	 Do not place it in an unsteady place. <ul style="list-style-type: none"> • The Machine may topple over or move due to external forces and thereby cause personal injuries or damage to the Machine.

Precautions

⚠ Warning

Do not put your hands in the Drum while the Washing Machine is running.

- If you touch the Drum, you may be injured.
- During spin-drying, if the Drum does not stop rotating 15 seconds after the Drum Cover is opened, please turn off the power and call the company's Customer Service number as soon as possible.



Do Not Touch

Do not wash clothes stained by volatile solvents.

- Do not wash the clothes stained by gasoline, kerosene, thinner, etc. This may cause fires or explosions.



Prohibitions

Please be sure it is grounded properly.

- To avoid current leakage accidents.



The socket shall be grounded properly

Do not install it in a humid or rainy place.

- Poor electrical insulation may cause current leakage or malfunction.



Prohibitions

Do not allow children to play on the Washing Machine or in the Drum.

- If a child accidentally falls into the Drum, it can cause serious injury.



Prohibitions

Do not use a socket of a voltage other than 220V.

- This may result in a risk of injuries, fires or electric shocks.
- Please use an independent socket of more than 10A. Do not use a power strip or share a power supply with other electric appliances.



Prohibitions

Plugging and Unplugging of the Power Cord.

- When plugging or unplugging the Power Cord, the fingers must grip the insulation part of the Plug without touching the metal pins of the Plug to prevent an electric shock from occurring or force being applied to the wire and thereby resulting in breakage of the wire inside the Power Cord.
- When moving the Washing Machine, be sure to unplug the Plug of the Power Cord.



Prohibitions

Keep the Machine away from fires.

- Keep the Machine away from fires. Do not place lit candles, cigarettes or mosquito coils or kettles on the Washing Machine. This is the main cause of fires or deformation.



Prohibitions

Protection of the Power Cord.

- During use, please check whether the Power Cord sheath is damaged, improperly bent or stretched, or pressed and deformed by heavy objects. Damage to the Power Cord may result in poor insulation, which is the cause of electric shocks and fires. If the Power Cord is damaged, it must be replaced by professionals of the manufacturer or its repair department or a similar department in order to avoid danger.



Prohibitions

Unauthorized modification or repair is prohibited.


- Unless conducted by the maintenance department designated by the company, any unauthorized modification or repair is prohibited to prevent the risk of fires or electric shocks.



Do not disassemble the Machine.

Do not wash any water-repellent or non-water-absorbing laundry in the Washing Machine

- to prevent abnormal vibration from occurring during washing or spin-drying. (such as raincoats, car covers)

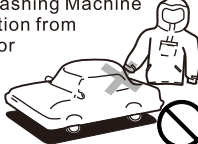

Prohibitions

Cautions when Checking the Running Washing Machine.

- When a woman or a long-haired person checks the running Washing Machine, please be careful not to let the hair fall into a gap so as to avoid the risk of hair being caught.



Advisory

Precautions

⚠ Caution

Pay attention to spillage.

- Do not wash water-repellent clothing so as to avoid damage caused by spillage during spin-drying.



Advisory

Caution: Do not place your finger or any object on the curved section of the Washer Lid center or the area on the Panel Frame and over the Washer Lid.

- This is a cause of injury or malfunction.



Advisory

Do not connect it with a hot water source

- Hot water can deform plastic parts, which is a cause of malfunctions.



Prohibitions

Do not wash the parts of the main body of the washing machine directly with water

- so as to avoid poor insulation, which will result in the risk of electric shock.



Prohibitions

Do not attempt to touch internal moving parts while the Washing Machine is running

- so as to avoid the risk of injury.



Do Not Touch

Do not place a toddler or heavy object on the Washing Machine

- so as to avoid parts deformation or damage leading to any danger.



Prohibitions

Do not plug or unplug the Power Cord Plug with wet hands

- so as to avoid the risk of electric shock.



Wet Hands Prohibited

When the Washing Machine is not Used:

- turn off the Faucet to avoid damage to or falling off of the Water Inlet Hose leading to water leakage;
- Unplug the Power cord to prevent fires or other accidents.



Unplug the Plug

Notes on Maintenance

Use a soft cloth to wipe water and dirt on the Housing

- Do not pour water directly on the Housing. This may result in a short circuit or electric shock.
- Do not use a brush, polish, gasoline or other volatile materials to wipe the Washing Machine. This may damage the Main Body Surface Coating or plastic parts.
- You can choose to retain or tear off the Transport Protection Film on the Housing Surface, which will not influence the normal use of the product.



Cleaning of the Water Inlet Valve (recommended once every half yearly)

- Dirt deposits will influence the Water Inlet Volume. Please remove the Water Inlet Hose, remove the Lint Filter of the Inlet Valve, and remove the dirt on the Screen before re-installing it.










Water Inlet Valve

Cleaning of the Lint Filter (clean it each time after it is used)


- Remove the Lint Filter.
- Remove large lint and brush fine lint from the Lint Filter.
- Reinstall the Lint Filter. During the installation, snap the frame claws into the bottom groove. (The Lint Filter is a wearing part)



Packing Instructions

Washing Machine (1)	Manual (1)	Drain Hose Assembly (1)	Water Inlet Hose Assembly (1)	Rat Guard (1)	Screw (1)	Warranty Card (1)
						

Parts Names

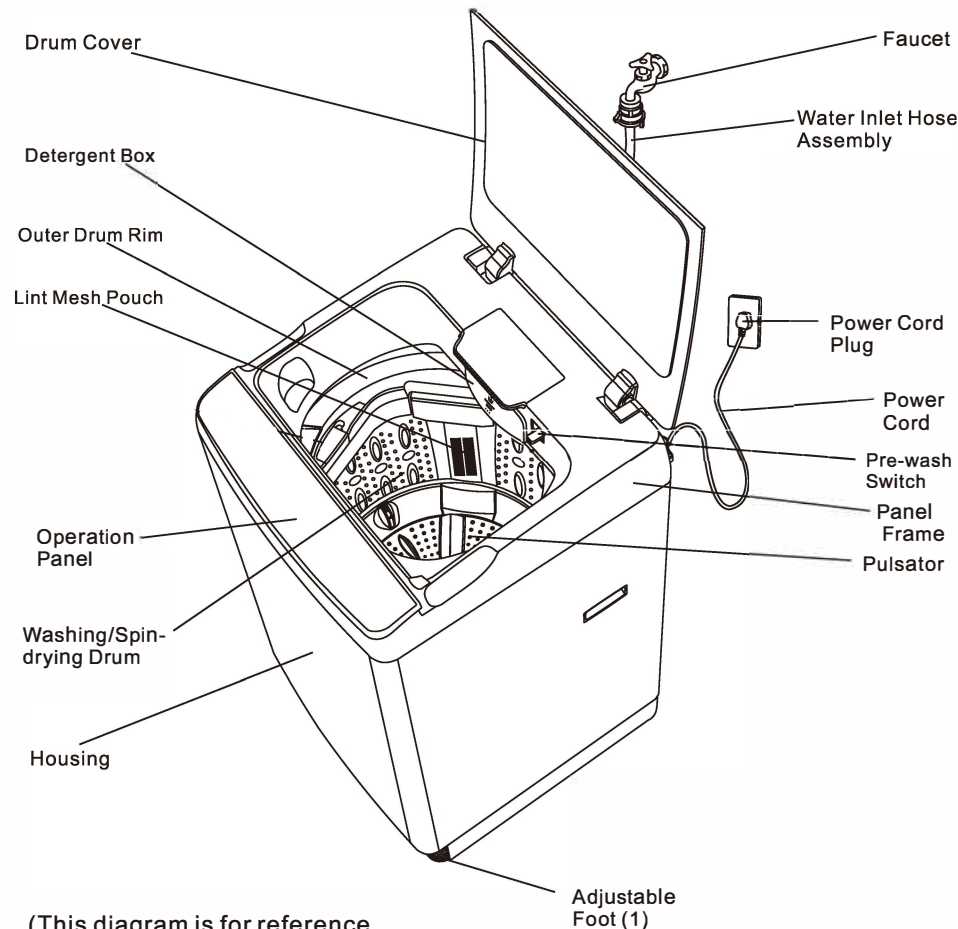


(This diagram is for reference only. The actual product shall prevail.)

Installation Instructions

Shield Installation

1. Take out the Shield on the Panel Frame protective packaging and the Screws in the bag.
2. Tilt the Washing Machine backward and slowly put it down on a cushion.
3. Push the Shield straight along the Seat Slot until it is installed in place.
4. Fix the Shield and Seat with Screws.
5. Lift the Washing Machine gently until it is placed steadily.

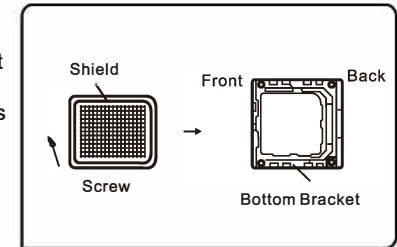


Placement of the Washing Machine

1. Choose a dry place without direct sunlight to the Washing Machine.
2. Place the Washing Machine on steady solid ground.
3. A floor drainer shall be provided in the place where the Washing Machine is placed, and shall drain water smoothly. The floor drainer shall be in the same plane as that where the Washing Machine is placed or slightly lower than the plane, to avoid Washing Machine leakage causing any damage.
4. Place the Washing Machine as firmly as possible. If necessary, level the Washing Machine by adjusting the Adjustable Feet of the Washing Machine according to the order shown in the figures. The maximum allowable inclination of the plane on which the Washing Machine is placed is 2°.

Notes:

- When the Washing Machine is placed on the floor or a flexible support stand, the Washing Machine may vibrate.
- Do not place any object such as a carpet below the Washing Machine to prevent the bottom opening from being blocked.

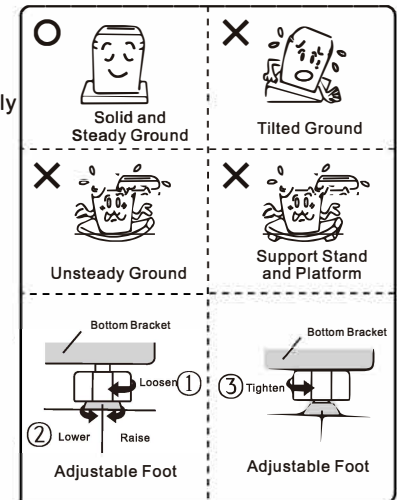


Faucet Selection

Faucet Type: (the faucet mouth shall be smooth)

Type A: The most appropriate

Type B: Faucet length must be greater than 16mm. Otherwise the universal joint cannot be installed.

Type C: Water leakage may occur with the part shown in the figure.




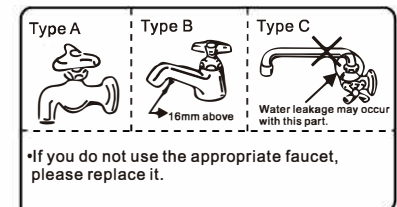


Notes:




1. When installing the Washing Machine, please be sure to remove the Pedestal and Bracket for transportation at the bottom of the Washing Machine. Otherwise it cannot be used.
2. During installation or initial use, a small amount of water will flow out of the Drain Hose, which is residual water left over from the factory during routine inspection.
3. Unplug the Power Cord when Washing Machine is not in use and turn off the faucet to avoid accidental fires and water leakage accidents.

Installation Instructions

Installation of the Universal Joint

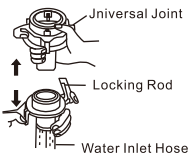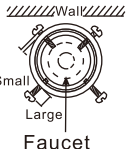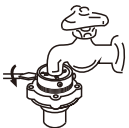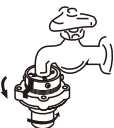
<p>1. Hold the Universal Joint in one hand and the Locking Rod in the other hand and then detach the Universal Joint from the Water Inlet Hose.</p> 	<p>2. Evenly adjust the four screws on the Universal Joint so that the two screws near the wall fully contact the outside of the Faucet first.</p> 	<p>3. Insert the Universal Joint vertically onto the Faucet with its internal seal tightly attaching to the opening of the Faucet and tighten the 4 screws with a screwdriver.</p> 	<p>4. Remove the seal from the Universal Joint and tighten the Universal Joint.</p> 
---	--	--	---

Connection of the Water Inlet Hose
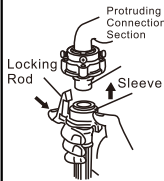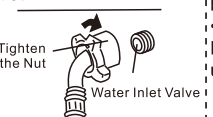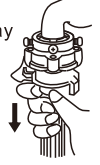
<p>1. Connect the Water Inlet Hose to the Universal Joint.</p> 	<p>2. Align the Water Inlet Hose with the opening of the Water Inlet Valve, and turn the fastening screw nut clockwise on the Water Inlet Hose until it cannot be turned any more.</p> 	<p>3. Check whether the Water Inlet Hose is Connected Firmly</p> <ul style="list-style-type: none"> • Pull the Water Inlet Hose downwards to check whether the Water Inlet Hose is firmly connected to the Universal Joint. Then slowly turn on the Faucet to see if water leakage occurs. If water leakage occurs, turn off the Faucet and reinstall. • After long-term use, the Universal Joint may become loose. Reinstall it. • Turn off the Faucet when the laundry Program ends or the Machine will not be used for a long time. 
---	--	---


Removal of the Water Inlet Hose

1. Turn off the Faucet.
2. Press the Power Button to turn on the power. Then press the Start/Pause Button.
3. Turn off the power after 15 seconds.
4. Pull down the Locking Rod and Sleeve with your fingers and remove the Water Inlet Hose.
5. Turn the Water Inlet Hose on the Inlet Valve anticlockwise until the Water Inlet Hose is removed.

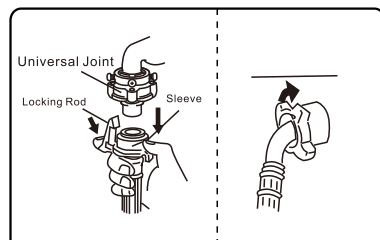

Connection of the Drain Hose

Connect the Drain Hose to the Drain Mouth and then fix it with a hose clamp as shown in the figure on the right:

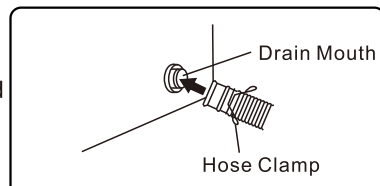


Note: Be sure to use the new Water Inlet Hose included in the accessories instead of an old Water Inlet Hose.

Installation Instructions

Changing of the Position of the Drain Hose


Depending on the use location, the Drain Hose can be changed from being on the right side to being on the left side

- During the changing, unplug the Power Cord.
 - To prevent hand scratches or injuries, please wear gloves.
1. Remove the cap on the Drain Mouth on the left.
 2. Lay the Washing Machine backward down on a soft cushion.
 3. Loosen the Hose Clamp and unplug the Inner Drain Pipe from the Drain Valve.
 4. Push the joint on the Drain Mouth and pull the Inner Drain Pipe out of the Drain Mouth on the right side of the Washing Machine.
 5. Insert the Inner Drain Pipe from the Drain Mouth on the left side and snap the joint.
 6. Connect the Inner Drain Pipe to the Drain Valve and fix it with the Hose Clamp.
 7. Install the Drain Mouth Cap on the left in the appropriate position on the right.
 8. Lift the Washing Machine gently until it is placed steadily.

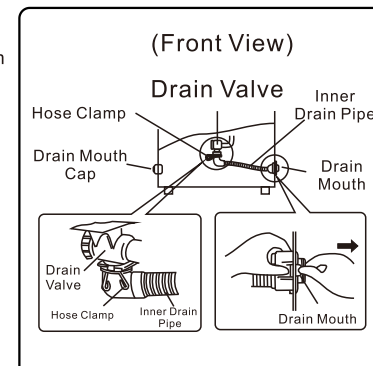


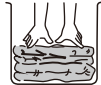





Extension of the Drain Hose


If the drain hose length is not sufficient, please purchase more Drain Hoses from the seller or the company and then connect the Drain Hoses to each other.

Extension of the Drain Hose	Extension Height	Extension Length	
There is a step in the middle	Within 15cm	Within 1cm	
There are no steps in the middle	—	Within 3cm	

Washing Tips

<p>• Please wash colored and white, thick and thin laundry separately. Please wash laundry according to the clothing care tags.</p> <p>Legend  </p>	<p>• Please wipe dirt and sand off the laundry first.</p> <p>• Make sure there are no items in the clothing pockets. (such as nails, coins, etc. that may damage clothes, create abnormal sounds or cause a malfunction of the washing machine.)</p> 	<p>• Please put clothes that can easily float, or large, heavy clothes in first.</p> <p>• If any clothes come to the surface, please temporarily stop washing and press the clothes down into the water.</p> 
<p>• Tighten loose straps on the clothes, ensure zippers and buttons are done up.</p> 	<p>• When washing fine fabrics such as lingerie, lace-trimmed items, nylon and thin chemical fiber fabrics, etc., they should be placed in a mesh washing bag.</p> 	<p>• For the clothes that lose their wool or thread easily, please turn them inside out during washing.</p> 

Description of Operation Panel Functions

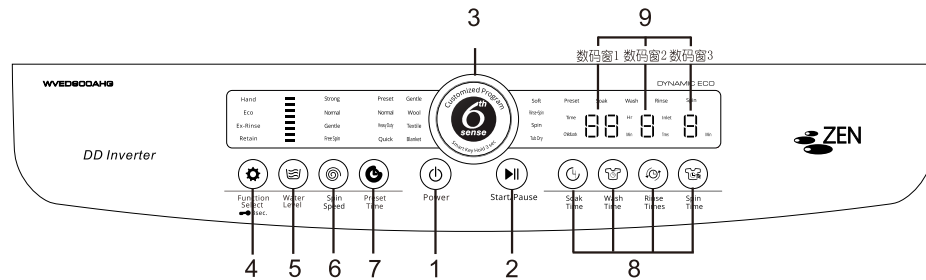

1.Power Button

•To turn on the Washing Machine, please press this Button. To cut off the power, press the Button again. After this Button is pressed, all the Indicators will be lit for 2 seconds before the Program Display restores. If there is no Button operation for 10 minutes, the power will be cut off automatically. After the program stops running, the power will be cut off automatically within 5 seconds (within 10 minutes if the Draining Function is enabled).

2.Start/Pause Button

•When the power is turned on, the Washing Machine will start running after this Button is pressed. This Button can also be used to temporarily stop the operation. You can just press this Button again to resume the operation.

3.6th Sense Button

•After the Machine is powered up and the Power Button is pressed, you can press the 6th Sense Button to switch between 12 Automatic Programs - Preset, Normal, Heavy Duty, Quick, Gentle, Wool, Textiles, Blankets, Soft, Rinse+Spin-dry, Spin, and Tub Dry.

•When the Machine is power up, you can start the Normal Wash Program by pressing and holding the 6th Sense Button for three seconds.

Notes: If you select the Preset, Normal, Heavy Duty, Quick, Textiles or Soft Program, the Washing Machine will carry out automatic fuzzy judgment to automatically select the appropriate Water Level, Water Flow and other procedures.

4.Function Button

•You can use this Button to switch between the Hand, ECO, Ex-Rinse, and Retain.

•This Button can be used to set the Child Lock Function. See Page 18 for the method for setting the Child Lock Function.

5.Water Level Button

•This Button is used to select the Water Level appropriate to the laundry to be washed. Washing and rinsing can be done at different water levels. Only Levels 5 to 8 can be chosen for the Blankets Program. Only Levels 3 to 8 can be chosen for the Wool or Gentle.

6.Spin Speed Button

•This Button can be used to choose any of the four spin-drying strengths - Strong, Normal, Gentle or Free Spin.

7.Preset Time Button

•You can use this Button to set the end time of the Program.

Note: This function is unavailable for the Gentle, Wool, Rinse+Spin-dry, Spin-dry, and Tub Dry Programs.

Description of Operation Panel Functions

8.Procedure Button

•You can use this group of Buttons to set the Soaking Time, Washing Time, Rinse Times, and Spin-drying Time freely.

9.Description of Digital Display Functions

Digital Display 1

•While the Program is proceeding, the Digital Display will show the remaining time of the whole process.

For example: Remaining Time: 18 minutes. ----- [18]

•When setting the Preset, the Digital Display will show when the Scheduled Program ends.

For example: Ends in 2 hours ----- [2]

•When an abnormality occurs, the Digital Display will show the Fault Code.

For example: Abnormal Water Addition ----- [E1]

•During setting, the Digital Display will show the set time for soaking or washing.

For example: Wash for 10 minutes ----- [10]

Digital Display 2

•The Digital Display will show the rinse times.

For example: Rinse Twice ----- [2]

Digital Display 3

•The Digital Display will show the spin-drying time.

For example: Spin-drying Time: 5 minutes. ----- [5]

Quick Start

1. Get Ready

- ① Connect and lay down the Drain Hose.
- ② Connect the Water Inlet Hose to the Faucet and unscrew the Faucet.
- Before turning on the Faucet, you need to make sure that the screws of the Universal Joint have been tightened. Loose screws may cause water leakage.
- ③ Plug the Power Plug into a power socket.
- ④ Add the laundry.

2. Press the Power Button.

3. Press the Start/Pause Button

- The Sensor will automatically detect the laundry amount (Preset, Normal, Heavy Duty, Quick, Textiles or Soft)
- The appropriate water level, water flow and other operating Programs will be selected automatically.
- 4. Add some detergent to the Detergent Box or the Washing/Spin-drying Drum. (Use the appropriate amount of detergent according to the instructions for the detergent used)
- 5. Close the Drum Cover.
- If the Drum Cover is not closed, the Washing Machine will automatically stop running and emit alarming beeps before it starts spin-drying.

Model Water	WVED900AHG							
Level Water	1	2	3	4	5	6	7	8
Volume (L)	About 16	About 24	About 30	About 36	About 42	About 48	About 54	About 60
Model Water	WVED1050AHG							
Level Water	1	2	3	4	5	6	7	8
Volume (L)	About 16	About 24	About 32	About 40	About 48	About 56	About 64	About 75

- During fuzzy judgment of the water level, there will be some differences due to the laundry texture, size and so on. This is a normal phenomenon.

Program Customization

1. Preparation: Lay down the Drain Hose. Turn on the Faucet. Plug the Power Cord Plug into the power socket. Add the laundry.

2. Press the Power Button.

3. According to the laundry type, press the 6th Sense Button to set the desired Program.

- See the Table below for the selection of each Program.

Program Customization

Program Selection Guide			Default Program Settings		
Program	Applicable Laundry Type	Laundry Amount	Washing Time	Rinse Method	Spin-drying Time
Preset	The user customizes the program	Rated Laundry Amount	10 minutes	Spray+Soak Rinse	5 minutes
Normal	Daily wear clothes	Rated Laundry Amount	10 minutes	Soak Rinse Twice	5 minutes
Heavy Duty	Heavy clothes, heavily dirtied coats	Rated Laundry Amount	12 minutes	Inlet Rinse Twice	8 minutes
Quick Wash	Suitable for lightly soiled clothes	3.0kg	5 minutes	Soak Rinse Once	3 minutes
Gentle	Fine textiles, silk textiles, etc.	2.0kg	6 minutes	Soak Rinse Twice	2 minutes
Wool	Wool clothes and other textiles	1.5kg	6 minutes	Soak Rinse Twice	2 minutes
Textile	Cotton and linen clothes	Rated Laundry Amount	10 minutes	Inlet Rinse Twice	8 minutes
Blanket	Large household textiles	4.0kg	12 minutes	Inlet Rinse Twice	8 minutes
Soft	Soft summer clothes with more sweat stains	3.0kg	8 minutes	Soak Rinse Once	3 minutes
Rinse+ Spin	Laundry to be only rinsed and spin-dried	—	—	Soak Rinse Once	5 minutes
Spin	Laundry to be only spin-dried	—	—	—	5 minutes
Tub Dry	Only for drying the drum interior	—	—	—	60 minutes

The programme used for the evaluation of models under the mandatory Water Efficiency Labelling Scheme (WELS) and the recommended Washing Programme for soiled clothes is as follows: Normal + Highest water level

4. You can press the Preset Time Button and a group of Buttons under the Procedure Button to freely set the preset time, soak time, rinse times and spin time. Once activated, the Digital Display will show numbers cyclically as follows:

- Preset Time Options Displayed:

0 → 1 → 2 → → 5 → 6 → → 24 hours (except for the Gentle, Wool, Rinse+Spin, Spin and Tub Dry Programs.)

- Soak Time Options Displayed:

0 → 5 → 10 → 15 → → 40 minutes (except for the Gentle, Wool, Blanket, Rinse+Spin, Spin and Tub Dry Programs.)

- Wash Time Options Displayed:

0 → 5 → 10 → → 15 → → 20 minutes

- Rinse Times Options Displayed:

0 → 1 → 1. → 2 → 2. → 3 → 3. → 4 → 4. (the number indicates times; the lit "." Indicator indicates Spill Rinse)

- Spin Time Options Displayed:

0 → 1 → 2 → 3 → 4 → 5 → 6 → 7 → 8 → 9 minutes (for the Preset, Normal, Heavy Duty, Quick Wash, Textile, Blanket, Soft, Rinse+Spin, Spin and Tub Dry Programs only)

0 → 1 → 2 → 3 minutes (for the Wool and Gentle Programs only)

- Setting of a Single Procedure: Press the 6th Sense Button. Select the Normal Program and then select the wash time, rinse times and spin time. rinse times and spin-drying time. You can set the Program to perform the function of washing, rinsing, or spin-drying only.

 
Note: The above settings are unavailable for some Programs.

Program Customization

5. Press the Water Level Button to select the appropriate level. Add some detergent.
6. Press the Start/Pause Button
7. Close the Washer Lid.
- If you want to change the pre-set Procedure, please turn off the Power Switch and then turn on it again, and select your desired Program
8. Specialized Programs: If necessary, press the Function Button to enable your desired additional functions, which can be the Hand (Wash), Eco, Ex-Rinse or Retain (Water) Function.
- **Hand (Wash)** : This function requires a washing load less than or equal to 3kg and is only available for the Preset, Normal and Heavy Duty Programs. When the function is enabled, the Indicator of this function will be lit and the Water Level Button and Washing Time Button will be disabled.
- **Eco** : After this function is enabled, the corresponding Indicator will be lit and the Washing Mode will be changed to the Eco Mode. This function is available for the Preset, Normal, Heavy Duty, Quick Wash, Gentle, Wool, Textile, Blanket and Soft Programs only. When this program is selected, less water, energy and electricity will be consumed.
- **Extra Rinse** : After this function is enabled, the corresponding Indicator will be lit while the original Washing Procedure and Spin-drying Procedure will remain unchanged and the first Rinsing Procedure will be changed to Spray+Spill Rinse. This function is unavailable for the Spin Dry and Tub Dry Programs.
- **Retain(Water)**: When proceeding to the Spin-drying Procedure, the program will pause without draining, and the Indicator will blink accompanied by beeps. The Spin-drying Procedure will restore when you press the Start Button. If there is no operation within 1 hour, the power will be cut off automatically.


Description of Three Rinse Methods

1. Soak Rinse (the usual method)




At the end of the Spin cycle, Water is added into the drum. A rinse will start.

 2. Spray Rinse (water-saving)



After the spin-drying ends, the spin drier will rotate slowly while water is added. Like taking a shower, the laundry will have the detergent on it removed and drained to the sewer (the Washing Machine will immediately stop working when the Washer Lid is opened during the spray rinse).

 3. Spill Rinse (in the event too much detergent is being used)



At the end of the Spin cycle, Water is added into the drum while a rinse cycle starts. The foam produced during the rinse will overflow from the Spill Mouth and drained into the sewer.

Blanket Program Instructions


The Blanket Program applies to washing blankets and other large items.

• When this Program is used, the water level is automatically set to Level 8. However, you can change the Water Level to Level 5 ~ 8 according to the size of the blankets and large items.

Operation Steps

1. Open the Washer Lid and press the Power Button.
2. Press the 6th Sense Button until the Blanket Indicator is lit.
3. Pour the liquid detergent into the Washing Machine. If you are using powder detergent, dissolve it thoroughly in 5L of warm water (about 30°C) and then slowly pour the solution into the Washing Machine.
4. Place the rolled side of the blanket down in the Washing Machine.
5. Press the Start/Pause Button (If necessary, you can adjust the water level manually.)
6. Close the Washer Lid.
- If the Washer Lid is not closed properly, the Washing Machine will automatically stop running before starting spin-drying.
- After the wash ends, the beeper will emit beeps and then the power will be cut off automatically within 5 seconds.
- After the wash ends, turn off the Faucet and clean the Lint Filter Pouch.

How to Fold a Blanket and Put it in the Washing Machine

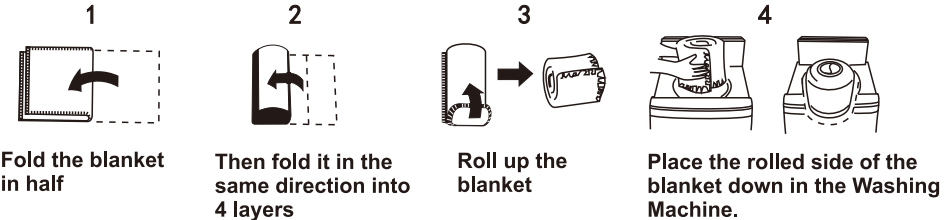


After the Wash Ends

Take out the blanket and hang it from the middle in the shade.

Notes: Pre-wash the dirty parts by hand.

- Do not use too much detergent.
- Stains can be removed effectively with warm water (about 30°C).
- During the washing process, if a part of the blanket is exposed above the water surface, press the Start/Pause Button. The Washing Machine will temporarily stop running. Press the exposed part into the water and press the Start/Pause Button again to resume the wash.

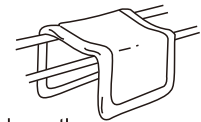

Wool Wash Program Instructions

- This Program is used for washing wool clothes. Please check the clothing care tag before starting the wash.
- When the Wool Wash Program is used, the water level is automatically set to Level 6. However, you can change the water level to Level 3 ~ 8 according to the size of the wool clothes.

Operation Steps

- 1.Open the Drum Cover and press the Power Button.
 - 2.Press the 6th Sense Button until the Wool Indicator is lit.
 - 3.Pour the liquid detergent into the Washing Machine. If you are using powder detergent, dissolve it thoroughly in 5L of warm water (about 30°C) and then slowly pour the solution into the Washing Machine.
 - 4.Put wool clothes in the Washing Machine.
 - 5.Press the Start/Pause Button (If necessary, you can adjust the Water Level manually.)
 - 6.Close the Drum Cover.
- If the Drum Cover is not closed properly, the Washing Machine will automatically stop running before starting spin-drying.
 - After the wash ends, there will be beeps and the power will be cut off automatically within 5 seconds.
 - After the wash ends, turn off the Faucet and clean the Mesh Lint Pouch.

Caution

- The laundry amount shall be less than 1.5kg.
- After the Program ends, please immediately take out the clothes and handle and air the clothes to prevent them from becoming deformed due to too long placement.
- The Wool Program cannot be scheduled.
- In order to avoid damage to the clothes, the temperature of the washing water shall not exceed 30°C.
- Please wash clothes of white or bright colors and the clothes of dark colors separately. Using dedicated wool detergents can reduce the damage to clothes and improve the washing effect.



WOOLMARK
APPAREL CARE

The Wool Washing Program of this Washing Machine has been accredited by the Woolmark Company. According to the care instructions on the clothing care tag and the Machine's Wool Program Instructions, this Washing Machine can wash wool products that can be washed in a washing machine.

Accreditation Number of the Washing Machine: M0000

*Note: Only the WVED900AHG and WVED1050AHG have passed the international wool certification.

Description of other Functions, Method for Setting These Functions

Preset Time/ Schedule Function


- The Pre-set Schedule Time is the Program end time.
- Before making a Schedule, first turn on the Faucet, and then lay down the Drain Hose and check whether the Universal Joint is tightened to avoid water leakage accidents.

Operation Steps

- 1.Press the Preset Time Button.
 - 2.If necessary, press the 6th Sense Button or the Procedure Button to select the appropriate laundry Program and Procedure Settings.
 - 3.Press the Schedule Button to set the schedule end time. The Digital Display will show the set time, which is increased by one hour whenever the Button is pressed once. The maximum time is 24 hours.
 - 4.If necessary, use the Water Level Button to set the appropriate Water Level. Add some detergent, softener, etc.
 - 5.Press the Start/Pause Button
 - 6.Close the Washer Lid.
- All the Indicators except the Schedule Indicator will go out in about one minute. (If the Child Lock is enabled, the Child Lock Indicator will be lit)
 - Scheduled Wash is unavailable for the Gentle, Wool, Rinse+Spin-dry, Spin-dry, and Tub Dry Programs.
 - If you want to check the Scheduled Program, please press any Button other than the Power Button. Then the Scheduled Program will be displayed for 5 seconds.
 - To change the Scheduled Program, please turn off the power and then restart the Machine and carry out the resetting.

Instructions for Adding Detergent for a Scheduled Wash

- Synthetic powder detergent can be directly added into the Drum.
- Liquid detergent and bleach can be poured directly into the hole in the Panel Frame but not directly on the laundry. Otherwise, they may cause fading of clothes.
- After softener is diluted with water of a volume 2 times that of the softener to be used, pour the diluted softener into the Softener Inlet.
- Please do not use soap, because it cannot be dissolved easily and will lead to a poor washing effect.

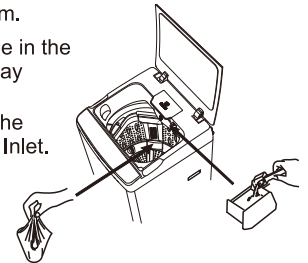

Smart Memory Function

If you choose the Preset, Normal or Heavy Duty Program the Washing Machine will remember your choice after the Program ends. When you use the Machine the next time, the remembered Program will be displayed after you turn on the power. The Machine will start running when you simply press the Start/Pause Button.

- For the Normal or Heavy Duty Program, no wash parameters but only the Program will be remembered.

Two-step Clean Function

- During the washing process, after the water level of the washing machine reaches the level that is two levels lower than the pre-set water level, the wash will start while water is added in addition proceeds.
- When the two lowest levels are set, the wash will start after the pre-set water levels are reached.
 - The Two-step Clean Function is unavailable for the Gentle, Wool and Blanket Programs
 - If the Soak Time Procedure is selected, after the soak ends, the Two-step Clean Function will be disabled during the wash.

Description of other Functions, Method for Setting These Functions

Pre-wash Function

As the drum is being filled with water, push the Pre-Wash Switch. Water will flow out from the Pre-Wash mouth. Then you can manually wash the laundry partially.
When the added water reaches the set Water Level, water addition will automatically stop.

Water Level (Varied Wash) Function

In order to improve the detergent content in the washing water and save water, you can set different water levels for a wash and rinse respectively. It is recommended that the wash proceeds at a lower water level and the rinse at a higher water level. In this way, a clean wash and a thorough rinse can be ensured.

Setting Method

Press the Power Button to turn on the power. After selecting the appropriate Program, press the Washing Time Button to set the washing time, press the Water Level button to set the wash water level, press the Rinsing Times Button to set the rinsing times, press the Water Level Button again to set the rinsing water level, press the Spin Button to set the spin-drying time, and finally, press the Start/Pause Button to start. Then the wash and rinse will proceed at different pre-set water levels.

Residual Water Draining Function

After it is enabled, within 9 minutes after the Program ends, the Drain Valve will open automatically to drain the remaining water inside the Machine to prevent it from becoming frozen when the weather turns cold. (Used when the temperature is below 0°C)

Setting Method

•Press the Power Button. Press and hold the Spin Button for more than 4 seconds until you hear a beep. Repeat the operation to enable beeps.

Tub Light Function

The Tub Light will be lit when the Washer Lid is opened and will go out 2 minutes after the Washer Lid is closed. The Tub Light will go out automatically 3 minutes after the Washer Lid is not closed.

Soak Function

After the Soak Function is enabled, a dynamic soak can be added before a wash (this function is unavailable for the Gentle, Wool, Blanket, Rinse+ Spin, Spin and Tub Dry Programs). The soaking time is 0 - 40 minutes with an increment of 5 minutes.

Description of other Functions, Method for Setting These Functions

Child Lock Function

You can enable the Child Lock Function to avoid injury to a child opening the Washer Lid of the Washing Machine.

Setting Method

Press the Power Button to turn on the power. Press and hold the Function Button for more than 3 seconds until you hear a beep. Repeat the operation to enable it again.
•After the Child Lock is enabled, the Washing Machine will stop running and display “**ES**” and emit alarming beeps when the Washer Lid is opened for more than 5 seconds during a wash.
•After the Child Lock is enabled, while a Program is running, no Buttons except the Power Button will respond.

Disabling Beeps

Cancel Method: Press the Power Button. Press and hold the Start/Pause Button for more than 4 seconds until you hear a beep. Repeat the operation to enable beeps.

Non-malfunction Cases

- 1.Sometimes water is added during a wash or rinse. This is automatic water replenishment due to a lowered water level.
- 2.At the beginning of Spin-drying, the Drum will stop and start intermittently. This is intermittent Spin-drying designed to achieve a better Spin-drying effect.
- 3.During the Spill Rinse, the Drain Hose does not drain water. This is due to the set water level being too low or the water pressure being too low.
- 4.Sometimes water is replenished during Spin-drying. This is an automatic replenishment due to the improper placement of the laundry to be Spin-dried.
- 5.After the Spin-drying ends, there is the sound of residual water, which is the sound of the balance liquid that is in the balance ring and designed to reduce Spin-drying vibration.
- 6.There was a power failure during operation and the operation cannot be automatically resumed after the power supply restores. Please set the Machine again.

Troubleshooting Guide

When any of the following problems occurs, the Smart Microcontroller will detect the abnormal status and emit alarming beeps for about 10 seconds, and the LCD/ Digital Display will display the following in the Table below.

Notes:

After all the items are checked and addressed, press the Start/Pause Button. If no fault is displayed, the Washing Machine will resume its running. If there is still any abnormality, please unplug the Power Cord and call the company's Customer Service number as soon as possible.

Fault Type	Fault Displayed	Cause
The washer does not work at all		<ul style="list-style-type: none"> •Is the power connected? •Has the Start/Pause Button been pressed? •Is it in a Schedule State? •Is the power fuse or current circuit breaker intact? •Is there a power failure?
Water does not flow into the drum	E1	<ul style="list-style-type: none"> •Is the Faucet turned on? •Is there a water supply failure? •Has the Water Inlet Hose of the Washing Machine Water Hose been frozen? •Is the water pressure too small and the water addition time too long?
Water does not drain out	E2	<ul style="list-style-type: none"> •Is the Drain Hose laid down? •Is the Drain Mouth in a too high position (of more than 15cm)? •Is the Drain Mouth blocked?
Washer does not spin	E3	<ul style="list-style-type: none"> •Is the laundry mostly on one side of the Washing/Spin-drying Drum? •Is the Washing Machine placed flatly?
	E4	Is the washer lid open?
Wash Failure	E5	<ul style="list-style-type: none"> •Is the Child Lock Function enabled? •Is the washer lid open?
Others	EA Eb EC	<ul style="list-style-type: none"> •Please press the Power Button to turn off the power, unplug the Power Cord Plug, and call the company's Customer Service number as soon as possible.
	Ed	
	E901 E902 E920 etc.	