

SPECIFICATIONS

Dimensions	540(W)X563(D)X940(H)mm
Weight	34kg
Power Source	AC220-240V 50Hz
Washing & Spin Capacity	9.0kg
Power Consumption	400W
Required Water Pressure	0.03 MPa—0.8 MPa (0.3 kgf/cm ² —8 kgf/cm ²)

WARNING - This appliance must be earthed.

FOR WASHER PLUG REMOVE 3 PIN (BS Standard Plug With 13 Amp Fuse)

IMPORTANT

The wires are coloured in accordance with the following code:


Green/yellow: Earth Light Blue: Neutral Brown: Live

The wires in the this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol \perp or coloured green or green and yellow.
- The wire which is coloured light blue must be connected to the terminal which is marked with the letter N or coloured white.
- The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured black.

FOLLOWING CAUTIONS ARE FOR WASHER USING DOUBLECORE CORD ONLY.


- If the 2-pin type of socket-outlet has a grounding terminal, securely attach the end of the Grounding Wire to the terminal.
- When grounding the washer, connect the grounding wire before plugging in the Power Cord.
- If the 2-pin type of the socket-outlet has no grounding terminal, consult your nearest dealer or securely attach the end of Grounding Wire to a suitable grounding point, such as a metal cold water pipe. Never connect the Grounding Wire to a gas pipe.
- Unplug the Power Cord before disconnecting the Grounding Wire.

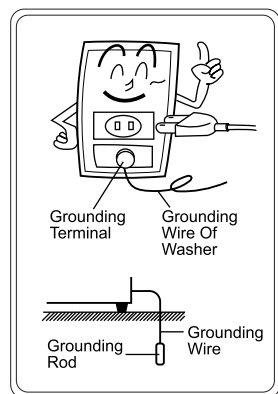

Whirlpool

WVFC900AJGR

INSTRUCTION MANUAL FULLY AUTOMATIC WASHING MACHINE

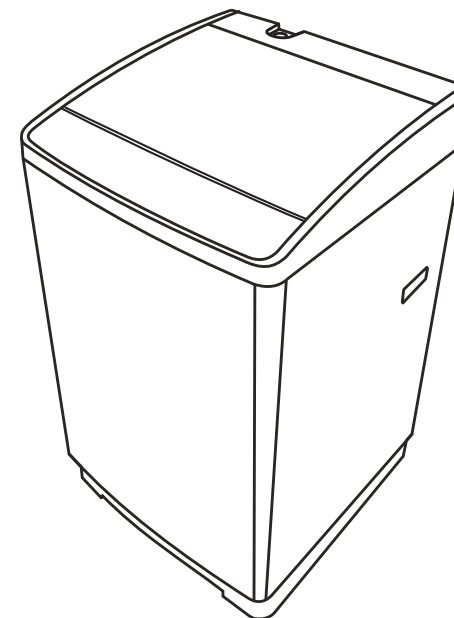

Before operating this washing machine, please read the instructions carefully and completely.



CONTENTS

SAFETY INFORMATION	2-4
CARE AND MAINTENANCE	4
ACCESSORIES	5
NAME OF PARTS	5
INSTALLATION INSTRUCTIONS	6-8
CONTROL PANEL	9-10
QUICK START	11
HOW TO USE FUNCTION AND PROGRAM	11-12
OPERATION	13-15
TIME DELAY	13
BEDDING	13
DELICATE	14
WATER LEVEL SETTING	14
CHILD LOCK FUNCTION	14
MUTE THE END BUZZER	14
MEMORY FUNCTION	15
HOW TO DRAIN REMAINING WATER	15
FREQUENTLY ASKED QUESTIONS	15
TROUBLESHOOTING GUIDE	16
SPECIFICATIONS	Back Cover








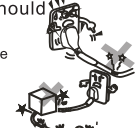


SAFETY INFORMATION

Please read this instruction manual carefully before using your machine.








- The precautions stated here are classified as “Warning” and “Attention” according to the damage and the emergency caused by misoperation, and are described respectively in line with the marks below.





 Warning	Misoperation may cause death
 Attention	Misoperation may cause body injury or damage the machine.

		
This mark indicates the content of warning or attention.	This mark indicates the prohibited action.	This mark indicates the compulsory action to be carried out.







 Warning	
<ul style="list-style-type: none">  • Dismantling, repair or alterations should only be carried out by professional technician as otherwise you may be subjected to electric shocks, may cause fire or sustain injuries. 	<ul style="list-style-type: none"> • This washing machine is equipped with a 3 pin plug which includes an earthing wire. This appliance must be earthed. 
<ul style="list-style-type: none">  This appliance is household use only. <p style="text-align: center;"><small>Prohibited</small></p>	<ul style="list-style-type: none"> • Do not put water in direct contact with the unit during maintenance and repair. This may cause short circuit or electric shock. 
<ul style="list-style-type: none"> • Electricity supply must be unplugged with dry hands. Otherwise, this may cause electric shock. 	<ul style="list-style-type: none"> • Do not put gasoline, benzene, alcohol, thinner or fabrics with these stains into or near to the washing machine. To prevent fire or explosion which may cause injuries. 
<ul style="list-style-type: none"> • Damaged or loosen wire or plug should not be used. Otherwise electric shock, short circuit or fire may take place. • Do not damage wire. Do not damage or alter the wire forcibly bend, pull twist or handle the wire. Besides, please do not put weigh on or trap the wire. 	<ul style="list-style-type: none"> • Do not put gasoline, benzene, alcohol, thinner or fabrics with these stains into or near to the washing machine. To prevent fire or explosion which may cause injuries. 
<ul style="list-style-type: none"> • Do not bend, pull or twist the power cord excessively. When the plug is inserted or removed, the fingers must grip the plug insulation part to apply force. Do not touch the metal insert of the plug in order to avoid electric shock. <p style="text-align: center;"><small>Prohibited</small></p>	<ul style="list-style-type: none"> • Do not put gasoline, benzene, alcohol, thinner or fabrics with these stains into or near to the washing machine. To prevent fire or explosion which may cause injuries. 

SAFETY INFORMATION




⚠ Warning	
<ul style="list-style-type: none"> Keep child away from the washer tub and do not place box or shelves next to the washing machine. children may fall into the washer tub resulting in injuries. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.  <p style="text-align: right;">Prohibited</p>	<ul style="list-style-type: none"> Do not put your hand into the washer tub until it has stopped completely. Even when the spinning of the washer tub is slow, there is still a danger of being caught in the motion, resulting in injuries. Particular attention should be paid when children are around. Do not put your hands into the washer tub during the washing and rinsing process. Even when the spinning is slow, hands may be trapped by clothes. If necessarily, please press pause button, and put your hands into the washer tub after it has stopped completely.  <p style="text-align: right;">Prohibited</p>
<ul style="list-style-type: none"> Please use the single socket above 10A, and do not use the voltage and frequency other than the rated power supply. The share of the same socket with other electric appliances may cause fire due to excessive loading. 	<p>Please pay attention when visiting the washer.</p> <ul style="list-style-type: none"> Especially for people with long hair. Please be careful not to drop the hair into the gap to avoid risk of hair being trapped.  <p style="text-align: right;">Prohibited</p>
<ul style="list-style-type: none"> Thoroughly wipe the power plug when dirt is adhering the prong or around the base of the prong. Failure to do so may cause a fire. <p>Clear</p> 	<ul style="list-style-type: none"> This washing machine is strictly prohibited to get close to the locations with candle, mosquito-repellent incense, dog-end or other kinds of open flame. To avoid injuries caused by the lock damage.  <p style="text-align: right;">Prohibited</p>
<ul style="list-style-type: none"> Washing machine should not be installed in humid place or in places exposed to wind and rain. Otherwise, electricity leakage causing electric shock or fire may occur.  <p style="text-align: right;">Prohibited</p>	

⚠ Attention	
<ul style="list-style-type: none"> Do not pull the power cord from the socket when unplugging the unit. To avoid electric shock or fire cause by short circuit may result.  <p style="text-align: right;">Prohibited</p>	<ul style="list-style-type: none"> Please unplug the unit when it is not in use for a long period of time. Electric shock or leakage may occur due to deformation of plastic parts of the unit. 
<ul style="list-style-type: none"> Electricity supply must be unplugged with dry hands during maintenance and repair. Otherwise, electric leakage causing injuries may occur. If the power cord or supply cord is damaged, the manufacturer or its service agent or similarly qualified person must replace it in order to avoid a hazard. 	<ul style="list-style-type: none"> Do not connect to the hot water supply, if there is a need for warm water, water of above 50°C should not be used for washing. Electric shock or leakage may occur due to deformation of plastic parts of the unit.  <p style="text-align: right;">Prohibited</p>

 SAFETY INFORMATION

⚠ Attention	
<ul style="list-style-type: none"> Do not wash, rinse and spin water proof fabric or cloth. Sleeping bag, raincoat, cover of skiing, utilities, bicycles, cars and motors. Otherwise may lead to injury by abnormal vibration during spinning or damage the washing machine, wall, floor and clothes.  <p style="text-align: right;">Prohibited</p>	<ul style="list-style-type: none"> Do not stand on or put weight on the top of the unit. Otherwise, deformation and damage may cause injuries.  <p style="text-align: right;">Prohibited</p>
<ul style="list-style-type: none"> Keep hands and feet away from the bottom of the unit when it is in motion. Ports in motion beneath the unit may cause injuries.  <p style="text-align: right;">Prohibited</p>	<ul style="list-style-type: none"> Check water supply hose connection by turning on the water before washing. To prevent damages caused by possible water leakage due to loosen screw. The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused. Do not block the ventilation openings at the bottom of washer when the washer is placed on a carpeted floor.  <p style="text-align: right;">Water leakage</p>
<ul style="list-style-type: none"> Water supply hose should be tightly screwed to the unit. Failure to do so may result in water leakage. After prolonged usage, the unit may result in water leakage caused by loosen union nut. So please check it in time and screw tightly again. <p>Water leakage</p>  <p style="text-align: right;">Nut Hose</p>	<ul style="list-style-type: none"> Please turn off the water tap when not using the unit. To prevent damages caused by water leakage.  <p style="text-align: right;">Water Inlet</p>


CARE AND MAINTENANCE

<p>Clean washing machine Use a soft cloth to wipe off the water and dirt on the surface of the washer.</p> <ul style="list-style-type: none"> Do not spray water directly to the washer body. Detergent, propellant and other chemicals are not allowed to use to avoid the damages on the surface. 	<p>Cleaning of water inlet valve (recommended once every half yearly) The water inlet mesh bag may be blocked with crud, Water Inlet please remove the water inlet hose, take out the water inlet mesh bag from the water inlet valve, clean the mesh bag, then assemble the mesh bag in the valve and load the water inlet hose.</p>  <p style="text-align: right;">Water Inlet</p>
<p>Cleaning of lint filter (recommended once every week)</p> <ol style="list-style-type: none"> Take out the lint filter. Pull out the scraps and wash the lint filter with water. Install the Filter (Align the frame claw to the groove below). <p>(Lint filter can wear-off after a period of usage)</p> 	

ACCESSORIES

Instruction manual	Drain Hose	Water Supply Hose	"Magic" Hose Joint	Bottom Cover	Screw	Warranty card

NAME OF PARTS

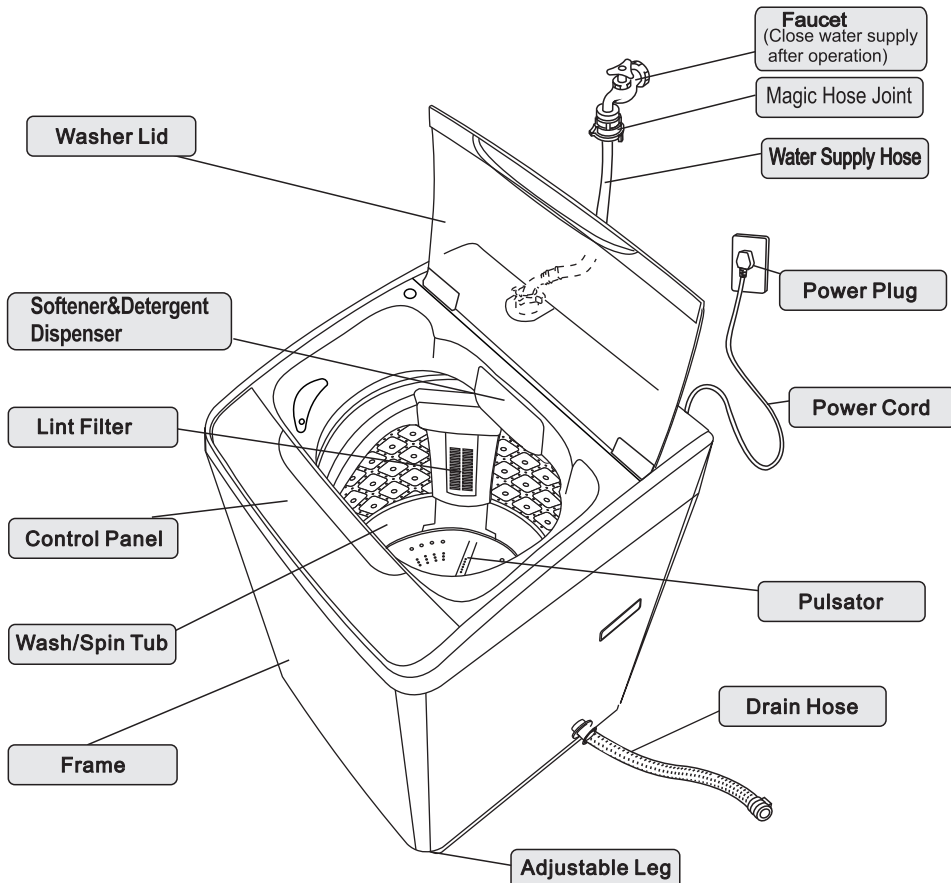


(This diagram is for reference only.
The actual product shall prevail.)

INSTALLATION INSTRUCTIONS

Installing the Bottom Cover

1. Unplug the Power Cord from the washer.
2. Gently lay down the back side of washer on a soft mat or cushion. (Be careful not to dent the Frame.)
3. Insert the attached Bottom Cover into the hooks of Leg by pushing until it reaches into the front hooks.
4. Fasten the Bottom Cover with a screw.
5. Gently set the washer upright.

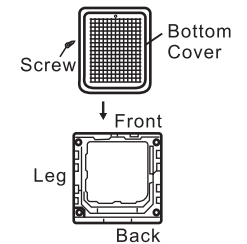


Location of Washer

1. Choose a dry location out of sunlight for the washer.
2. Install the washer on a stable and level surface.




3. Adjust the Adjustable Leg of washer if necessary to make the washer level as shown in the figure.

- The maximum permissible inclination of the supporting surface is 2°.

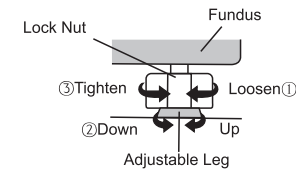

Attaching the "Magic" Hose Joint to a Faucet

Faucet: Type A is the most suitable

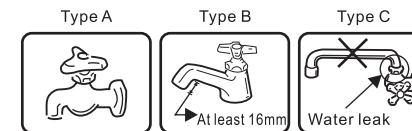

- Type B : The length of the mouth of the faucet needs to be at least 16mm.
If it is less than 16mm, the "Magic" Hose Joint can not be installed.
- Type C: It may cause water leakage.

CAUTIONS:

 
- Do not use water which is above 50°C.
- If your faucet is not suitable, please consult your dealer.

INSTALLATION INSTRUCTIONS

How to Attach the " Magic " Hose Joint


1. Loosen the four screws and slide the top of the "Magic" Hose Joint (section A in the figure) onto the faucet. Then, securely tighten the four screws provided with the "Magic" Hose Joint by using a screwdriver to secure the top of the joint to the faucet.
2. Remove the CAUTION label from the "Magic" Hose Joint.
3. Turn the male coupler on the joint (section B in the figure) clockwise to attach it securely to the top of the joint (section A in the figure).

- The appliance is to be connected to the water mains using new Water Supply Hose and "Magic" Hose Joint.
- The new hose-sets supplied with the appliance are to be used and the old hose-sets should not be reused.




CAUTION:

 If outer diameter of faucet is larger than calibre of the Joint Ring, loosen the four screws and remove the Joint Ring from the "Magic" Hose Joint.




Installing Water Supply Hose to the Washer

1. Turn the nut clockwise while holding the hose.
- Turn the nut counterclockwise after turning the faucet off when you want to detach the Water Supply Hose.

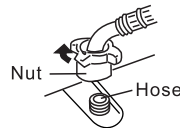

Connecting the Water Supply Hose to the " Magic " Hose Joint


1. While pushing the sleeve on the female coupler (section D in the figure) of the joint down with your fingers, connect the female coupler to the male coupler (section C in the figure).
2. Release the sleeve, then push the Water Supply Hose up into the " Magic " Hose Joint until it clicks into place.
3. Pull the Water Supply Hose down to make sure that it is securely attached.

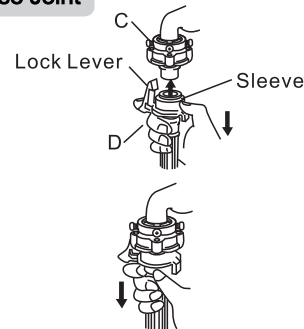

How to Detach the Water Supply Hose

Please read the following procedure in order to avoid water leakage when detaching the Water Supply Hose.


1. Turn the faucet off.
2. Press the POWER ON/OFF button to turn the power on, the MIXED button and the START/PAUSE button.
3. Press the POWER ON/OFF button to turn the power off 15 seconds later.
4. While pushing the lock lever and the sleeve on the female (section D in the figure) of the joint down with your fingers, detach the female coupler from the male coupler (section C in the figure).

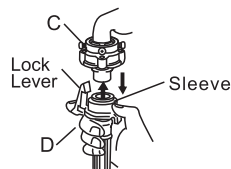

INSTALLATION INSTRUCTIONS

Installing The Drain Hose

Set the clip part of Hose Band sideways to prevent touching the frame which may cause a vibration noise.

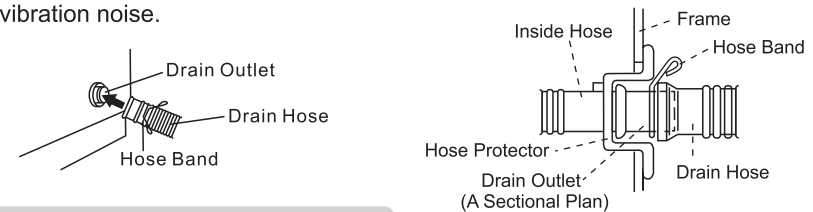


Changing the Drain Hose Direction

You can change the direction from right side to left side.

NOTE:

To prevent scratches and injuries, please wear gloves.

1. Unplug the Power Cord of the washer.
2. Detach the Back Cover by loosening screws at the back side of the washer. Detach outer Drain Hose and gently lay down the front side of washer on a soft mat or cushion.
- Be careful not to open the Washer Lid and dent the frame.
3. Detach the Cap from the left side of frame.
4. Loosen the Hose Band and pull the inner Drain Hose out of the Drain Valve. Pull the Hose Band out of the inner Drain Hose.

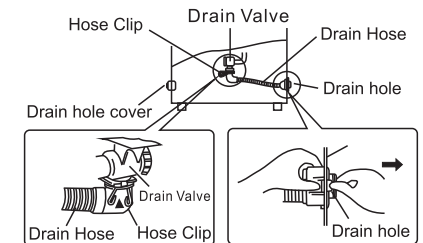

5. Push the joint on the drain hole and pull the drain hose out of the drain hole on the right side of the washer.
6. Let the inner Drain Hose through outside of left hole and set the protrusive guard of inner Drain Hose to the square cutting part of frame, then attach the Drain Outlet of the hose until it snaps into place.
7. Connect the inner Drain Hose to the Drain Valve in place and fix the Hose Clip as shown above.
- If you do not attach correct position marked with ▲, it can damage the inner Drain Hose and cause water to leak through.
8. Attach the Cap to the right hole.
9. Reattach Back Cover and gently set the washer upright.

Extension of the Drain Hose

When extending the external Drain Hose, please follow the below figure for the length and height.

Extension Hose	Height	Length
No straight	Max. 15cm	Max. 1m
Straight	—	Max. 3m



CONTROL PANEL

DETERGENT Indicator

- These are the spoon indications of the DETERGENT volume.
- Refer to "DETERGENT AND LOAD RECOMMENDATIONS" on page 11.

Digital Display Indicator


- This indicator shows remaining time (E.g.)
Remaining time is 20 minutes
- When setting FUNCTION, the digital display indicate the number of times.(E.g.)
Twice Water Saver Rinsed
- This indicator shows water level. (E.g.)
Water level is 30L
- This indicator shows when the washing is finished during time delay function. (E.g.)
Finish washing 2 hours later
- When abnormal conditions occur, the indicator will indicate warning. (E.g.)
Water does not flow

START/PAUSE Button

- This button can be use to start the washer .
- This button can also be used to temporarily stop the washer . To restart the washer , press the START / PAUSE button again.

NOTE:

- This is not a cancel button.
- If you want to turn off the END Buzzer, press the START/PAUSE button and hold it down for about 4 seconds until beeping stops.

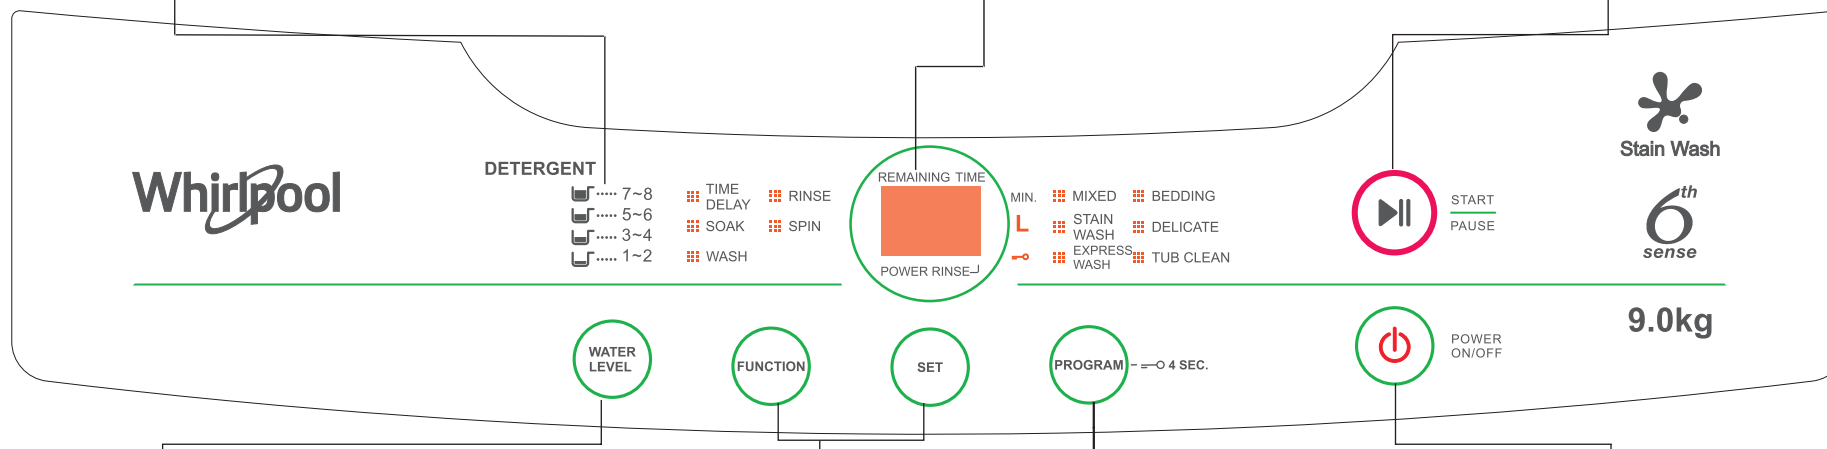

WATER LEVEL Button

- You can choose the appropriate water level that matches the iaundng load.
- Different water levels for washing, rinsing optional. For detailed operation, please refer to Page 11 .

FUNCTION and SET Button

- The FUNCTION and SET button can be used to select TIME DELAY, SOAK, WASH time, RINSE times, and SPIN time. For example, to set Rinse times: Press the FUNCTION button till RINSE light flashes. Then, press the SET button to choose the number of, rinse times.

PROGRAM Button

- To choose the washing program, press the PROGRAM button. Press PROGRAM to switch between specialized programs: MIXED, STAIN WASH, EXPRESS WASH, BEDDING, DELICATE, TUB CLEAN.
- You can set the CHILD LOCK function. Refer to the CHILD LOCK

POWER ON/OFF Button

To turn the power on, press the POWER ON/OFF. When you want to turn off the power, press the POWER ON/OFF again. When the washing has finished, the power will turn off in 5 seconds automatically. (except Setting Remained water Draining function).

NOTE:

- If you want to change the wash PROGRAM, turn the POWER ON/OFF off and then, turn it on again.
- If you leave the washer turned on without starting the operation, the power will turn off in 10 minutes automatically.

QUICK START

1. Preparation

- Connect the Drain hose. Connect the water supply hose to the faucet and turn the faucet on. Plug the Power Cord into a socket-outlet. load the laundry into the washer.

2. Press the POWER ON/OFF button.

3. Press the START / PAUSE button.

- The sensor will automatically detect the laundry load. (For MIXED/STAIN WASH/EXPRESS WASH)
- The appropriate water level, water flow and other operating programs will be selected automatically.

4. Use recommended amount of detergent as shown in chart.

Water Level	1	2	3	4	5	6	7	8
Water Volume (Approx. L)	20	25	30	36	42	48	54	60
Detergent Indicators								
Powdered detergent volume (g)	15~22	22~30	30~45	45~60				
Other detergent volume	You may adjust the detergent volume according to the type of detergent-follow recommendations on package.							

- Too much detergent causes poor rinsing and too little detergent causes poor washing.


5. Close the washer lid

- The washer buzzer will sound and stop running before spinning if the washer lid is not closed.
- You can use softener, by pouring the softener slowly into Softener Dispenser before washing.

TWO RINSE TYPES:


1. Rinse (normal type)

After spinning, water inlets to setting level and stop. Then start rinse.

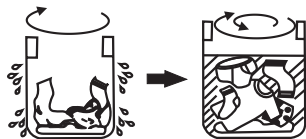

2. Power rinse (when dispose more detergent)

After spinning, water inlets to setting level. Then machine start rinse and water inlets in parallel to involve more detergent bubble into overflow hose and drain into the sewer.

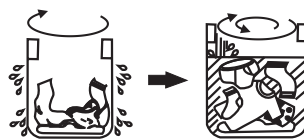

HOW TO USE FUNCTION AND PROGRAM

1. Preparation: Fit the Drain hose, turn the water supply faucet on, plug the Power Cord into a socket, put clothes inside

2. Press POWER ON/OFF button

3. Press PROGRAM button to choose the program you need accordingly. Please refer to below chart for program choosing.

HOW TO USE FUNCTION AND PROGRAM

PROGRAM CHOOSING GUIDE			OPERATION STATUS FOR THE PROGRAM		
COURSE	SUITABLE CLOTHES	MAX LOAD (KG)	WASHING TIME	RINSING TYPE	SPIN TIME
TUB CLEAN	Clean the tub	0	85min.	Rinse 1 times	3min.
MIXED	Normal clothes	9	5~12min.	Rinse 2 times	5~6min.
STAINWASH	Dirty Clothes like working coat	4	20min.	Power Rinse 2 times	7~8min.
EXPRESSWASH	Lightly soiled clothes	3	5min.	Rinse 1 times	3min.
BEDDING	Blanket or Bulky laundry	6	12min.	Power Rinse 2 times	8min.
DELICATE	Fine textiles, silk textiles, etc	1.5	6min.	Rinse 2 times	2min.

4. Press FUNCTION button to choose the desired cycle and the light for the corresponding wash function will turn on.

SOAK → WASH → RINSE → SPIN → TIME DELAY

5. Press SET button to choose TIME DELAY, SOAK, WASH, SPIN time, and RINSE times.

- SOAK time indicator

0 → 5 → 10 → ... → 35 → 40 Min. (This function is not available for DELICATE/BEDDING course).

- WASH time indicator

0 → 1 → 2 → ... → 19 → 20 Min.

- RINSE time indicator

0 → 1 → 1. → 2 → 2. → 3 → 3. → 4 → 4. times

(The number means times and "." means Power Rinse)

- SPIN time indicator

0 → 1 → 2 → ... → 8 → 9 Min. (Except for DELICATE program).

0 → 1 → 2 → 3 Min. (For DELICATE course).

- TIME DELAY time indicator

0 → 1 → 2 ... 23 → 24 hours (Except for DELICATE program).

- "TUB CLEAN" is a fixed program, the setting process is not adjustable.

6. Press the WATER LEVEL button, choose proper water level.

- Put detergent.

7. Close the washer lid.

8. Press the START/PAUSE button.

- At the end of the cycle, the buzzer will sound
- The machine will remember the last customized selections made.

NOTE: The programme used for the evaluation of WVFC900AJGR under the mandatory Water Efficiency Labelling Scheme (WELS) and the recommended Washing Programme for soiled clothes is as follows: Mixed program with water level 8.


OPERATION

TIME DELAY

1. Turn on the faucet on and load the laundry into the washer, make sure to fit the Drain Hose.
2. Press POWER ON/OFF button.
3. Select PROGRAM, FUNCTION and WATER LEVEL.
4. Press FUNCTION button till light of TIME DELAY flashes, press SET to select your needed TIME DELAY time (the time washing finished).
 - TIME DELAY indication : 6→7→8→.....24→0→1.....5 hours
5. Press START/PAUSE button.
6. Put the detergent into the washer and close washer lid.
 - All the lights except TIME DELAY will be lighted off in about one minute later. if the child lock has been set, the child lock light will light up.
 - Directly put the detergent into the detergent box.
 - TIME DELAY confirming: Press SET button to indicate FUNCTION about 5 seconds.
 - TIME DELAY cancel, change: TIME DELAY is canceled automatically when power off; Switch power on and set TIME DELAY again to change it.
 - This function is not available for DELICATE program.

BEDDING

1. Press POWER ON/OFF on and put the drainage hose.
2. Turn on the faucet and press PROGRAM button till BEDDING light flashes.
3. Prepare separately for the warm water around 5L (approx.30°C) to dissolve the detergent,And pour it into the washing tub.
4. Fold up the bedding as the method showed in the figures below and place it into the washer tub.

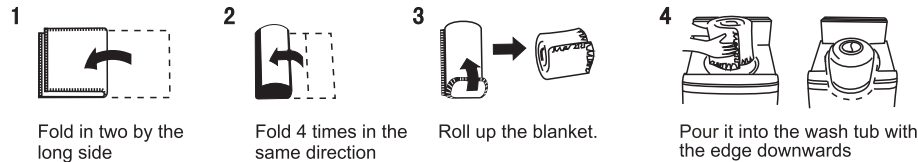

5. Press START/PAUSE button,
6. Close the washer lid.

OPERATION

DELICATE

- Before washing wool, fiber and other delicate fabrics, please refer to the care label.
- When this program is set, the water level will be set at 6 automatically. But you could change the water level to 3~8 according to the amount of laundry.

Order of operations

1. Open the washer lid and press POWER button.
2. Press "PROGRAM" button till the light of DELICATE turn on.
3. Add the liquid detergent, dissolve it into a 5L warm water (about 30°C) if powder detergent is used, then pour it into the laundry slowly.
4. Put the delicate clothing into the washing machine.
5. Press the START/PAUSE button. (adjust the water level accordingly)
6. Close the washer lid.
 - If the washer lid is not closed, washing machine will stop automatically
 - The buzzer will alarm at the end of operation and the power will be switched off automatically after 5 seconds .
 - Then turn off water tap and clean the filter.

NOTE:

- The washing capacity should be under 1.5 kg when selecting delicate program.
- Remove laundry and hang out after the program. Otherwise it will be out of shape after a long period of time the washer.
- Time Delay is not available in this program.
- The temperature should be under 30°C in order not to damage the clothes.
- Please separate the light color clothes with the dark one.
- The washing performance will be better if special purpose detergent is used. And do less damage to the clothes.

WATER LEVEL SETTING

This button allows you to choose the appropriate water level during WASH/RINSE process.

Method:

Press FUNCTION till WASH light flashes, press WATER LEVEL button to choose the appropriate water level, press SET button to set wash time. Then press FUNCTION button till RINSE light flashes, press WATER LEVEL button to choose the appropriate water level, press SET button to set RINSE times and RINSE type. Then press FUNCTION button till SPIN light flashes, press SET button to set SPIN time. Finally press START/PAUSE, the washer will start operating according to the wash water level and rinse water level as set.

CHILD LOCK FUNCTION

This function avoids any accidental operation of the washer.

Method of setting :

Press POWER ON/OFF button to switch on the power, and press PROGRAM button for 4 seconds till a sound from buzzer. To restore it, repeat above .

When CHILD LOCK is set, the CHILD LOCK on control panel lights, and indicates E5 and buzzes if washer lid open for 5 seconds during washing.

MUTE THE END BUZZER

Press POWER ON/OFF button to switch on the power, and press START/PAUSE button for 4 seconds till a sound from buzzer. To restore it, repeat above .

OPERATION

MEMORY FUNCTION

When select MIXED or STAIN WASH, 30 seconds after starting, the washer will remember this program and starts the same customised setting.

- This function is not available for DELICATE/BEDDING/EXPRESS WASH/TUB CLEAN program.
- WATER LEVEL and TIME DELAY will not be remembered.
- The WASH, RINSE, SOAK and SPIN for MIXED program could be remembered.
- To reset memory function, pull out plug.

HOW TO DRAIN REMAINING WATER

When select this function, in 9 minutes after the working finished, the drainage valve will open to drain out the remained water inside. This will avoid water freezing inside in winter when temperature below 0°C.

- Method of Use
Press POWER ON/OFF button to switch on the power, and press FUNCTION button for 4 seconds till a sound from buzzer. To restore it, repeat above or pull out the plug.

FREQUENTLY ASKED QUESTIONS

- Q: During Washing or Rinsing stage, there is still water flowing in.
A: This is possible as water might be added into the washer automatically due to decrease of water level.
- Q: The washer tub turns or stops timely at the beginning of Spinning stage.
A: This is known as intermittent spinning, which is for a better spinning effect.
- Q: There is inflow of water during Rinsing or Spinning stage sometimes.
A: This is to re-balance the laundry load as they might be distribute equally inside the washer tub.
- Q: There is "water-flowing" sound after Spinning stage.
A: This is the sound of balance liquid in Balance Ring, to reduce the spinning vibration.
- Q: Control panel feels warm after power is switched off.
A: Memory function is activated after power is switched off.
- Q: Power is suddenly switched off and the washer could not continue washing.
A: Turn on the washer and set the washing program again.

TROUBLESHOOTING GUIDE

When the following problem occur, the sensor puter will detect the abnormal condition and an electronic buzzer sounds for approximately 10 seconds and the indicators flash as shown below:

Kind of Trouble	Display Indicator	Where to Check
The washer does not work at all.		<ul style="list-style-type: none"> • Press the POWER ON/OFF button. • Press the START/PAUSE button. • Press the TIME DELAY button. • Check whether power failure has occurred. • Check whether the fuse or circuit breaker has been activated.
Water does not flow into the Wash/Spin Tub.	E1	<ul style="list-style-type: none"> • Turn the water supply tap on. • Check whether the water supply has been cut off. • Check whether the metal filter of the Water Inlet is clogged. • Check if the water has frozen in the washer. • Check whether water pressure is too low.
Water does not drain out.	E2	<ul style="list-style-type: none"> • Put down the Drain Hose from the hookhole. • Check the Drain Hose for any obstructions. • Check whether the Drain Hose is clogged. • Check whether the Drain Hose rises too high off the ground.
The washer does not spin.	E3	<ul style="list-style-type: none"> • Check whether the laundry has shifted to one side of the Wash/Spin Tub. • Check whether the washer is on a level surface
	E4	<ul style="list-style-type: none"> • Close the Washer Lid.
The buzzer keeps beeping.	E5	<ul style="list-style-type: none"> • Check whether the CHILD LOCK is set. • Close the Washer Lid.
Other troubles.	EA EC	<ul style="list-style-type: none"> • Press the POWER ON/OFF button to turn off the power, call the authorized service center.

NOTE: The Display indicator can be released by pressing the START/PAUSE button once if you want to release the emergency stop. Then press the START/PAUSE button again to restart the operation.