

Register your product online

For Singapore Warranty, please scan QR code or visit below website:




<https://www.whirlpool.com.sg/>

Whirlpool® Registered trademark/TM Trademark of Whirlpool group of companies  
All rights reserved - <http://www.whirlpool.com.sg>

**Whirlpool**

EN

**Whirlpool**

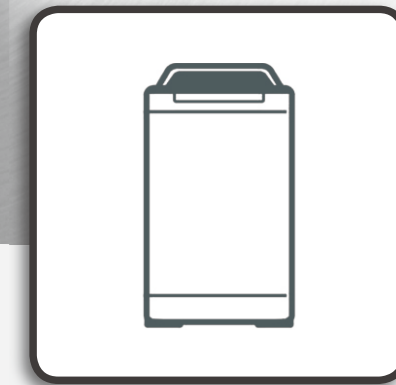

## Health & Safety, Use & Care, Installation Guide

**Models:**

WVFC902AJGR





[www.whirlpool.com.sg](http://www.whirlpool.com.sg)

## Content










Safety Instructions	2-4
Care And Maintenance	4
Accessories	5
Name of Parts	5
Installation Instructions	6-8
Control Panel	9-10
Quick Start	11
How To Use Function And Program	11-12
Operation	13-15
Time Delay	13
Bedding	13
Delicate	14
Water Level Setting	14
Child Lock Function	14
Mute The End Buzzer	14
Memory Function	15
How To Drain Remaining Water	15
Frequently Asked Questions	15
Specification	15
Troubleshooting Guide	16

## Safety Instructions

- Please read "the manual" carefully before using this appliance.
- This appliance is not intended to be used by persons with insufficient physical, sensory, or mental function (including children), or those who lack experience and knowledge, unless under the supervision or guidance of a person who can ensure their safety.
- In order to avoid any property damages or personal injuries in usage, the matters that must be observed in terms of safety are explained as below:

 <b>Warning</b>	Misoperation may cause "Possibility of death or injury".
 <b>Attention</b>	Misoperation may cause "Possibility of injury and damage to items".

		
"Warning or Attention".	"Actions" .	"Attention" .

 <b>Warning</b>	
 <b>Modification is not allowed, non-professional maintenance personnel are prohibited to disassemble and repair the washing machine.</b> <ul style="list-style-type: none"> <li>• Can cause fire, electric shock, or injury.</li> <li>• Please contact your dealer or After-sales Service in case of failure.</li> </ul>	 <b>Do not bend, pull, or twist the power cord excessively.</b> <ul style="list-style-type: none"> <li>• It may cause damage to the power cord and may lead to fire or electric shock.</li> </ul>
 <b>During maintenance, be sure to unplug the power cord from the socket. In addition, do not plug or unplug the power cord when your hands are wet.</b> <ul style="list-style-type: none"> <li>• It may cause electric shock and injury.</li> </ul>	 <b>Do not use voltage or frequency other than the marked specifications.</b> <ul style="list-style-type: none"> <li>• It may cause damage, fire and electric shock.</li> </ul>
 <b>Do not use the power cord and plug when they are damaged or loose.</b> <ul style="list-style-type: none"> <li>• Can cause electric shock, short circuit, injury or fire.</li> </ul>	 <b>Dusts and other dirt on the power cord and plug shall be removed regularly.</b> <ul style="list-style-type: none"> <li>• If dust accumulates on the power cord and plug, it can cause fire due to poor insulation caused by moisture.</li> </ul>
 <b>Do not use the washing machine for other purposes.</b> <ul style="list-style-type: none"> <li>• The washing machine shall not be used for any purposes other than washing clothes that can be washed in accordance with the instructions to avoid damage to the washing machine or other possible danger.</li> </ul>	 <b>Do not place on uneven ground.</b> <ul style="list-style-type: none"> <li>• Otherwise machine will be easy to fall and move, causing injuries and damages to the washing machine.</li> </ul>

## Safety Instructions

### ⚠ Warning

**When the washing machine is running, do not reach into the wash/spin tub.**

- If your hand touches the tub, it may cause injury.
- During spinning, if the tub does not stop rotating within 15 seconds of opening the door, please immediately turn off the power and contact your dealer or After-sales Service.



Do not touch

**Do not wash clothing that has been exposed to volatile solvents.**

- Do not wash clothing stained with gasoline, kerosene, thinner, etc. This may cause fire or explosion.



Forbidden

**Must be grounded properly.**

- The socket should be well grounded.
- In order to prevent leakage accidents.



The socket should be well grounded



**Avoid installation in wet and rainy places.**

- The bad insulation of electrical appliances will cause electric leakage or fault.



Forbidden

**Children should be supervised to ensure that they do not play with the appliance.**

- Serious injuries may occur if children accidentally fall into the wash/spin tub.



Forbidden

**Sockets other than specified rating is not allowed to be used.**

- It may cause risk of damage, fire and electric shock.
- Please use sockets above 10A alone, do not use extension sockets or share power with other appliances.



Forbidden

**Plugging and unplugging of the power cord.**

- When plugging or unplugging the power cord hold the insulating part to apply force. Do not touch the metal piece of the plug or apply force to the wire end to avoid electric shock or pull off of inner wire of the power cord.
- Be sure to unplug the power cord before moving the washing machine.



Forbidden

**Keep away from fire.**


- Keep away from fireworks, and do not place lighted candles, cigarettes, mosquito coils and kettles on washing machines. This is the main cause of fire or deformation.



Forbidden

**Protection of the power cord.**

- Please check the power cord is not frayed before connecting and don't use extension cord. If the supply cord is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified person in order to avoid a hazard. Please contact your dealer or After-sales Service.

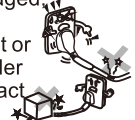

Forbidden

**Modification or self repair is not allowed.**

- Except for the professional from the manufacturer, it is forbidden to self modify or repair it to avoid the danger of fire or electric shock.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.



Disassembling Forbidden

**Waterproof or non-absorbent laundry should not be washed in the washing machine.**

- To avoid abnormal vibration when washing or spinning. (Eg: raincoat, car cover)



Forbidden

**Be careful when visiting the washing machine.**

- Especially for people with long hair, please be careful not to drop your hair into the gaps to avoid risk of hair being trapped.



Attention

## Safety Instructions

### ⚠ Attention

**Watch out for spills of laundry.**

- Do not wash clothing that is water-resistant to avoid damage caused by laundry overflow during spinning.



Attention

**Do not wash the parts of the washing machine directly with water.**

- To avoid the risk of electric shock due to poor insulation.



Forbidden

**Do not connect to hot water supply!**

- Hot water can deform plastic parts, it is the cause of malfunction.



Forbidden

**Do not attempt to touch the internal moving parts while the washing machine is running.**

- To avoid danger of injury.



Do not touch

**Please do not plug or unplug the power cord when your hands are wet.**

- To avoid the danger of electric shock.



Wet hand Forbidden

**Special attention:** Do not put your fingers or any items near the gap between door lid and the top part of cabinet.

- To avoid danger of injury or causing malfunction.



Attention

**Please do not stand on or put weight on the washing machine.**

- To avoid danger caused by deformation or damage of components.



Forbidden

**When the washing machine is not in use**

- The water tap should be closed to prevent the water inlet hose from being damaged or falling off, resulting in a water leakage accident.
- The power cord should be unplugged to prevent fire or other accidents.



Unplug the Power cord

**This appliance is intended to be used in household and similar applications such as:** staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments; areas for communal use in blocks of flats or in laundrettes.

## Care And Maintenance

### Clean washing machine

Use soft clothing to wipe off the water or dirt on the surface of the washer.

- Do not spray water directly to the washer body.
- Detergent, propellant and other chemicals are not allowed to use to avoid the damages on the surface.



### Clean the water inlet Valve

(Suggest clean it every 6 months)

After long-term use, The water inlet mesh bag may be blocked with dirt, please load off the water inlet hose, take out the water inlet mesh bag from the water inlet valve, clean the mesh bag, then assemble the mesh bag in the valve and load the water inlet hose.



Water Inlet

### Clean Hose Filter

(Suggest clean it every 6 months)

1. Pull the water inlet hose out.
2. Turn off the revolver according to the figure shown.
3. Load off the "Universal" Hose Joint filter and clean the dirt with a toothbrush.
4. Install the clean "Universal" Hose Joint filter to revolver and water inlet hose.



Filter

### Clean lint filter

(Suggest clean it after each wash cycle)

1. Take out the lint filter.
2. Pull out the lints and wash the lint filter in the water.
3. Install the Filter (fix the frame claw to the groove below).




(Lint Filter is easily destroyed parts).

## Installation Instructions


### Transportation

At least two people are needed to carry the machine. One person on one side carries the cabinet handles. Before handling or tilting the machine, secure the top cover of the washing machine is closed to avoid danger (such as using tape to close it).

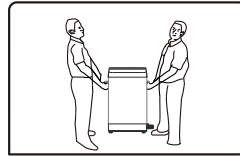

### Installation of Bottom Cover


1. Take out the bottom cover on the washing machine surface protection rack and the screws in accessories bag.
  2. Tilt the washing machine backwards and slowly lay it down on the cushion.
- Note: Before tilting the machine, ensure that the top cover of the washing machine is closed (such as using tape).
3. Push the bottom cover straight into the base slot until it is seated in position.
  4. Fix the bottom cover to the base with screws.
  5. Lift up the washing machine gently and make it stand steady.

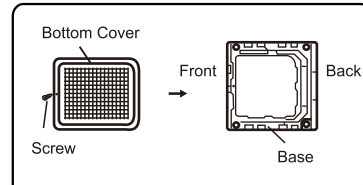

**Note:** Please be sure to install the bottom cover in place before using.

### Location of the washing machine

1. Choose a dry place out of sunlight to place the washing machine.
2. Place the washing machine on a solid, stable floor.
3. The floor where the washing machine is installed should have a floor drain, and the floor drain should be unobstructed. At the same time, the floor drain should be flat with or slightly lower than the surface on which the washing machine is installed to prevent water leakage of the washing machine and cause harm.
4. Make the washing machine stand as stable as possible. If necessary, level the washing machine by adjusting the adjustable feet of the washing machine in the order shown. The maximum allowable inclination of the washing machine placement surface is 2°.
5. Minimum installation distance from the wall or installation cabinet is 10cm.

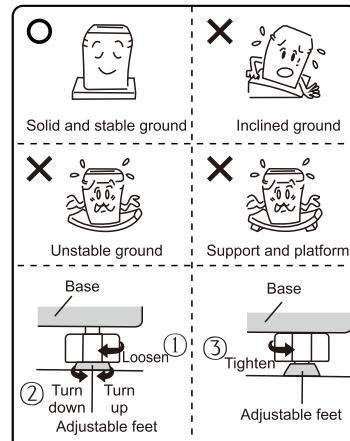

**Note:**

- When the washing machine is placed on the floor or a flexible support, vibration of the washing machine may be caused.
- Do not place carpets, etc. under the bottom of the washing machine to avoid blocking the bottom area.


### Selection of Water Tap

Water Tap type: (the opening of the water tap should be flat)

Type A: Most suitable.

Type B: The water tap length must be greater than 16mm, otherwise the universal joint cannot be installed.

Type C: Water leakage may occur in the area as shown in the figure.

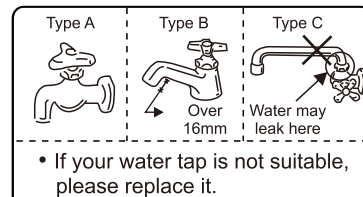





**Note:**

1. When installing the washing machine, be sure to remove the pedestal and bracket used for transportation at the bottom of the washing machine, otherwise it will not be usable.
2. During installation or initial use, there will be a small amount of water flowing out of the drain hose, which is the residual water left during the routine inspection of the factory.
3. After using the washing machine, please unplug the power cord and turn off the water tap to prevent fire and water leakage.

## Installation Instructions


### Installation of Universal Joint

1. Hold the universal joint on one hand and press the locking lever on the other hand to separate the universal joint from the water inlet hose.
2. Adjust the 4 screws on the universal joint evenly, so that the 2 screws on the wall side can fully make contact with the outer part of the water tap first.
3. Put the universal joint vertically on the water tap, make the inner seal ring close to the opening of the water tap, and tighten the 4 screws with a screwdriver.
4. Remove the seal from the universal joint and tighten the universal joint.

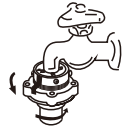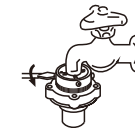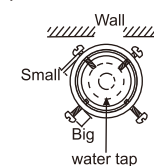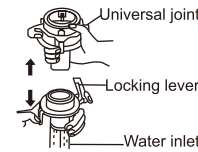


### Connection of water inlet hose

1. Connect the water inlet hose to the universal joint.
2. Align the inlet hose port with the inlet valve port, and turn the tightening nut on the inlet hose clockwise until it stops.
3. Check whether the water inlet hose is securely connected.
  - Pull the water inlet hose downward to confirm that the water inlet hose is connected to the universal joint reliably, then slowly open the water tap to check water leakage. If water leaks, turn off the water tap and reinstall it.
  - After long-term use, the universal connector may become loose. In this case, please reinstall it.
  - Turn off the water tap when the machine is not in use.

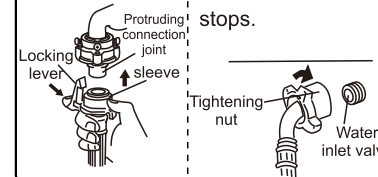

### Removing the water inlet hose


1. Turn off the water tap.
2. Press the "Power" button to turn ON the power, and press the "Start / Pause" button.
3. Turn off the power after 15 seconds.
4. Press down on the locking lever and sleeve with finger and pull them downward to remove the water inlet hose.
5. Turn the water inlet hose on the water inlet valve counterclockwise until the water inlet hose is removed.

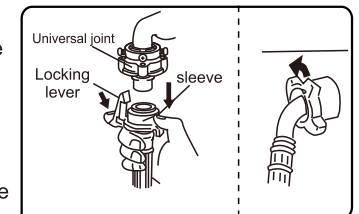

### Connection of drain hose

1. Connect the drain hose to the drainage outlet and secure it with the hose circlip. As shown on the right:

**Note:** Be sure to use the new water inlet hose in the accessories bag. The old water inlet hose cannot be reused.

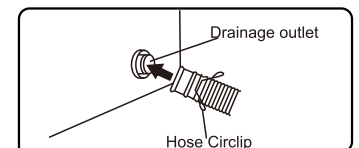



## Installation Instructions

### Change the direction of the drain hose

The drain hose can be changed from the right to the left according to the needs in use.

• The power cord should be unplugged when replacing.

• Gloves should be worn to prevent hand scratches.

1.Remove the drain cover on the left side.

2.Tilt the washing machine backwards on a soft cushion.

Note: Before tilting the machine, ensure that the top cover of the washing machine is closed (such as using tape).

3.Loosen the hose circlip and disconnect the drain hose from the drain valve.


4.Push the connector of the drain port and pull the drain hose out of the washing machine from the right drain port.

5.Insert the drain hose from the drain port on the left, and tighten the joint.

6.Connect the drain hose with the drain valve and fix it with a hose circlip.


7.Install the drain cover on the right side.

8.Lift up the washing machine gently and make it stand steady.

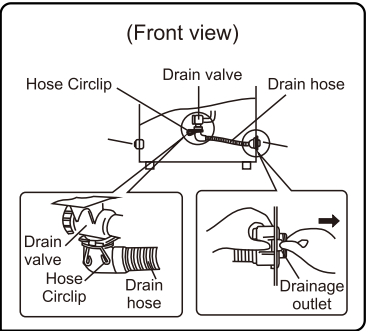


### Extension of the drain hose

 When the length of the drain hose is not long enough, please purchase an extension hose from your dealer or After-sales Service to connect it.

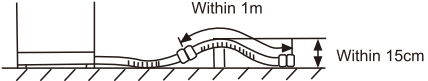
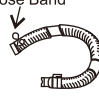 

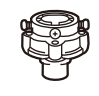 
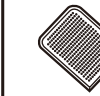 

Extension of the drain hose	Extension height	Extension length	
There are steps in between	Within 15cm	Within 1m	
There are no steps in between	—	Within 3m	

## Product Description

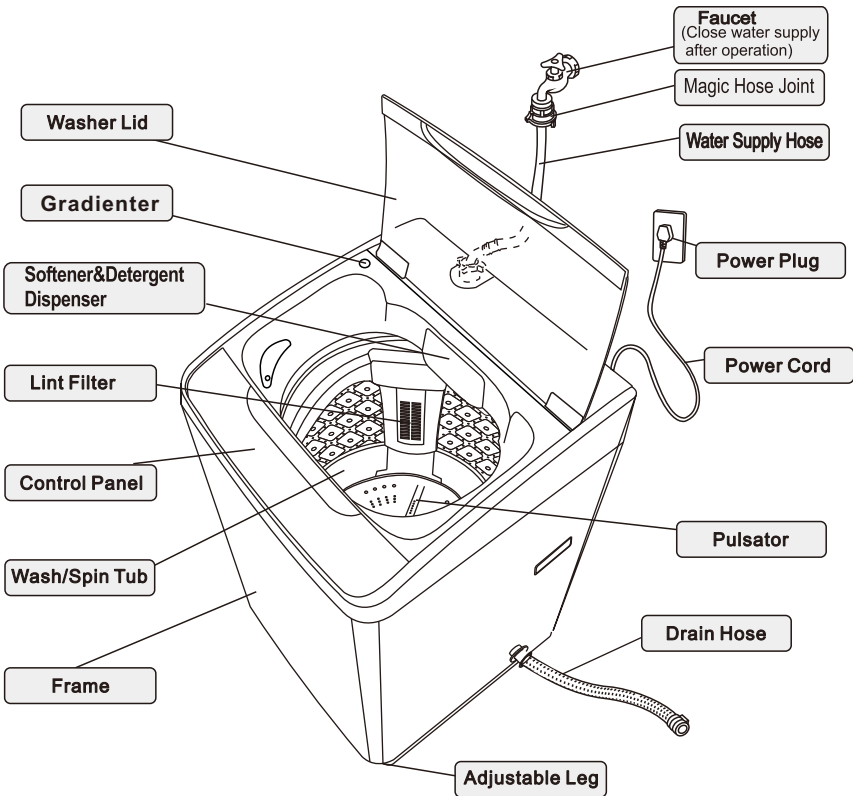


(This diagram is for reference only.  
The actual product shall prevail.)

## Accessories

Instruction manual	Drain Hose	Water Supply Hose	"Magic" Hose Joint	Bottom Cover	Screw
					

## Control Panel

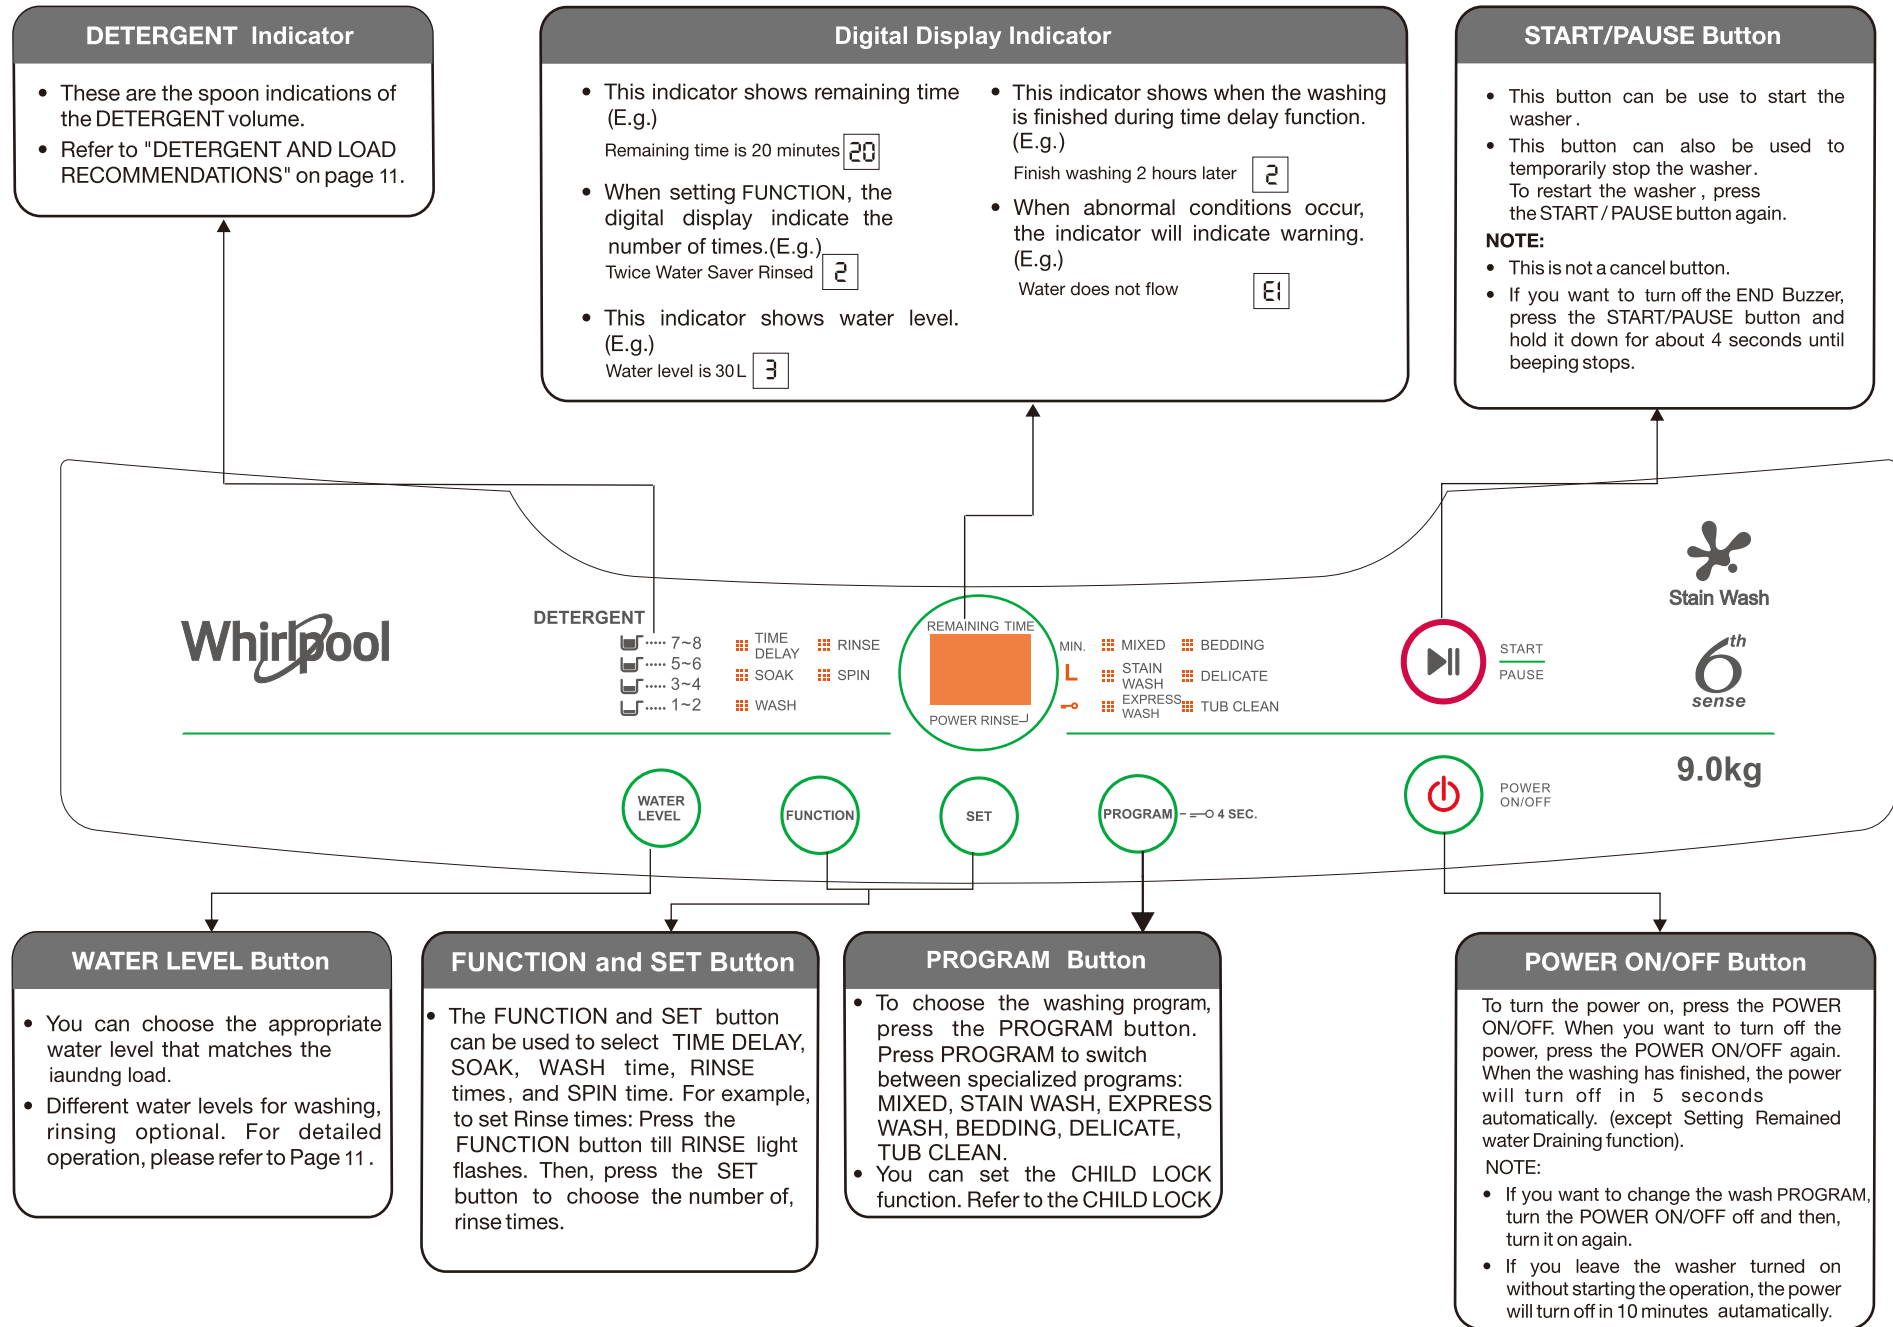

## Quick Start

### 1. Preparation







- Connect the Drain hose. Connect the water supply hose to the faucet and turn the faucet on. Plug the Power Cord into a socket-outlet. load the laundry into the washer.

### 2. Press the POWER ON/OFF button.

### 3. Press the START / PAUSE button.

- The sensor will automatically detect the laundry load. (For MIXED/STAIN WASH/EXPRESS WASH)
- The appropriate water level, water flow and other operating programs will be selected automatically.

### 4. Use recommended amount of detergent as shown in chart.

Water Level	<div>1</div>	<div>2</div>	<div>3</div>	<div>4</div>	<div>5</div>	<div>6</div>	<div>7</div>	<div>8</div>
Water Volume(Approx. L)	20	25	30	36	42	48	54	60
Detergent Indicators	<div></div>		<div></div>		<div><div></div></div>		<div><div></div></div>	
Powdered detergent volume (g)	15~22		22~30		30~45		45~60	
Other detergent volume	You may adjust the detergent volume according to the type of detergent-follow recommendations on package.							

- Too much detergent causes poor rinsing and too little detergent causes poor washing.
- Water consumption listed above for reference only. It is not applicable for instance where washer lid left open for more than 10 minutes and water automatically drain.


### 5. Close the washer lid

- The washer buzzer will sound and stop running before spinning if the washer lid is not closed.
- You can use softener, by pouring the softener slowly into Softener Dispenser before washing.

### TWO RINSE TYPES:


#### 1. Rinse (normal type)

After spinning, water inlets to setting level and stop. Then start rinse.

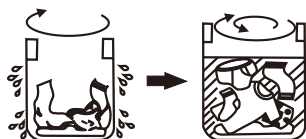

#### 2. Power rinse (when dispose more detergent)

After spinning, water inlets to setting level. Then machine start rinse and water inlets in parallel to involve more detergent bubble into overflow hose and drain into the sewer.

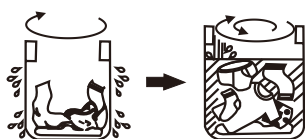

## How To Use Function And Program

1. Preparation: Fit the Drain hose, turn the water supply faucet on, plug the Power Cord into a socket, put clothes inside

2. Press POWER ON/OFF button

3. Press PROGRAM button to choose the program you need accordingly.

Please refer to below chart for program choosing.

## How To Use Function And Program

PROGRAM CHOOSING GUIDE			OPERATION STATUS FOR THE PROGRAM		
COURSE	SUITABLE CLOTHES	MAX LOAD (KG)	WASHING TIME	RINSING TYPE	SPIN TIME
TUB CLEAN	Clean the tub	0	85min.	Rinse 1 times	3min.
MIXED	Normal clothes	9	5~12min.	Rinse 2 times	5~6min.
STAINWASH	Dirty Clothes like working coat	4	20min.	Power Rinse 2 times	7~8min.
EXPRESSWASH	Lightly soiled clothes	3	5min.	Rinse 1 times	3min.
BEDDING	Blanket or Bulky laundry	6	12min.	Power Rinse 2 times	8min.
DELICATE	Fine textiles, silk textiles, etc	1.5	6min.	Rinse 2 times	2min.

4. Press FUNCTION button to choose the desired cycle and the light for the corresponding wash function will turn on.

SOAK → WASH → RINSE → SPIN → TIME DELAY

5. Press SET button to choose TIME DELAY, SOAK, WASH, SPIN time, and RINSE times.

- SOAK time indicator

0 → 5 → 10 → ... → 35 → 40 Min. (This function is not available for DELICATE/BEDDING course).

- WASH time indicator

0 → 1 → 2 → ... → 19 → 20 Min.

- RINSE time indicator

0 → 1 → 1. → 2 → 2. → 3 → 3. → 4 → 4. times

(The number means times and "." means Power Rinse)

- SPIN time indicator

0 → 1 → 2 → ... → 8 → 9 Min. (Except for DELICATE program).

0 → 1 → 2 → 3 Min. (For DELICATE course).

- TIME DELAY time indicator

0 → 1 → 2 ... 23 → 24 hours (Except for DELICATE program).

- "TUB CLEAN" is a fixed program, the setting process is not adjustable.

6. Press the WATER LEVEL button, choose proper water level.

- Put detergent.

7. Close the washer lid.

8. Press the START/PAUSE button.

- At the end of the cycle, the buzzer will sound
- The machine will remember the last customized selections made.

### For Singapore market

The recommended washing programme used for the evaluation under the mandatory Water Efficiency Labelling Scheme (WELS) for a normally soiled load at rated capacity is:

Quick+ water level "5" Other parameters are not adjusted by default. This data may differ in your home due to changing conditions in inlet water temperature, water pressure etc.

Approximate programme duration values refer to the default setting of the programmes, without options.


## Operation

### TIME DELAY

1. Turn on the faucet on and load the laundry into the washer, make sure to fit the Drain Hose.
2. Press POWER ON/OFF button.
3. Select PROGRAM, FUNCTION and WATER LEVEL.
4. Press FUNCTION button till light of TIME DELAY flashes, press SET to select your needed TIME DELAY time ( the time washing finished).
  - TIME DELAY indication : 6→7→8→.....24→0→1.....5 hours
5. Press START/PAUSE button.
6. Put the detergent into the washer and close washer lid.
  - All the lights except TIME DELAY will be lighted off in about one minute later. if the child lock has been set, the child lock light will light up.
  - Directly put the detergent into the detergent box.
  - TIME DELAY confirming: Press SET button to indicate FUNCTION about 5 seconds.
  - TIME DELAY cancel, change: TIME DELAY is canceled automatically when power off; Switch power on and set TIME DELAY again to change it.
  - This function is not available for DELICATE program.

### BEDDING

1. Press POWER ON/OFF on and put the drainage hose.
2. Turn on the faucet and press PROGRAM button till BEDDING light flashes.
3. Prepare separately for the warm water around 5L (approx.30°C) to dissolve the detergent, And pour it into the washing tub.
4. Fold up the bedding as the method showed in the figures below and place it into the washer tub.

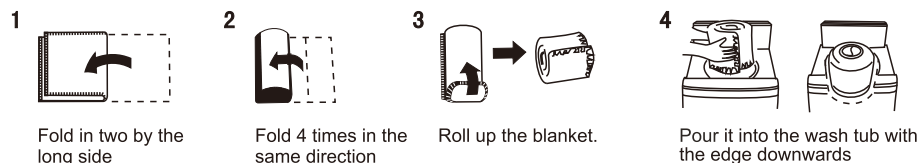

5. Press START/PAUSE button,
6. Close the washer lid.

### MEMORY FUNCTION

When select MIXED or STAIN WASH, 30 seconds after starting, the washer will remember this program and starts the same customised setting.

- This function is not available for DELICATE/BEDDING/EXPRESS WASH/TUB CLEAN program.
- WATER LEVEL and TIME DELAY will not be remembered.
- The WASH, RINSE, SOAK and SPIN for MIXED program could be remembered.
- To reset memory function, pull out plug.

## Operation

### DELICATE

- Before washing wool, fiber and other delicate fabrics, please refer to the care label.
- When this program is set, the water level will be set at 6 automatically. But you could change the water level to 3~8 according to the amount of laundry.

#### Order of operations

1. Open the washer lid and press POWER button.
  2. Press "PROGRAM" button till the light of DELICATE turn on.
  3. Add the liquid detergent, dissolve it into a 5L warm water (about 30°C) if powder detergent is used, then pour it into the laundry slowly.
  4. Put the delicate clothing into the washing machine.
  5. Press the START/PAUSE button. (adjust the water level accordingly)
  6. Close the washer lid.
- If the washer lid is not closed, washing machine will stop automatically
  - The buzzer will alarm at the end of operation and the power will be switched off automatically after 5 seconds.
  - Then turn off water tap and clean the filter.

#### NOTE:

- The washing capacity should be under 1.5 kg when selecting delicate program.
- Remove laundry and hang out after the program. Otherwise it will be out of shape after a long period of time the washer.
- Time Delay is not available in this program.
- The temperature should be under 30°C in order not to damage the clothes.
- Please separate the light color clothes with the dark one.
- The washing performance will be better if special purpose detergent is used. And do less damage to the clothes.

### WATER LEVEL SETTING

This button allows you to choose the appropriate water level during WASH/RINSE process.

Method:

Press FUNCTION till WASH light flashes, press WATER LEVEL button to choose the appropriate water level, press SET button to set wash time. Then press FUNCTION button till RINSE light flashes, press WATER LEVEL button to choose the appropriate water level, press SET button to set RINSE times and RINSE type. Then press FUNCTION button till SPIN light flashes, press SET button to set SPIN time. Finally press START/PAUSE, the washer will start operating according to the wash water level and rinse water level as set.

### CHILD LOCK

This function avoids any accidental operation of the washer.

Method of setting :

Press POWER ON/OFF button to switch on the power, and press PROGRAM button for 4 seconds till a sound from buzzer. To restore it, repeat above.

When CHILD LOCK is set, the CHILD LOCK on control panel lights, and indicates E5 and buzzes if washer lid open for 5 seconds during washing.

### MUTE THE END BUZZER

Press POWER ON/OFF button to switch on the power, and press START/PAUSE button for 4 seconds till a sound from buzzer. To restore it, repeat above.



## Operation

### HOW TO DRAIN REMAINING WATER

When select this function, in 9 minutes after the working finished, the drainage valve will open to drain out the remained water inside. This will avoid water freezing inside in winter when temperature below 0°C.

- Method of Use  
Press POWER ON/OFF button to switch on the power, and press FUNCTION button for 4 seconds till a sound from buzzer. To restore it, repeat above or pull out the plug.

## Frequently Asked Questions

1. Q: During Washing or Rinsing stage, there is still water flowing in.  
A: This is possible as water might be added into the washer automatically due to decrease of water level.
2. Q: The washer tub turns or stops timely at the beginning of Spinning stage.  
A: This is known as intermittent spinning, which is for a better spinning effect.
3. Q: There is inflow of water during Rinsing or Spinning stage sometimes.  
A: This is to re-balance the laundry load as they might be distribute equally inside the washer tub.
4. Q: There is "water-flowing" sound after Spinning stage.  
A: This is the sound of balance liquid in Balance Ring, to reduce the spinning vibration.
5. Q: Control panel feels warm after power is switched off.  
A: Memory function is activated after power is switched off.
6. Q: Power is suddenly switched off and the washer could not continue washing.  
A: Turn on the washer and set the washing program again.

## Specifications

Model no.	WVFC902AJGR
Rated washing capacity	9kg
Rated spin capacity	9kg
Rated voltage and frequency	220V~240V/50Hz
Rated Power	400W
Net weight	34kg
Water pressure	0.03-0.8MPa
Net Dimensions (mm)	540Wx563Dx940H

## Troubleshooting Guide

When the following problems occur, the microcomputer will detect the abnormal state and issue an electronic buzzer, and the digital window will display the status as shown in the table below.

### Note:

After checking each item and removing the fault, press the "Start / Pause" button, the fault code should be cleared, and the washing machine will continue to run. If it is still abnormal, please unplug the power plug and contact After-sales Service as soon as possible.

Failure type	Fault code	Reason
Not working at all		<ul style="list-style-type: none"> <li>• Whether the power is connected?</li> <li>• Whether the "Start / Pause" button is pressed?</li> <li>• Whether the preset function has been set?</li> <li>• Whether the fuse or current breaker of the power supply intact?</li> <li>• Whether there is a power outage?</li> </ul>
No water intake or little water inflow	E1	<ul style="list-style-type: none"> <li>• Whether the water tap is turned on?</li> <li>• Whether the water supply is cut off?</li> <li>• Whether the water inlet hose and water inlet valve filter is blocked?</li> <li>• Whether the water inlet hose of the washing machine is frozen?</li> <li>• Whether the water pressure too low and the water intake time is too long?</li> </ul>
Drainage failure	E2	<ul style="list-style-type: none"> <li>• Whether the drain hose is laid down?</li> <li>• Whether the drain outlet is too high (above 15cm)?</li> <li>• Whether the drain outlet is blocked?</li> </ul>
Not Spin	E3	<ul style="list-style-type: none"> <li>• Whether the laundry is leaning to the side of the tub?</li> <li>• Whether the washing machine is installed flat?</li> </ul>
	E4	<ul style="list-style-type: none"> <li>• Whether the washing lid is open?</li> </ul>
The buzzer keeps beeping.	E5	<ul style="list-style-type: none"> <li>• Whether the washing lid is open?</li> </ul>
Other troubles.	EA EC	<ul style="list-style-type: none"> <li>• Press the POWER ON/OFF button to turn off the power, call the authorized service center.</li> </ul>