 



Design	
Colour/Finish	Black
Display	LED Digital
Control	Push Push Knobs
Door / Handle Design	Triple Layered Glass Soft Closing Door with Black Handle
Cavity Type	Enamelled
Capacity	71 litres
Cooking Shelves	5 shelves
Weight	26.9kg
Product Dimension	W 595mm x H 595mm x D 570mm
Cut Out Dimension	W 568mm x H 585mm x D 560mm
Performance	
Heating Methods	Conventional, Forced Air, Grill, Turbo Grill
Heating Temperature	60°C to 250°C
Functions	Rising, Air Fry, Pizza, Eco Forced Air, Maxi Cooking, Pastry AUTO, Gentle Steam
Features	Power Management, Delay Start
Cleaning	Automatic Cleaning (Pyrolytic), Smart Clean (Hydrolytic Cleaning)
Consumption Rates	
Energy Consumption	0.89 kwh/cycle
Energy Rating	Europe A+ energy efficiency
Accessories	
2 x Wire Shelf, 1 x Baking Tray, 1 x Deep Tray, 1 x Air Fry Tray, 1 pair x Telescopic Rail	



Features & Benefits

	<Air Fry> Crisp up foods with minimal oil. Ideal for cooking frozen foods, such as fries and chicken nuggets, as well as fresh items like vegetables, meats and fish.
	<Gentle Steam> The Gentle Steam function pairs the ultimate combination of assisted steam with a conventional cooking method, to ensure nutrients and juiciness are retained in the foods whilst maintaining a crispy exterior.
	<Flexi Clean> With the options of Pyrolytic or Smart Clean/Hydrolytic. Pyrolytic technology uses a high-temperature cycle to burn food residues into ashes, which can then be easily wiped away with a sponge. This ensures spotless cleaning with minimal effort. Smart Clean enables the steam to release during special low-temperature cleaning cycle allows dirt and food residues to be removed with ease. With SmartClean, the oven can be cleaned quickly and environmentally.
	<Cook3> Cook on three different dishes at the same time thanks to a special airflow that avoids aroma mixing.
	<Telescopic Shelf> Extremely helpful for checking how the cooking is coming along, allow to easily insert, slide out or remove grids and casseroles.

 Control Panel

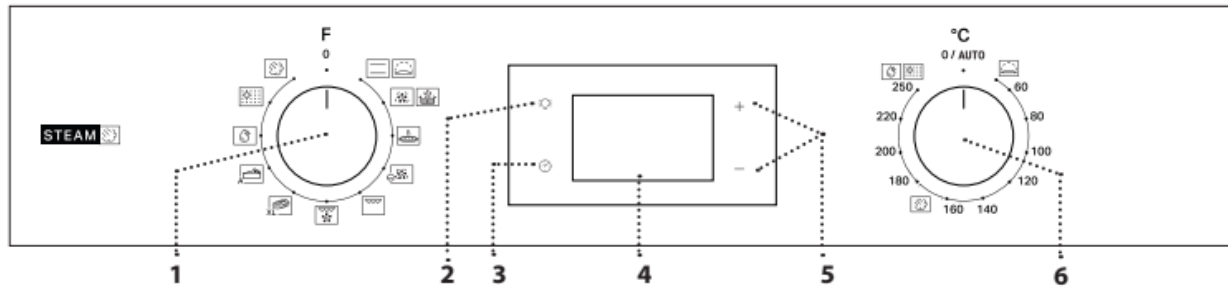

1. SELECTION KNOB

For switching the oven on by selecting a function. Turn to the **0** position to switch the oven off.

2. LIGHT

With the oven switched on, press  to turn the oven compartment lamp on or off.

3. SETTING THE TIME

For accessing the cooking time settings, delayed start and timer.

For displaying the time when the oven is off.

4. DISPLAY

5. ADJUSTMENT BUTTONS

For changing the cooking time settings.

6. THERMOSTAT KNOB

Turn to select the temperature you require when activating manual functions.

Technical Specifications

Max. Total Power	3300W
Voltage	220-240 V
Current	16A
Plug Type	No plug
Length of Electrical Cord	100cm
Packaging Dimensions	W 640mm x H 670mm x D 650mm
Gross Weight	28.2kg
Net Weight	26.9kg
Place of Manufacture	Poland

Installation Information

Product Dimensions	W 595mm x H 595mm x D 570mm
Cut Out Dimensions	As indicated in below illustration

